

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Holy Stone](#) /

› [Holy Stone HS720G Drone Instruction Manual](#)

Holy Stone HS720G

Holy Stone HS720G Drone Instruction Manual

Model: HS720G | Brand: Holy Stone

1. IMPORTANT SAFETY INFORMATION

Before operating your Holy Stone HS720G drone, please read this manual thoroughly and understand all safety precautions. Failure to follow instructions may result in injury, damage to the drone, or property damage. Always fly responsibly and adhere to local regulations.

FAA Compliance: The HS720G drone features built-in Remote ID, fulfilling FAA requirements. No additional remote ID module is needed. Ensure you are familiar with all applicable drone regulations in your operating area, including registration and pilot certification if required.

- Always maintain a safe distance from people, animals, and obstacles.
- Do not fly near airports or in restricted airspace.
- Avoid flying in strong winds, rain, or other adverse weather conditions.
- Ensure the drone's battery and remote controller are fully charged before each flight.
- Perform a pre-flight check of all components to ensure they are securely attached and functioning correctly.

2. PRODUCT OVERVIEW AND COMPONENTS

The Holy Stone HS720G is a foldable drone equipped with a 2-axis gimbal and 4K EIS camera, designed for stable aerial photography and videography. It features powerful brushless motors and intelligent flight modes.

What's in the Box:

- Holy Stone HS720G Drone
- Remote Controller (Transmitter)
- 2 x Lithium Polymer Batteries (2950 mAh each)
- Spare Propellers
- USB Charging Cables
- Screwdriver

- User Manual
- Warranty Card



Figure 2.1: Holy Stone HS720G Drone and its complete set of accessories, including the remote controller, batteries, and spare parts.

3. SETUP

3.1 Unfolding the Drone

Carefully unfold the drone arms until they lock into place. Ensure all four arms are fully extended before flight.



Figure 3.1: The Holy Stone HS720G drone in its unfolded state, ready for flight, showing its compact folded size and extended flight dimensions.

3.2 Battery Installation and Charging

Insert a fully charged battery into the drone's battery compartment until it clicks securely into place. To charge the batteries, use the provided USB charging cables and connect them to a suitable USB power source. The batteries offer up to 52 minutes of flight time with two batteries (26 minutes per battery).

52-Min Max Flight Time

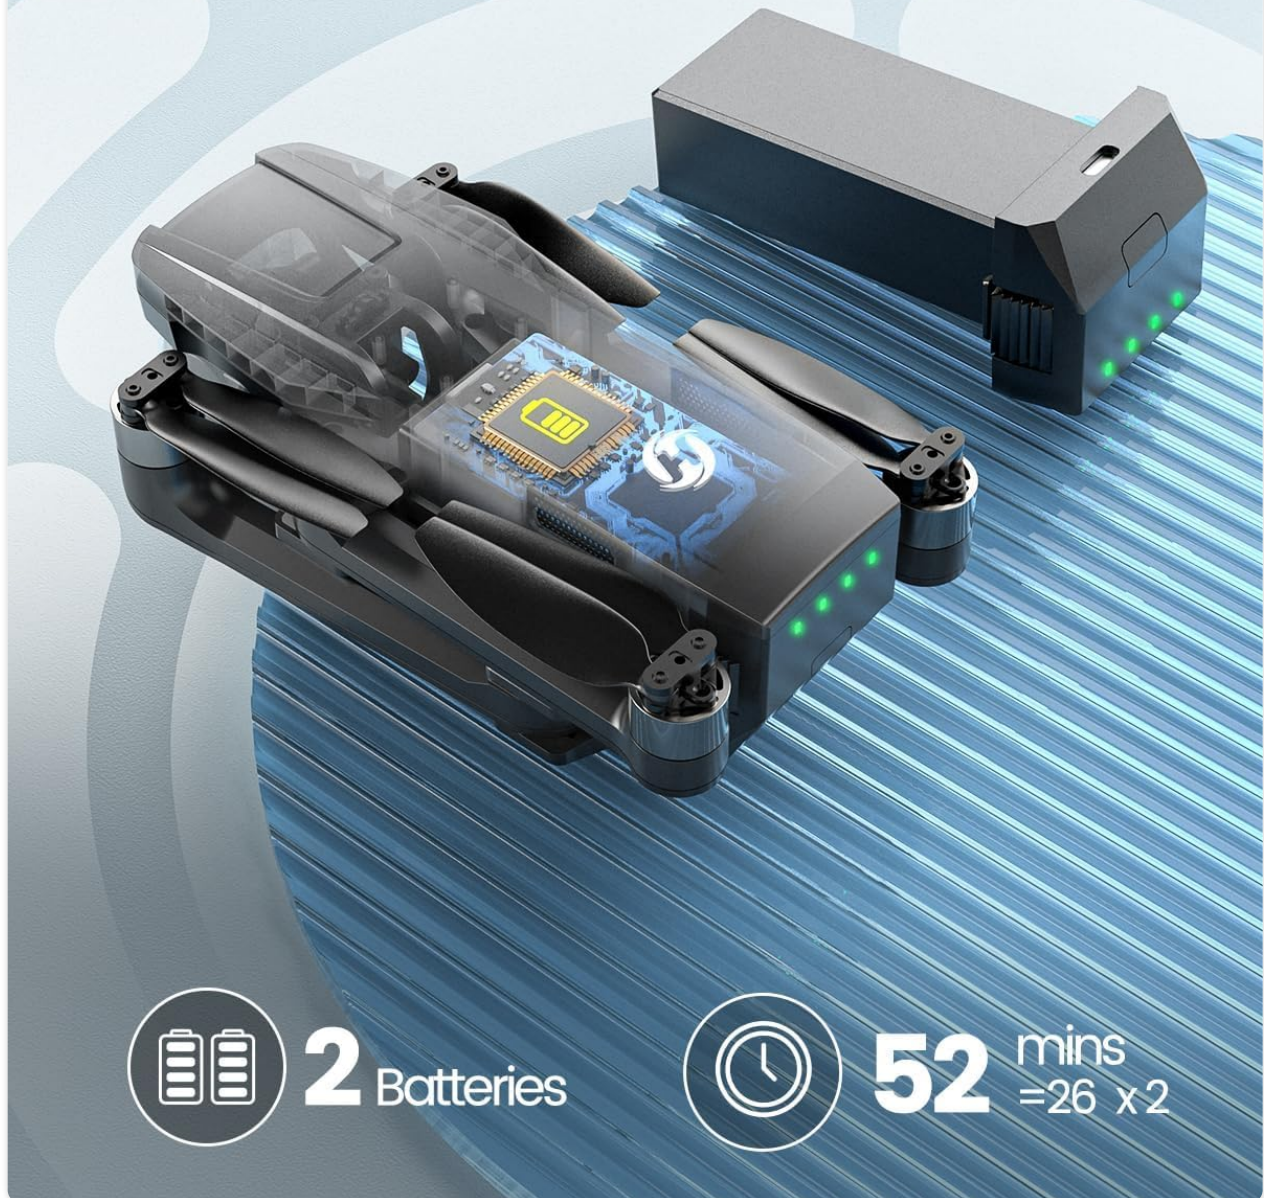


Figure 3.2: The drone's battery system, highlighting the two included batteries that provide a combined maximum flight time of 52 minutes.

3.3 Remote Controller Setup

Install 2 AA batteries (not included) into the remote controller. Extend the phone holder and antennas. The remote controller features a digital display for flight information and controls for various drone functions.

Beginner Friendly

Easy Control at Your Fingertips



Figure 3.3: The remote controller with a smartphone mounted, illustrating the user-friendly interface for beginners.

3.4 Propeller Installation (if needed)

If propellers are not pre-installed or need replacement, use the provided screwdriver to attach them according to the markings (A and B) on the propellers and motor arms. Ensure they are securely fastened.

3.5 App Download and Connection

Download the Holy Stone app from your device's app store. Power on the drone and the remote controller. Connect your smartphone to the drone's Wi-Fi network (usually named

