

[Manuals.plus](#) /

> [chikura](#) /

> Chikura GX35 9-in-1 4-Stroke Gasoline Multi-Tool Instruction Manual

chikura GX35

Chikura GX35 9-in-1 4-Stroke Gasoline Multi-Tool Instruction Manual

Model: GX35

INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation, assembly, and maintenance of your Chikura GX35 9-in-1 4-Stroke Gasoline Multi-Tool. This versatile tool is designed for various outdoor tasks, including brush cutting, grass trimming, pruning, and hedge trimming. Please read this manual thoroughly before initial use and keep it for future reference.

IMPORTANT SAFETY INFORMATION

Operating power tools can be hazardous. Always follow these safety guidelines to prevent injury and damage to the equipment:

- Always wear appropriate personal protective equipment (PPE), including safety glasses, hearing protection, gloves, and sturdy footwear.
- Keep bystanders, especially children and pets, at a safe distance (at least 50 feet/15 meters) from the operating area to avoid injury from flying debris.
- Do not operate the multi-tool on wet or slippery surfaces, or in adverse weather conditions.
- Ensure the work area is clear of obstacles, rocks, and other debris that could be thrown by the cutting attachment.
- Before performing any maintenance, cleaning, or attachment changes, always turn off the engine and ensure all moving parts have stopped.
- Never modify the tool or use non-approved attachments.
- Store the multi-tool and fuel in a secure, well-ventilated area, away from ignition sources.

PRODUCT OVERVIEW AND COMPONENTS

The Chikura GX35 is a versatile 4-stroke gasoline multi-tool system. It includes a powerful engine unit and various interchangeable attachments to perform multiple gardening and landscaping tasks.



Image 1: Overview of the Chikura GX35 9-in-1 Multi-Tool, showing the main engine unit and various attachments including brush cutter blades, string trimmer head, pole saw, and hedge trimmer.

Key Components:

- **GX35 4-Stroke Engine:** The power unit for all attachments.
- **Main Shaft:** Connects the engine to the various attachments.
- **Handlebar Assembly:** For control and comfortable operation.
- **Attachments:** Includes various cutting heads such as string trimmer, brush cutter blades (multiple types), pole saw, and hedge trimmer.

SETUP AND ASSEMBLY

The Chikura GX35 multi-tool requires some assembly before first use. Follow these steps carefully:

1. **Unpacking:** Carefully remove all components from the packaging. Verify that all parts listed in the packing list are present.
2. **Handlebar Assembly:** Attach the handlebar to the main shaft. Secure it firmly using the provided bolts and nuts. Ensure the controls are easily accessible.
3. **Engine Unit Connection:** Connect the engine unit to the main shaft. Align the shaft and secure it with the locking mechanism.
4. **Attachment Installation:**
 - Select the desired attachment (e.g., string trimmer head, brush cutter blade, pole saw, hedge trimmer).
 - Align the attachment with the end of the main shaft and slide it into place.
 - Secure the attachment using the locking pin or screws as per the specific attachment's design. Ensure it is firmly seated and does not wobble.
 - *Note:* Changing attachments requires detaching the current one by unscrewing or releasing the locking mechanism.
5. **Fueling:** The GX35 uses a 4-stroke engine. Fill the fuel tank with unleaded gasoline (minimum 87 octane). Do not mix oil with the gasoline in the fuel tank. Check the engine oil level and fill if necessary with appropriate 4-stroke engine oil. Refer to the engine manual for specific oil type and capacity.

OPERATING INSTRUCTIONS

Starting the Engine (Smart Starting Technology):

1. Place the multi-tool on a flat, stable surface.
2. Ensure the fuel tank is adequately filled and the engine oil level is correct.
3. Set the engine switch to the "ON" position.
4. If the engine is cold, engage the choke.
5. Press the primer bulb several times until fuel is visible in the return line.
6. Pull the starter cord smoothly and firmly until the engine starts. The "Smart Starting Technology" is designed for easier pulls.
7. Once the engine starts, gradually disengage the choke. Allow the engine to warm up for a few moments before operating at full throttle.

General Operation:

- Always maintain a firm grip on the handlebars with both hands.
- Keep your balance and footing secure.
- Operate the tool at a comfortable working height, avoiding overreaching.
- When using the brush cutter or string trimmer, swing the tool in a controlled arc, cutting away from your body.
- For pole saw and hedge trimmer attachments, ensure the cutting area is clear and stable. Be aware of falling branches or debris.
- Avoid contact with hard objects, fences, or walls, as this can damage the attachment and cause kickback.

Product in Action:

Your browser does not support the video tag.

Video 1: A user operating the Chikura multi-tool as a brush cutter, efficiently clearing tall grass and weeds in a garden area. This demonstrates the tool's effectiveness in clearing dense vegetation.

Your browser does not support the video tag.

Video 2: A close-up demonstration of the Chikura multi-tool's smooth operation, highlighting the efficient cutting action of an attachment. This clip illustrates the tool's performance during use.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Chikura GX35 multi-tool.

- **Engine Oil:** Regularly check and maintain the engine oil level. Change the oil according to the schedule in the engine manual.
- **Air Filter:** Clean the air filter frequently, especially when operating in dusty conditions. A clogged air filter can reduce engine performance.
- **Spark Plug:** Inspect the spark plug periodically. Clean or replace it if it is fouled or worn.
- **Attachments:**
 - Clean all attachments after each use, removing grass, dirt, and debris.
 - Inspect blades and cutting lines for wear or damage. Replace worn parts promptly.
 - Lubricate moving parts of attachments (e.g., hedge trimmer blades, pole saw chain) as recommended.
- **General Cleaning:** Keep the entire tool clean and free of debris. Wipe down the engine and shaft.
- **Storage:** When storing for extended periods, drain the fuel tank or use a fuel stabilizer. Store in a dry, secure location.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Engine does not start	No fuel, engine switch OFF, choke incorrect, fouled spark plug, clogged fuel filter.	Check fuel level, turn switch ON, adjust choke, clean/replace spark plug, clean/replace fuel filter.
Engine runs poorly/lacks power	Clogged air filter, old/stale fuel, incorrect spark plug gap, carburetor issues.	Clean air filter, use fresh fuel, check/adjust spark plug gap, consult service for carburetor.
Excessive vibration	Damaged or unbalanced attachment, loose components.	Inspect and replace damaged attachments, tighten all bolts and fasteners.
Attachments not cutting effectively	Dull blades, worn string, incorrect technique.	Sharpen or replace blades, replace string, review operating instructions.

If you encounter problems not listed here or if solutions do not resolve the issue, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	chikura
Model Number	GX35
Power Source	Fuel Powered (4-Stroke Gasoline)

Feature	Detail
Item Weight	29 Pounds (approx. 13.15 kg)
Cutting Width (String Trimmer)	5 Inches (approx. 12.7 cm)
Product Dimensions	37"L x 36"W (approx. 94 cm L x 91.4 cm W)
Assembly Required	Yes
UPC	786292927132

WARRANTY AND SUPPORT

The Chikura GX35 multi-tool comes with a **1-year warranty**. This warranty covers manufacturing defects and ensures that any problems arising from such defects will be addressed, with parts arranged without extra charge.

For warranty claims, technical assistance, or to inquire about replacement parts, please contact Chikura customer support directly. All parts are available for replacement.

Note: Always refer to your purchase documentation for specific warranty terms and contact information.

