

FLEXISPOT MAH0002301

FLEXISPOT Electric Height Adjustable Standing Desk User Manual

Model: MAH0002301

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your FLEXISPOT Electric Height Adjustable Standing Desk. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

SAFETY INSTRUCTIONS

- Ensure all components are present and undamaged before assembly.
- Keep children and pets away from the desk during operation.
- Do not overload the desk. Refer to specifications for maximum weight capacity.
- Keep hands and fingers clear of moving parts during height adjustments.
- Ensure cables are properly managed to avoid pinching or damage during movement.
- Do not sit or stand on the desk.
- Unplug the desk from the power outlet before cleaning or maintenance.

PACKAGE CONTENTS

Verify that all parts listed below are included in your package:

- Desktop (Splice Board)
- Desk Legs
- Control Panel
- Installation Instructions
- Installation Tools (Allen wrench, screwdriver)
- Side Storage Hooks
- All necessary screws and hardware

JUST ONE PACKAGE



Figure 1: Product packaging indicating all components are included in one package.

SETUP AND ASSEMBLY

Follow these steps to assemble your FLEXISPOT Standing Desk. All necessary tools are included.

1. Unpack all components and lay them out on a clean, flat surface.
2. Assemble the desk frame according to the provided diagrams. Ensure all screws are tightened securely.
3. Attach the desktop to the assembled frame.
4. Mount the control panel to the underside of the desktop in your preferred location.
5. Connect all necessary cables from the motor and control panel.
6. Attach the side storage hooks if desired.



Figure 2: Fully assembled FLEXISPOT Standing Desk ready for use.

Assembly Video Guide

Your browser does not support the video tag.

Video 1: Official FLEXISPOT installation guide for 40/48 inch standing desks. This video provides a visual walkthrough of the assembly process.

OPERATING INSTRUCTIONS

Your FLEXISPOT desk features an intuitive control panel for easy height adjustments.

MULTI-FUNCTION KEYPAD



Figure 3: Multi-function keypad for desk operation.

- **Up/Down Arrows:** Press and hold the up or down arrow to adjust the desk height continuously. Release the button to stop at the desired height.
- **LED Display:** Shows the current height of the desk in inches.

MEMORY PRESETS

The control panel allows you to save up to four preferred height settings for quick adjustments.

1. Adjust the desk to your desired height using the up/down arrows.
2. Press the "M" button (Memory) followed by one of the numbered preset buttons (1, 2, 3, or 4) to save the current height to that preset.
3. To recall a saved height, simply press the corresponding numbered preset button. The desk will automatically move to the saved position.

FEATURES

- **Ergonomic Design:** The 48" x 24" desktop provides a comfortable workspace, ideal for home offices and small spaces.

- **Adjustable Height:** Adjusts from 28.9" to 46.5" to help reduce back and neck strain.
- **Sturdy Construction:** Built with solid construction and a 154 lb weight capacity for a stable and durable workspace.
- **Whisper-Quiet Motor:** Operates at less than 50dB for smooth, quiet height adjustments.
- **High-Quality Desktop:** Features a waterproof, scratch-resistant, and smooth surface.
- **Side Storage Hooks:** Includes convenient hooks for headphones or bags.



Figure 4: Desk height adjustment range from 29" to 46.5".



Figure 5: Convenient side storage hooks for accessories.


DIMENSIONS



Desktop

Size: 48"x24"

Can hold one 27" monitor and one tablet

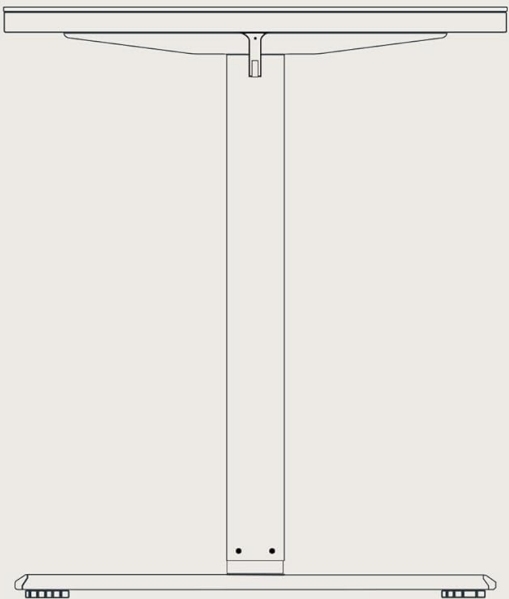

Desk Frame

ADJUSTABLE HEIGHT:
28.9"-46.5"

Can support your daily work

Figure 6: The desk operates with a whisper-quiet motor, less than 50dB.

MAINTENANCE

- Regularly check all screws and connections to ensure they are tight.
- Clean the desktop surface with a soft, damp cloth. Avoid abrasive cleaners.
- Keep the motor and electrical components free from dust and moisture.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------|---|---|
| Desk does not move. | Power cable disconnected; Motor error. | Check power connections; Unplug and replug the desk after 30 seconds. |
| Uneven height adjustment. | Drive rod misalignment. | Refer to assembly video for drive rod alignment. |

| Problem | Possible Cause | Solution |
|---------------------------|----------------------------|--|
| Desk makes unusual noise. | Loose screws; Obstruction. | Tighten all screws; Check for obstructions under the desk. |

SPECIFICATIONS

| Feature | Detail |
|-------------------------|---|
| Brand | FLEXISPOT |
| Model Number | MAH0002301 |
| Product Dimensions | 24"D x 48"W x 29"H |
| Color | Maple |
| Base Material | Alloy Steel |
| Top Material Type | Engineered Wood |
| Height Range | 28.9" - 46.5" |
| Maximum Weight Capacity | 154 Pounds |
| Noise Level | <50dB |
| Assembly Required | Yes |
| Included Components | Control Panel, Desk Legs, Installation Instructions, Installation Tools |

WARRANTY AND SUPPORT

FLEXISPOT offers a limited warranty for this product. For specific warranty details, please refer to the documentation included with your purchase or visit the official FLEXISPOT website.

If you have any questions, require assistance with assembly, or encounter any issues with your desk, please contact the FLEXISPOT support team. Contact information can typically be found on the product packaging or the official brand website.

This product is sold and fulfilled by FlexiSpot, ensuring dedicated customer support.