

[Manuals.plus](#) /

› [Nokia](#) /

› Nokia 130 Music User Manual

Nokia NOKIA 130 M TA-1576 DS IN PURPLE

Nokia 130 Music User Manual

Model: NOKIA 130 M TA-1576 DS IN PURPLE

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Nokia 130 Music mobile phone. Designed for ease of use and focused on music enjoyment, this device offers essential mobile communication features alongside robust audio capabilities.





Figure 1: Front view of the Nokia 130 Music phone. This image shows the phone's display, keypad, and overall design.

SETUP

What's in the Box

Before you begin, ensure all components are present:

- Nokia 130 Music Handset
- Charger
- Quick Start Guide
- Safety Booklet
- Battery

Inserting the SIM Card and Battery

1. Carefully remove the back cover of the phone.
2. Insert your SIM card(s) into the designated slot(s). Ensure the gold contacts face downwards.
3. Insert the battery into its compartment, aligning the contacts.
4. Replace the back cover, pressing firmly until it clicks into place.

Charging the Battery

Your phone comes with a pre-installed battery. For optimal performance, fully charge the battery before first use.

1. Connect the charger to a power outlet.
2. Connect the charger cable to the charging port on your phone. The charging port is located on the top edge of the device.
3. Once fully charged, disconnect the charger from the phone and then from the power outlet.



Figure 2: Top and bottom views of the Nokia 130 Music. This image highlights the charging port (micro-USB) and the 3.5mm audio jack.

Powering On/Off

- To power on: Press and hold the Power key until the phone vibrates and the screen lights up.
- To power off: Press and hold the Power key, then select "Power off" from the options.

Making Calls

1. From the home screen, enter the phone number using the keypad.
2. Press the Call key (green button) to initiate the call.
3. To end a call, press the End key (red button).

Sending Messages

1. Go to Menu > Messages > Create message.
2. Type your message using the keypad.
3. Enter the recipient's number or select from contacts.
4. Press Send.

Using the Music Player

The Nokia 130 Music features a dedicated music player and powerful loudspeaker for an enhanced audio experience.

- **Dedicated Music Button:** Use the dedicated music button (play/pause icon) for quick access to your music.
- **Loudspeaker:** The built-in powerful loudspeaker on the back of the phone provides clear and loud audio playback.
- **MicroSD Card Support:** Expand your storage for more music files using a MicroSD card (sold separately).





Figure 3: Back view of the Nokia 130 Music, highlighting the powerful loudspeaker.

Wireless FM Radio

Tune into your favorite local radio stations without needing a headset.

- Go to Menu > Radio.
- Select "Auto tune" to scan for available stations.
- You can listen through the built-in loudspeaker or connect a 3.5mm headset for private listening.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners or aerosols.
- **Battery Care:** Do not expose the battery to extreme temperatures. Avoid fully discharging the battery frequently to prolong its life.
- **Storage:** Store the phone in a cool, dry place when not in use for extended periods.
- **Durability:** While built to last, avoid dropping the phone or exposing it to excessive force or moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on.	Battery is discharged or not inserted correctly.	Charge the battery. Ensure the battery is correctly inserted.
Cannot make or receive calls.	No network coverage or SIM card issue.	Check network signal. Reinsert SIM card. Contact your service provider.
Music player not working.	No music files on phone/memory card or corrupted files.	Ensure music files are present and in a supported format. Check MicroSD card insertion.
FM Radio not finding stations.	Poor signal or not auto-tuned.	Move to an area with better signal. Perform "Auto tune" again.

SPECIFICATIONS

Feature	Detail
Model Number	NOKIA 130 M TA-1576 DS IN PURPLE
Operating System	Nokia Series 30+
Display	2.4 Inches
Dimensions (LxWxH)	13.1 x 5.1 x 1.4 cm
Weight	98 g
Battery Capacity	1450 mAh (Lithium Polymer)
Talk Time	Up to 1 Day
Standby Time	Up to 1 Month
RAM Memory	8 MB
Connectivity	Bluetooth, USB
Audio Jack	3.5 mm
Special Features	FM Radio, Powerful Loudspeaker, Dedicated Music Buttons
Color	Purple

WARRANTY AND SUPPORT

Warranty Information

Your Nokia 130 Music comes with a **1 Year Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your device functions as intended under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Nokia customer support. Refer to the Quick Start Guide or Safety Booklet included in your package for specific contact details for your region. You can also visit the official Nokia website for support resources and frequently asked questions.

© 2023 Nokia. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question