

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [DREAMWORKS GABBY'S DOLLHOUSE](#) /

› DREAMWORKS GABBY'S DOLLHOUSE Kids Watch and Accessories Set Instruction Manual

## DREAMWORKS GABBY'S DOLLHOUSE 4910

# DREAMWORKS GABBY'S DOLLHOUSE Kids Watch and Accessories Set

Model: 4910 - Instruction Manual

## INTRODUCTION

---

This manual provides essential information for the safe and effective use of your Gabby's Dollhouse Kids Watch and Accessories Set. This enchanting collection includes a digital watch, a lockable diary, a stamp, an ink pad, a pen, and an eraser. Please read these instructions carefully before use and retain them for future reference. Recommended for ages 36 months and up.

## PRODUCT OVERVIEW

---

The Gabby's Dollhouse Accessories Set is an official merchandise collection designed to provide an engaging experience. The set includes the following items:

- 1 x Digital Girls Watch
- 1 x Spiral Bound Kids Diary (Lockable)
- 1 x Stamp
- 1 x Ink Pad
- 1 x Pen
- 1 x Eraser



Image: The complete Gabby's Dollhouse Kids Watch and Accessories Set, including the digital watch, lockable diary, stamp, ink pad, pen, and eraser, displayed in its original packaging.

## SETUP

Your Gabby's Dollhouse Kids Watch and Accessories Set is designed for immediate use. No complex assembly is required. Simply unbox the items and ensure all components are present as listed in the Product Overview section.

- **Digital Watch:** The watch comes with a demonstrative battery installed. You may need to set the time upon first use. Refer to the 'Operating Instructions: Digital Watch' section for details.
- **Lockable Diary:** The diary includes a small lock and key. Ensure the key is kept in a safe place.
- **Stamp and Ink Pad:** The ink pad is pre-inked and ready for use.
- **Pen and Eraser:** These items are ready for immediate writing and drawing activities.

## OPERATING INSTRUCTIONS

## Digital Watch



Image: A close-up of the Gabby's Dollhouse digital watch, featuring a purple and teal design with character illustrations, worn on a child's wrist.

The digital watch displays time in hours and minutes. It features two buttons, B1 and B2, for operation.

- **Time Display:** The default display shows hours and minutes.
- **Month and Date Display:** Press button **B1** once to view the month and date.
- **Seconds Display:** Press button **B1** twice to view the seconds.

### Setting the Clock:

1. Press button **B2** twice to enter the month display setting mode.
2. Use button **B1** to adjust the month.
3. Press button **B2** again to move to the date setting.
4. Use button **B1** to adjust the date.
5. Press button **B2** again to move to the hour setting.
6. Use button **B1** to adjust the hour. Note: 'A' indicates AM, and 'P' indicates PM.
7. Press button **B2** again to move to the minutes setting.

8. Use button **B1** to adjust the minutes.

9. Press button **B2** one last time to exit the setting mode and return to the normal time display.

## Lockable Diary



Image: The Gabby's Dollhouse lockable diary, featuring a purple cover with Gabby and her cat friends, shown with its small padlock and key attached.

The spiral-bound diary is designed for personal thoughts, dreams, and secrets. It comes with a small padlock and key to ensure privacy.

- **To Lock:** Close the diary cover, align the holes on the cover and pages, and insert the padlock through the holes. Secure the lock by pressing the shackle until it clicks.
- **To Unlock:** Insert the provided key into the padlock's keyhole and turn to release the shackle.
- **Writing:** Use the included pen or any suitable writing instrument to fill the pages.

## Stamp and Ink Pad



Image: A hand holding a small Gabby's Dollhouse stamp, pressing it onto a page of the diary, with the purple ink pad visible nearby. The stamp and ink pad allow for creative decoration of the diary pages or other paper surfaces.

- **To Use:** Gently press the rubber side of the stamp onto the ink pad to pick up ink. Then, firmly press the inked stamp onto your desired surface.
- **Storage:** After use, ensure the ink pad lid is securely closed to prevent the ink from drying out.

### Pen and Eraser



Image: A hand holding the Gabby's Dollhouse themed pen, writing on a page of the spiral-bound diary, with other accessories visible in the background.

The included pen and eraser are standard writing and correction tools.

- **Pen:** Use for writing, drawing, and other creative activities.
- **Eraser:** Use to correct pencil marks.

## MAINTENANCE

### Watch Battery Replacement

The digital watch requires 1 x LR41 (AG3) / 1.5 V battery. The included battery is for demonstration purposes, and its lifetime cannot be guaranteed.

#### To Replace the Battery:

1. Carefully remove the rear housing of the watch.
2. Remove any protective parts covering the battery compartment.
3. Replace the old battery with a new LR41 (AG3) / 1.5 V battery, ensuring correct polarity.
4. Reattach the protective part and the rear housing securely.

## General Care

- **Cleaning:** Wipe all items with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the set in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** The digital watch is not waterproof. Avoid exposing it to water.

## TROUBLESHOOTING

If you encounter issues with your Gabby's Dollhouse Kids Watch and Accessories Set, please consider the following:

- **Watch Not Displaying Time:** Check if the battery needs replacement. Refer to the 'Watch Battery Replacement' section.
- **Watch Time Incorrect:** Follow the 'Setting the Clock' instructions in the 'Operating Instructions: Digital Watch' section.
- **Stamp Not Inking:** Ensure the stamp is pressed firmly onto the ink pad. If the ink pad seems dry, it may need to be replaced.
- **Diary Lock Malfunction:** Ensure the key is fully inserted and turned correctly. Do not force the lock.

## SPECIFICATIONS

Feature	Detail
Model Number	4910
Package Dimensions	9.88 x 9.65 x 2.2 inches
Item Weight	11.3 ounces
Manufacturer	Total Office
Watch Battery Type	1 x LR41 (AG3) / 1.5 V

## WARRANTY INFORMATION

No specific warranty information is provided with this product. Please refer to the retailer's return policy or contact the manufacturer for details regarding any applicable warranties.

## CUSTOMER SUPPORT

For further assistance or inquiries regarding your Gabby's Dollhouse Kids Watch and Accessories Set, please contact the retailer where the product was purchased. No direct customer support contact information is provided in the product details.

