

[Manuals.plus](#) /

› [DELURA](#) /

› DELURA 4K Ultra HD Vlogging Camera Model 1005005335861635 User Manual

DELURA 1005005335861635

DELURA 4K Ultra HD Vlogging Camera Model 1005005335861635 User Manual

INTRODUCTION

This manual provides essential information for the safe and effective operation of your DELURA 4K Ultra HD Vlogging Camera, Model 1005005335861635. Please read these instructions carefully before using the device and retain them for future reference. This camera is designed for capturing high-quality video and photos, offering features such as 4K resolution, 48MP image capture, 18X digital zoom, Wi-Fi connectivity, and live streaming capabilities.

PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- 1 x DELURA 4K Digital Camcorder
- 1 x Camera Bag
- 1 x Rechargeable Battery
- 1 x Lens Cover
- 1 x Remote Control
- 1 x HD Cable
- 1 x USB Cable
- 1 x User Manual (this document)
- 1 x Cleaning Cloth
- 1 x Microphone (if included in your specific package)
- 1 x Lens Hood (if included in your specific package)
- 1 x Handheld Stabilizer (if included in your specific package)
- 1 x Charger (if included in your specific package)

PRODUCT OVERVIEW

Familiarize yourself with the main components of your DELURA camcorder.

- **Lens:** The primary optical component for capturing images and videos.
- **3.0-inch Touch Screen:** Rotatable display for viewing, menu navigation, and playback.
- **Power Button:** Turns the camera on or off.
- **Record/Shutter Button:** Initiates/stops video recording or captures a still photo.
- **Zoom Lever:** Controls the digital zoom function.
- **Mode Dial/Button:** Switches between video, photo, and playback modes.
- **Built-in Fill Light:** Provides additional illumination in low-light conditions.
- **Microphone Input:** For connecting an external microphone (if applicable).
- **USB Port:** For charging, data transfer, and webcam functionality.
- **HD Output Port:** For connecting to a television or monitor.
- **SD Card Slot:** For inserting a memory card (up to 16GB SD card mentioned in product title, larger capacities may be supported).
- **Battery Compartment:** Houses the rechargeable battery.

SETUP

1. Charge the Battery:

Insert the included rechargeable battery into the battery compartment, ensuring correct polarity. Connect the camera to a power source using the USB cable and charger (if provided) or a compatible USB power adapter. The charging indicator will illuminate. Charge the battery fully before first use.

2. Insert SD Card:

Open the SD card slot cover. Insert a compatible SD card (Class 10 or higher recommended for 4K recording) with the metal contacts facing the correct direction until it clicks into place. Close the cover. Format the SD card via the camera's menu before initial use.

3. Attach Accessories (Optional):

If your package includes a microphone, lens hood, or handheld stabilizer, attach them according to their respective instructions. The external microphone typically connects to the microphone input port.

Microphone & Recording while Charging



Image: DELURA camcorder with an external microphone attached and connected to a power bank, illustrating the ability to record while charging. The camera screen shows a group of people in a meeting.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the Power button to turn the camera on or off. The screen will illuminate upon power-on.

Basic Video Recording

1. Turn on the camera.
2. Ensure the camera is in video recording mode (usually indicated by a video camera icon on the screen).
3. Frame your shot using the rotatable touch screen.
4. Press the Record button to start recording. A red indicator or timer will appear on the screen.
5. Press the Record button again to stop recording.

Photo Capture

1. Turn on the camera.
2. Switch to photo mode (usually indicated by a camera icon).

3. Frame your shot.

4. Press the Shutter button (often the same as the Record button, or a dedicated button) to take a photo.

Selfie



Anti-Shake



Image: The top panel depicts a woman taking a selfie, demonstrating the camera's suitability for self-portraits. The bottom panel shows a skateboarder in mid-air, highlighting the camera's anti-shake capabilities for dynamic shots.

Digital Zoom

Use the zoom lever to digitally zoom in or out on your subject during recording or photo capture. The camera supports up to 18X digital zoom.

Wi-Fi Function and App Connection

The camera features Wi-Fi connectivity for remote control and file transfer to your smartphone.

1. Download the **"XDV PRO"** app from your smartphone's app store.
2. On the camera, navigate to the Wi-Fi settings and enable Wi-Fi. The camera's Wi-Fi network name (SSID) and password will be displayed.
3. On your smartphone, go to Wi-Fi settings and connect to the camera's Wi-Fi network using the provided password.

4. Open the "XDV PRO" app. You can now control the camera remotely, view live footage, browse photos, and download files to your smartphone for sharing.

WiFi Function & Face Detection



Image: The DELURA camcorder is shown with a Wi-Fi signal icon on its screen, alongside a smartphone displaying a live feed from the camera. This illustrates the camera's Wi-Fi function and potential face detection capabilities.

Wi-Fi Connection & 2.4G Remote Control



Image: The DELURA camcorder is depicted with a smartphone showing a live view, indicating a Wi-Fi connection. A 2.4G remote control is also visible, highlighting remote operation. Text prompts to download the "XDV PRO" app for enhanced functionality.

Webcam Function (Live Streaming)

You can use your DELURA camcorder as a webcam for video calls or live streaming.

1. Connect the camera to your computer using the provided USB cable.
2. On the camera screen, select "PC Camera" or "Webcam Mode" when prompted.
3. Your computer should recognize the camera as a webcam. Select it as the video input device in your video conferencing or streaming software.

Webcam for Live Streaming



Image: The DELURA camcorder is shown connected to a laptop, with the same family scene displayed on both the camera's flip-out screen and the laptop's monitor. This illustrates the camera's capability to function as a webcam for live streaming or video calls.

Connecting to TV/PC for Playback

- **To TV:** Use the provided HD cable to connect the camera's HD output port to an HD input port on your television. Select the corresponding HD input on your TV to view photos and videos.
- **To PC (Mass Storage):** Connect the camera to your computer using the USB cable. Select "Mass Storage" mode on the camera when prompted. Your computer will recognize the camera as an external drive, allowing you to transfer files.

Using the Remote Control

The included 2.4G remote control allows you to operate the camera from a distance. Point the remote control towards the camera and use its buttons to start/stop recording, take photos, zoom, and navigate menus.

Built-in Fill Light

Activate the built-in fill light from the camera's menu or a dedicated button to provide additional illumination when shooting in dark environments.

Recording While Charging

The camera supports recording video while connected to a power source via the USB cable, ensuring extended recording times for longer events.

Maintenance

- **Cleaning:** Use the provided cleaning cloth to gently wipe the lens and screen. For stubborn smudges, use a lens cleaning solution specifically designed for optical surfaces. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the camera in its camera bag in a cool, dry place away from direct sunlight, dust, and extreme temperatures. Remove the battery if storing for extended periods.
- **Battery Care:** Avoid fully discharging the battery frequently. Recharge the battery regularly, even if the camera is not in use, to maintain its lifespan.

Troubleshooting

If you encounter issues with your camera, refer to the following common problems and solutions:

- **Camera does not power on:**
Ensure the battery is fully charged and correctly inserted. Try charging the battery for at least 30 minutes before attempting to power on again.
- **Cannot record video or take photos:**
Check if an SD card is inserted and properly formatted. Ensure there is sufficient space on the SD card. The camera might be in playback mode; switch to video or photo mode.
- **Poor image/video quality:**
Ensure the lens is clean and free from smudges. Check the resolution settings in the camera menu. Ensure adequate lighting for your shooting environment. The anti-shake feature helps stabilize footage, but extreme movement can still affect quality.
- **Wi-Fi connection issues:**
Ensure Wi-Fi is enabled on the camera and your smartphone. Verify you have downloaded the correct app ("XDV PRO"). Double-check the Wi-Fi password. Move closer to the camera to ensure a strong signal.
- **Remote control not working:**
Ensure the remote control's battery is functional. Point the remote directly at the camera's IR receiver (if applicable) or ensure it's within range for 2.4G communication.

Specifications

Feature	Specification
Brand	DELURA
Model	1005005335861635
Video Resolution	Up to 4K (30fps MOV)
Image Resolution	Up to 48MP
Digital Zoom	18X

Display	3.0-inch Touch Screen (270-degree rotation)
Connectivity	Wi-Fi, USB, HD Output
Webcam Function	Supported
Fill Light	Built-in
Remote Control	2.4G Wireless Remote
Storage Media	SD Card (up to 16GB mentioned, larger capacities may be supported)
Weight	50 Grams
Dimensions	3 x 2 x 1 cm (packaging dimensions)

WARRANTY INFORMATION

Your DELURA 4K Ultra HD Vlogging Camera is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your package or contact your retailer for specific terms and conditions regarding warranty coverage, duration, and claims procedures. This warranty typically covers manufacturing defects and material faults under normal use.

CUSTOMER SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact the retailer where you purchased the product. You may also visit the official DELURA website for additional resources or contact information, if available.

