

[Manuals.plus](#) /

> [Chefman](#) /

> Chefman 6-Quart Slow Cooker User Manual

Chefman RJ15-6-LL-V2

Chefman 6-Quart Slow Cooker User Manual

Model: RJ15-6-LL-V2

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and care of your Chefman 6-Quart Slow Cooker. Please read all instructions thoroughly before first use and retain this manual for future reference. The Chefman 6-Quart Locking Lid Slow Cooker is designed for convenient cooking and serving. Its large 6-quart capacity is suitable for preparing meals for 6 or more people. Key features include a locking lid with a leak-proof seal for portability, three temperature settings (Low, High, Warm), and a dishwasher-safe removable ceramic insert for easy cleaning.



Image: Front view of the Chefman 6-Quart Slow Cooker, showcasing its stainless steel exterior, glass lid, and control knob. The cooker is filled with a stew.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a longer detachable power-supply cord or extension cord is used:
 - a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

COMPONENTS AND FEATURES

Familiarize yourself with the various parts of your Chefman Slow Cooker:


- **Stainless Steel Housing:** The main exterior unit containing the heating element.
- **Removable Ceramic Crock:** The inner pot where food is cooked. This is dishwasher safe.
- **Glass Lid:** Transparent lid for monitoring cooking progress, equipped with a locking mechanism.
- **Lid Latches:** Securely fasten the lid for transport.
- **Cool-Touch Carry Handles:** Integrated handles for safe and easy portability.
- **Control Knob:** Used to select temperature settings (Off, Low, High, Warm).



Made to Last

Durable construction and details will make this your must-have for simple, crowd-pleasing meals

Image: An exploded view of the Chefman Slow Cooker, illustrating its three main components: the glass lid, the removable ceramic crock, and the stainless steel base unit.

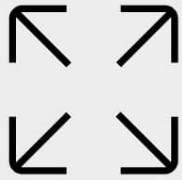

6-Quart
Capacity



Dishwasher-
Safe Insert



Locking
Lid



6-Quart Locking Lid Slow Cooker

Image: Visual representation of key features including 6-Quart Capacity, Dishwasher-Safe Insert, and Locking Lid, highlighting the convenience and design of the slow cooker.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials, labels, and tags from the slow cooker.
2. **Clean:** Before first use, wash the removable ceramic crock and glass lid in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the stainless steel housing with a damp cloth. Do not immerse the heating unit in water.
3. **Placement:** Place the slow cooker on a dry, level, heat-resistant surface, away from walls or cabinets to allow for proper ventilation.
4. **Insert Crock:** Place the clean ceramic crock into the stainless steel housing.
5. **Power Connection:** Ensure the control knob is in the "OFF" position before plugging the appliance into a 120V AC electrical outlet.

OPERATING INSTRUCTIONS

The Chefman Slow Cooker offers three temperature settings for versatile cooking:

- **LOW:** Ideal for slow cooking and tenderizing meats and vegetables over an extended period.
- **HIGH:** For faster cooking, suitable for dishes that require less cooking time or to bring food to temperature quickly before reducing to LOW.
- **WARM:** Maintains food at a safe serving temperature after cooking is complete. Do not use the WARM setting for cooking.



3 Heating Options

Choose from low, high, and warm temperature settings for versatile use

Image: A detailed view of the slow cooker's manual control knob, clearly showing the "Off," "Low," "High," and "Warm" temperature settings.



COOK



HEAT



SIMMER



SERVE

Cook and Serve

Cook or heat and then serve your meal—all in one pot

Image: A collage illustrating the versatility of the slow cooker, demonstrating its ability to "Cook," "Heat," "Simmer," and "Serve" various dishes.

General Cooking Steps:

1. Prepare your ingredients and place them into the ceramic crock.
2. Place the glass lid securely on the crock.
3. Select the desired temperature setting (LOW or HIGH) using the control knob.
4. Cook for the recommended time according to your recipe.
5. Once cooking is complete, you may switch the setting to WARM to keep food at serving temperature.
6. To turn off the appliance, turn the control knob to "OFF" and unplug from the wall outlet.

Transporting the Slow Cooker:

The Chefman Slow Cooker features a locking lid and large carry handles for easy transport.

1. Ensure the lid is properly seated on the ceramic crock.

2. Engage the lid latches on both sides of the slow cooker to secure the lid.
3. Use the cool-touch carry handles to lift and transport the appliance.



Transport Friendly

Locking lid and leak-proof seal make it easy to move around the kitchen or take in the car for a party

Image: A close-up view of the slow cooker's locking lid mechanism and the robust carry handle, demonstrating its secure and portable design.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity of your Chefman Slow Cooker.

1. **Unplug and Cool:** Always unplug the slow cooker from the power outlet and allow it to cool completely before cleaning.
2. **Ceramic Crock and Glass Lid:** The removable ceramic crock and glass lid are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water. Avoid abrasive cleaners or scouring pads that may scratch the surfaces.
3. **Stainless Steel Housing:** Wipe the exterior of the heating unit with a soft, damp cloth. Do not immerse the heating

unit in water or any other liquid.

4. **Storage:** Store the slow cooker with the lid inverted on the ceramic crock to prevent odors and allow air circulation.



Simple Cleanup

No scrubbing needed—simply place the removable insert in the dishwasher and you're done

Image: A dishwasher rack filled with clean dishes, illustrating the ease of cleaning the slow cooker's removable ceramic insert in a dishwasher.

TROUBLESHOOTING

If you encounter any issues with your slow cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Slow cooker not turning on.	Not plugged in; power outlet not working; control knob not set.	Ensure the unit is securely plugged into a working 120V outlet. Turn the control knob to LOW, HIGH, or WARM.

Problem	Possible Cause	Solution
Food not cooking properly.	Incorrect temperature setting; lid not sealed; insufficient cooking time.	Verify the correct temperature setting for your recipe. Ensure the lid is properly seated. Allow adequate cooking time. Avoid lifting the lid frequently.
Lid not locking securely.	Lid not aligned; latches not engaged correctly.	Ensure the lid is centered on the ceramic crock before engaging the latches. Press down firmly on the latches until they click into place.
Exterior of unit is hot.	Normal operation.	It is normal for the exterior to become hot during use. Always use the cool-touch handles for moving the unit.

If the problem persists after trying these solutions, please contact Chefman Customer Support.

SPECIFICATIONS

Detailed technical specifications for the Chefman 6-Quart Slow Cooker:

Feature	Detail
Brand	Chefman
Model Number	RJ15-6-LL-V2
Capacity	6 Quarts
Color	Stainless Steel, Black
Material	Stainless Steel, Stoneware
Product Dimensions (DxWxH)	9.75"D x 15.2"W x 10.5"H
Wattage	270 watts
Voltage	120V
Item Weight	10.54 Pounds
Control Method	Touch (Knob)
Number of Settings	3 (Low, High, Warm)
Dishwasher Safe Parts	Ceramic Crock, Glass Lid
UPC	816458023863



Stylishly Designed

Looks great in every kitchen

Image: The Chefman Slow Cooker with its key dimensions (depth, width, height) clearly indicated, providing a visual reference for its size.

WARRANTY AND SUPPORT

This Chefman Slow Cooker is backed by a **1-Year Assurance** provided by Chefman.

For product support, troubleshooting, or warranty claims, please visit the official Chefman website or contact their customer service department. Refer to the contact information provided with your purchase or on the manufacturer's website.

Additional resources, including a PDF user guide, may be available online. You can often find these by searching for your model number (RJ15-6-LL-V2) on the Chefman support page.

Note: The cETL approval signifies that the product meets applicable North American safety standards.

© 2023 Chefman. All rights reserved.

For more information, visit www.chefman.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CBL6Z8G3>

More documents and user manuals: <https://manuals.plus/>