

Monster Monster Sparkle

Monster Sparkle Bluetooth Speaker Instruction Manual

Model: Monster Sparkle | Brand: Monster

INTRODUCTION

Thank you for choosing the Monster Sparkle Bluetooth Speaker. This powerful 80W speaker is designed to deliver an immersive audio experience with stunning bass and vibrant full-panel LED lighting effects. Its portable and waterproof design makes it ideal for both indoor and outdoor use, offering up to 24 hours of playtime. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your speaker to ensure optimal performance and longevity.





The Monster Sparkle Bluetooth Speaker, showcasing its vibrant full-panel LED lighting.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1 x Monster Sparkle Party Speaker
- 1 x USB-C Charging Cable
- 1 x AUX-in Audio Cable
- 1 x User Manual (this document)

PRODUCT FEATURES

- **Pure Monster Sound & Stunning Bass:** Equipped with a 2-inch tweeter and 5.25-inch subwoofer, delivering 80W of powerful, high-performance audio with deep bass.
- **6 Full Panel Lighting Effects & Portable Design:** Features dynamic LED lighting that creates a captivating visual experience. The ergonomic handle allows for easy portability.
- **24H Playtime & 160W Wireless Stereo Pairing:** Built-in large-capacity battery provides up to 24 hours of playtime. Connect two Monster Sparkle speakers wirelessly for a true stereo effect and 160W total sound output.
- **Multiple Playback Options & Emergency Power Bank:** Supports 6.35mm instrument input (e.g., microphone), 3.5mm AUX-in, TF card, and USB flash drive playback. Can also function as a power bank to charge your devices

via its USB port.

- **Bluetooth 5.3 & IPX5 Waterproof:** Advanced Bluetooth 5.3 ensures stable, long-distance connections with most Bluetooth devices. IPX5 waterproof rating protects against water splashes, sprays, and rain, making it suitable for outdoor use.



Experience Pure Monster Sound with advanced sound engineering.

BASS BOOST TECHNOLOGY

Peak Power up to 80W



Internal components including the tweeter and subwoofer for powerful bass.

SETUP GUIDE

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's USB-C port and the other end to a compatible USB power adapter (not included). The charging indicator will show the charging status. A full charge takes approximately 2 hours.



Rear panel showing the USB-C charging port and other inputs.

2. Power On/Off

Press and hold the **Power button** on the top panel for 2-3 seconds to turn the speaker ON or OFF.

3. Bluetooth Pairing

1. Turn on the Monster Sparkle speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing LED light.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "Monster Sparkle" in your device's Bluetooth list and select it to connect.
4. Once connected, the LED light will become solid, and you will hear an audible confirmation.

WIRELESS BLUETOOTH 5.3

Stable Connection & Longer Distance Transmission



Easy Bluetooth 5.3 connectivity for stable audio streaming.

4. True Wireless Stereo (TWS) Pairing

To achieve a 160W stereo sound experience, you can pair two Monster Sparkle speakers together:

1. Ensure both Monster Sparkle speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press the **TWS button** (often indicated by a chain link icon). The speaker will enter TWS pairing mode.
3. The two speakers will automatically search for and connect to each other. Once connected, you will hear a confirmation tone, and the TWS indicator light will be solid on both speakers.
4. Now, connect your device to the primary speaker via Bluetooth as described in step 3. Audio will play through both speakers in stereo.

TRUE WIRELESS STEREO PAIRING

Pair 2 Speakers to Get 160W Powerful Stereo



Enhance your audio with True Wireless Stereo pairing for a wider soundstage.

OPERATING INSTRUCTIONS

1. Control Panel Overview

The main controls are located on the top panel of the speaker:

MULTI-FUNCTION PANEL

Easy to Customize Your Party



The multi-function control panel for easy operation.



Detailed view of each control button and its function.

Power Button: Press and hold to turn ON/OFF.

Play/Pause Button: Press to play or pause audio.

Previous Track Button: Press to go to the previous track.

Next Track Button: Press to go to the next track.

Volume - Button: Press to decrease volume.

Volume + Button: Press to increase volume.

Bass Boost Button: Press to activate/deactivate bass boost.

Light Button: Press to cycle through different LED lighting effects or turn them off.

TWS Button: Press to initiate True Wireless Stereo pairing.

2. Audio Input Options

In addition to Bluetooth, the speaker supports several other audio sources:

- **AUX-in:** Connect external devices like TVs or laptops using the provided 3.5mm AUX audio cable to the AUX-in port.
- **TF Card:** Insert a TF (microSD) card into the designated slot to play audio files directly from the card.
- **USB Playback:** Insert a USB flash drive into the USB port to play audio files.
- **MIC IN / GUITAR IN:** Connect a microphone or guitar to the 6.35mm input for karaoke or live performances.



Rear panel showing various input options for versatile audio playback.

3. LED Lighting Effects

The Monster Sparkle speaker features 6 full-panel LED lighting effects. Press the **Light button** to cycle through the different modes or to turn the lights off. These lights synchronize with the music, enhancing your listening experience.

6 FULL SCREEN LED EFFECTS

Light up the Night



Explore 6 full-screen LED effects to light up your party.

4. Power Bank Function

The large-capacity battery of the Monster Sparkle speaker can also serve as an emergency power bank. Connect your smartphone or other USB-powered devices to the speaker's USB port to charge them.

24 HOURS PLAYTIME

24+ Hours Playtime on 50% Volume off Lights



Enjoy up to 24 hours of playtime and use the speaker as a power bank.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The speaker is IPX5 waterproof, meaning it can resist water splashes and light rain. Do not submerge the speaker in water or expose it to strong jets of water. Ensure all port covers are securely closed when near water.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.

IPX5 WATERPROOF

Rain, Humidity, Moisture Proof



The IPX5 waterproof rating makes the speaker suitable for outdoor environments.

TROUBLESHOOTING

If you encounter any issues with your Monster Sparkle speaker, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Speaker does not turn on.	Battery is low. Charge the speaker fully. / Power button not held long enough. Press and hold for 2-3 seconds.
Cannot pair via Bluetooth.	Speaker is not in pairing mode. Ensure LED is flashing. / Device Bluetooth is off. Turn on Bluetooth on your device. / Speaker is already connected to another device. Disconnect from previous device. / Too far from speaker. Keep device within 10 meters (33 feet).

Problem	Possible Cause / Solution
No sound or low volume.	Volume on speaker or device is too low. Increase volume. / Incorrect input mode selected. Check AUX, TF, USB connections. / Speaker is muted. Unmute if applicable.
TWS pairing fails.	Speakers are too far apart. Place them closer. / One or both speakers are connected to another Bluetooth device. Disconnect them first. / Press the TWS button on only one speaker to initiate pairing.
Lights are not working.	Lights are turned off. Press the Light button to cycle through modes.
Speaker randomly shuts off.	Battery is low. Charge the speaker. / Automatic power-off feature (if idle for too long).

SPECIFICATIONS

Feature	Detail
Model Name	Monster Sparkle
Speaker Type	Outdoor Party Speaker
Output Power	80W (Single Speaker), 160W (TWS Paired)
Subwoofer Diameter	5.25 Inches
Tweeter Diameter	2 Inches
Bluetooth Version	5.3
Bluetooth Range	Up to 40 meters (131 feet)
Battery Life	Up to 24 Hours (at 50% volume, lights off)
Charging Time	Approx. 2 Hours
Water Resistance	IPX5 (Splashproof)
Product Dimensions	8"D x 9"W x 15"H
Item Weight	7.45 Pounds
Power Source	Battery Powered
Connectivity	Bluetooth, AUX-in, TF Card, USB, Microphone/Guitar Input

WARRANTY AND SUPPORT

The Monster Sparkle Bluetooth Speaker comes with a **Limited Warranty**. For detailed warranty terms and conditions,

please refer to the warranty card included with your purchase or visit the official Monster website.

If you require technical support, have questions about your product, or need to claim warranty service, please contact Monster Customer Service through their official channels. Keep your purchase receipt as proof of purchase.

For more information, visit: www.monsterproducts.com

© 2024 Monster. All rights reserved. Monster and the Monster logo are trademarks or registered trademarks of Monster, Inc.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question