

Tokluck TO-P5307

Tokluck PS5 DualSense & Edge Controller Charging Station User Manual

Model: TO-P5307 | Brand: Tokluck

INTRODUCTION

Thank you for choosing the Tokluck PS5 DualSense & Edge Controller Charging Station. This device is designed to provide a fast, safe, and convenient charging solution for your PlayStation 5 DualSense and DualSense Edge controllers. With its intelligent chip protection, LED indicators, and ambient lighting, it enhances your gaming setup while ensuring your controllers are always ready for action.

WHAT'S IN THE Box

- 1 x Tokluck PS5 Controller Charging Station
- 1 x USB-C Charging Cable (34.8 inches / 1 meter)

PRODUCT FEATURES

- Fast & Smart Charging:** Fully charges two PS5 controllers in approximately 2 hours. Features a built-in smart protection chip against overcurrent, overvoltage, overheating, and short-circuits.
- Wide Compatibility:** Specifically designed for PS5 DualSense and DualSense Edge controllers.
- LED Indicators:** Clear red light indicates charging, and blue light indicates a full charge or standby.
- On/Off Switch:** A convenient power button to control the entire charging station.
- Blue Ambient Light:** Stylish blue ambient lighting with touch control for activation (short press) and on/off (long press).
- Effortless Drop-in Charging:** Innovative design allows for easy placement of controllers without precise alignment.
- Anti-slip Design:** Equipped with anti-slip pads to ensure stable placement.

SETUP INSTRUCTIONS

- Connect the Power Cable:** Insert the USB-C end of the included charging cable into the charging station's USB-C port. Connect the USB-A end to a compatible power source such as your PS5 console (front or back USB port), a mobile power bank, an AC adapter (not included), or a computer.



Image: The charging station connected via USB-C cable to various power sources, including the front and back USB ports of a PS5 console.

2. **Turn On the Charging Station:** Locate the On/Off switch on the charging station and slide it to the "ON" position. The blue ambient light should illuminate.

Easy to Charge



Image: Detailed view of the charging station's components, including the On/Off switch and USB-C input.

OPERATING INSTRUCTIONS

- 1. Charging Controllers:** Gently place your PS5 DualSense or DualSense Edge controllers onto the charging slots. The innovative design allows for easy drop-in charging without needing to precisely align the USB-C port.



Image: Two PS5 controllers docked on the charging station, illustrating the drop-in charging mechanism.

2. **Monitoring Charging Status:** The LED indicators on the front of the charging station will show the charging status for each controller. A red light indicates that the controller is currently charging. A blue light indicates that the controller is fully charged or the station is in standby mode.

Fast & Safe Charging in 2 Hrs



Compatible with PS5 DualSense & Edge Controller



Image: Visual representation of the LED indicator states (red for charging, blue for full/standby) and the built-in safety protections.

3. **Controlling Ambient Light:** The charging station features a blue ambient light. Short press the touch control button to turn the light on. Long press the touch control button to turn the light on or off.



Image: A close-up showing the touch control button for the ambient light feature.

MAINTENANCE

- Keep the charging station clean and free from dust. Use a soft, dry cloth for cleaning.
- Avoid exposing the device to extreme temperatures, humidity, or direct sunlight.
- Do not disassemble or attempt to repair the charging station yourself. This will void the warranty.
- Ensure the charging contacts on both the station and your controllers are clean to maintain optimal charging performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Controllers not charging.	<ul style="list-style-type: none">Charging station is not powered on.Cable is not properly connected.Controller not properly seated on the dock.Power source issue.	<ul style="list-style-type: none">Ensure the On/Off switch is in the "ON" position.Check all cable connections.Re-seat the controller firmly on the charging contacts.Try a different USB port or power adapter.
LED indicator not working.	<ul style="list-style-type: none">Charging station is off.Light control issue.	<ul style="list-style-type: none">Ensure the On/Off switch is in the "ON" position.Short press or long press the touch control button for the ambient light.
Slow charging.	<ul style="list-style-type: none">Insufficient power from the source.Using a non-standard cable.	<ul style="list-style-type: none">Use a power source with sufficient output (e.g., PS5 console USB port or a 5V/2A AC adapter).Use the original USB-C cable provided.

SPECIFICATIONS

Feature	Detail
Brand	Tokluck
Model Number	TO-P5307
Color	Black+White
Connectivity Technology	USB
Connector Type	USB Type C

Feature	Detail
Compatible Devices	PS5 DualSense, PS5 DualSense Edge Controllers
Cable Length	1 Meter (34.8 inches)
Input Voltage	120 Volts (AC) - <i>Note: AC adapter not included</i>
Special Features	Magnetic (for secure controller placement), LED Indicators, On/Off Switch, Ambient Light, Anti-slip Materials
Total USB Ports	1 (for power input)

WARRANTY AND SUPPORT

This Tokluck product comes with a manufacturer's warranty of 2 years. For warranty claims, technical support, or any inquiries regarding your charging station, please contact Tokluck customer service through the retailer where you purchased the product or visit the official Tokluck website for support information.

Please retain your proof of purchase for warranty purposes.

© 2024 Tokluck. All rights reserved.