

**N2QAGB000002, N2QAGB000010, N2QAGB000004, SA-AK44, SC-AK12, SC-AK44, SA-AK33, SA-AK22, SA-AK12, SC-AK33, SC-AK22, SC-AK1**

## Generic Replacement Remote Control Instruction Manual

Compatible with Panasonic CD Stereo Systems: N2QAGB000002, N2QAGB000010, SA-AK44, SC-AK12, N2QAGB000004, SC-AK44, SA-AK33, SA-AK22, SA-AK12, SC-AK33, SC-AK22, SC-AK12, SC-AK22K, SC-AK42

### 1. SETUP AND BATTERY INSTALLATION

This replacement remote control requires two (2) AA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Rear view of the remote control with the battery compartment open, illustrating the correct placement for two AA batteries.

After battery installation, the remote control is ready for use with your compatible Panasonic CD Stereo System.

## 2. BASIC OPERATION

This remote control is designed to replicate the functions of the original remote for compatible Panasonic CD Stereo Systems. Point the remote control directly at the infrared receiver on your stereo system.



Figure 2: Front view of the replacement remote control, displaying its button layout.

### Key Functions:

- **Power Button:** Typically located at the top, used to turn the stereo system on or off.
- **Disc/CD Controls:** Buttons labeled 'DISC', 'CD', 'PLAY MODE', 'REPEAT', 'PROGRAM' control CD playback functions.
- **Volume Controls:** '+ VOL' and '- VOL' buttons adjust the audio output level.
- **Tuner/Band:** Used to switch between radio bands (AM/FM) and tune radio stations.
- **AUX:** Selects the auxiliary input source.
- **Numeric Keypad (0-9):** Used for direct track selection on CDs or radio station input.
- **Navigation/Cursor:** Buttons like 'CURSOR', 'ENTER' are used for menu navigation if supported by the stereo system.

*Note:* The functionality of certain buttons may vary depending on the specific Panasonic stereo system model. This replacement remote may not offer all functions present on the original remote control, or some functions may behave differently.

### 3. CARE AND MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control periodically with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the remote. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AA). Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the remote control or subjecting it to strong impacts, as this can damage internal components.

### 4. TROUBLESHOOTING

If you experience issues with your remote control, consider the following troubleshooting steps:

- **Remote Not Responding:**
  - Check the batteries. Ensure they are inserted correctly with the correct polarity (+/-).
  - Replace the batteries with fresh ones.
  - Ensure there is a clear line of sight between the remote control and the infrared receiver on your stereo system. Obstructions can block the signal.
  - Verify that the stereo system is powered on.
- **Limited Functionality:**
  - This is a replacement remote. As stated in the product description, it may not work exactly as the original remote and some functions might not be supported or may behave differently.
  - Ensure your stereo system model is listed as compatible. If your model number is not included in the compatibility list, the remote may not function correctly or at all.
- **Intermittent Operation:**
  - Weak batteries can cause intermittent operation. Replace them.
  - Ensure the remote's infrared emitter (at the front tip) is clean and unobstructed.

If problems persist after following these steps, the remote control may not be fully compatible with your specific stereo system model or may have a defect.

### 5. PRODUCT SPECIFICATIONS

<b>Brand</b>	Generic
<b>Manufacturer</b>	Easytry

<b>Model Compatibility</b>	Panasonic N2QAGB000002, N2QAGB000010, SA-AK44, SC-AK12, N2QAGB000004, SC-AK44, SA-AK33, SA-AK22, SA-AK12, SC-AK33, SC-AK22, SC-AK12, SC-AK22K, SC-AK42 CD Stereo Systems
<b>Connectivity Technology</b>	Infrared (IR)
<b>Controller Type</b>	Button Control
<b>Batteries Required</b>	2 x AA batteries (not included)
<b>Country of Origin</b>	China
<b>ASIN</b>	B0CBMCP5S

## 6. WARRANTY INFORMATION

Specific warranty details for this Generic replacement remote control are not provided in the product information. Please refer to the seller's return policy or contact the seller directly for any warranty-related inquiries.

## 7. CUSTOMER SUPPORT

For further assistance or questions regarding this product, please contact the seller directly through the platform where the purchase was made. Product support is provided by the seller, Easytry123.