

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ANTSKU](#) /

› [ANTSKU 10'x30' Party Tent Instruction Manual](#)

ANTSKU 10'x30' Party Tent

ANTSKU 10'x30' Party Tent Instruction Manual

Model: 10'x30' Party Tent | Brand: ANTSKU

1. INTRODUCTION

This manual provides essential information for the safe and effective assembly, operation, and maintenance of your ANTSKU 10'x30' Party Tent. Please read these instructions thoroughly before setting up and using the tent to ensure proper functionality and longevity of the product. This tent is designed for temporary outdoor use and is ideal for events such as parties, graduations, weddings, and birthdays, offering a spacious shaded area.



Figure 1.1: The ANTSKU 10'x30' Party Tent, showcasing its large size and white canopy suitable for outdoor events.

2. SAFETY INFORMATION AND WARNINGS

Your safety is paramount. Adhere to the following warnings and precautions to prevent injury or damage to the tent:

- **Weather Conditions:** This tent is suitable for temporary use in good weather conditions. **DO NOT** use the tent during heavy rain, strong winds, thunderstorms, or any other severe weather. Such conditions can cause the tent to collapse, leading to property damage or personal injury.
- **Anchoring:** Always ensure all connections are tight and secure. Use the provided ropes and ground pegs to firmly anchor the tent to the ground before and during use. Insufficient anchoring can lead to the tent being lifted or damaged by wind.
- **Assembly:** It is recommended to assemble the tent with at least one other person. Follow all assembly steps carefully.
- **Fire Safety:** Keep all sources of ignition and heat away from the tent fabric. The fabric is not fireproof.

- **Structural Integrity:** Do not hang heavy objects from the tent frame. Regularly inspect the frame and fabric for any signs of wear or damage.



Figure 2.1: Important caution regarding adverse weather conditions and the necessity of securing the tent with ropes and ground pegs.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Tent Frame (Iron Tubes)
- PE Cloth Top Canopy
- 8 Removable Sidewalls (including 2 with zipper doors)
- Ropes
- Ground Pegs/Nails

- User's Manual (this document)



Figure 3.1: Key components and features of the tent, including fabric, frame connections, and anchoring points.

4. SETUP AND ASSEMBLY

Assembly is designed to be straightforward with numbered parts. No additional tools are required. For best results, assemble with a friend.

1. **Step 1: Assemble the Top Frame.** Lay out all frame components. Connect the iron tubes according to the numbered instructions, forming the rectangular top frame of the tent. Ensure all connections are secure. The spiral interface between tubes enhances overall frame stability.
2. **Step 2: Cover with Top Tarp Material.** Carefully drape the PE cloth top canopy over the assembled top frame. Ensure it is centered and aligned correctly.
3. **Step 3: Erect the Frame and Attach Side Panels.** With assistance, lift the assembled top frame and attach

the leg poles. Once the main structure is standing, attach the 8 removable sidewalls. Two of the sidewalls feature zippers for easy entry and exit.

- Step 4: Secure the Tent.** Once fully assembled, use the provided ropes and ground pegs to firmly anchor the tent to the ground at all designated points. This is crucial for stability, especially in light winds.



Figure 4.1: Visual representation of the three main assembly steps for the party tent.

5. OPERATION

The ANTSKU Party Tent is designed for versatility and ease of use:

- **Removable Sidewalls:** The tent includes 8 sidewalls, two of which have zipper doors. These sidewalls can be easily removed or attached to adapt to different weather conditions, privacy needs, or ventilation requirements. Removing sidewalls can improve air circulation, while attaching them provides shade and privacy.
- **Zipper Doors:** Utilize the two zippered sidewalls for convenient entry and exit. Ensure zippers are fully closed when not in use to maintain internal conditions.

- **UV Protection:** The canopy material offers UV protection, providing a shaded area from direct sunlight.
- **Water Resistance:** The PE cloth top is water-resistant, offering protection from light rain. However, as noted in safety, it is not designed for heavy rain.

REMOVABLE SIDEWALLS



Bright

Sidewalls with clear windows provides maximum light and unobstructed viewing



Well-Ventilated

All sidewalls are removable boosts air circulation to keep you cool.



Figure 5.1: The tent with and without sidewalls, demonstrating the flexibility of the removable panels for ventilation and viewing.

6. MAINTENANCE

Proper maintenance will extend the life of your party tent:

- **Cleaning:** Clean the PE cloth and frame with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the material. Rinse thoroughly and allow all components to dry completely before storage.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the fabric is completely dry to prevent mold and mildew.

- **Inspection:** Before each use, inspect the frame for any bends, cracks, or rust. Check the fabric for tears, holes, or signs of wear. Address any issues promptly to maintain structural integrity.
- **Rust Prevention:** The iron tubes are powder-coated for rust and corrosion resistance. However, prolonged exposure to moisture can still lead to rust. Keep the frame dry and clean.

7. TROUBLESHOOTING

Here are some common issues and their solutions:

- **Tent Instability:**
 - Ensure all frame connections are fully engaged and tightened.
 - Verify that all ropes are securely tied and ground pegs are firmly driven into the ground.
 - Check weather conditions; if windy, disassemble the tent immediately.
- **Water Accumulation on Roof:**
 - Ensure the canopy is taut and properly stretched over the frame to prevent sagging.
 - This tent is water-resistant, not fully waterproof for heavy downpours. Disassemble if heavy rain is expected.
- **Difficulty Assembling Frame:**
 - Refer to the numbered parts and assembly diagram.
 - Ensure you have enough space and assistance for assembly.
 - Do not force connections; check for proper alignment.

8. SPECIFICATIONS

| Feature | Detail |
|------------------------|---|
| Brand | ANTSKU |
| Material | Iron Tube & PE Cloth |
| Color | White |
| Recommended Uses | Outdoor Activities, Party, Household, Wedding, Parking Shed |
| UV Protection | 100% UV Protection |
| Frame Material | Alloy Steel, Iron |
| Water Resistance Level | Waterproof (Note: Designed for light rain, not heavy downpours) |
| Tube Dimensions | Φ31 / 24 / 18 / 0.55 / 0.45 / 0.45mm |
| Top Cloth Material | 90G/M2 PE |

| Feature | Detail |
|--------------------------------|---|
| Overall Dimensions (L x W x H) | 30 x 10 x 8.5 feet (900 x 300 x 260 cm) |
| Weight | 49.6 lb / 22.5 kg |
| Door Quantity | 2 (Zippered) |
| Tent Structure | Single Tent |
| UPC | 789537197338 |

9. WARRANTY AND SUPPORT

ANTSKU stands behind the quality of its products. Your 10'x30' Party Tent comes with a **12-month warranty** from the date of purchase. Additionally, we offer a **30-day return or replacement policy**.

If you have any questions, require assistance with assembly, or encounter any issues with your product, please do not hesitate to contact ANTSKU customer support. We are committed to providing a pleasant shopping experience and protecting your rights and interests.

For support, please visit the [ANTSKU Store on Amazon](#) or refer to your purchase documentation for direct contact information.