

## BoxWave FineTouch Capacitive Stylus

# BoxWave FineTouch Capacitive Stylus User Manual

Model: FineTouch Capacitive Stylus

## INTRODUCTION

---

The BoxWave FineTouch Capacitive Stylus is designed to provide a precise and natural writing, drawing, and tapping experience on all capacitive touchscreen devices. Its innovative clear disc tip allows for enhanced visibility, ensuring accuracy in your interactions. This manual provides essential information for the proper use and care of your stylus.



Image: The BoxWave FineTouch Capacitive Stylus shown alongside a Wiseasy P5 EMV POS device, illustrating its compatibility and intended use with various capacitive touchscreens.

## PRODUCT FEATURES

---

- **Versatile and Universal Compatibility:** Works seamlessly with all capacitive touchscreen devices, including smartphones, tablets, and POS systems.
- **Innovative Clear Disc Tip:** Features a transparent disc that allows you to see exactly where your mark is being made, providing superior precision for writing, drawing, and navigation.
- **Easy to Use:** Requires no Bluetooth pairing, batteries, or complex setup. Simply touch the tip to your screen to begin

use.

- **Integrated Metal Clip:** A convenient built-in clip allows for easy attachment to pockets, notebooks, or device cases, ensuring portability.
- **Compact and Lightweight Design:** Designed in a comfortable pen form factor, making it easy to carry and use for extended periods.
- **Threaded Cap for Protection:** Includes a threaded cap that securely covers the clear disc tip when not in use, protecting it from damage and debris.



Image: A detailed view of the stylus tip, highlighting the clear disc that enables precise interaction with touchscreens.



Image: The stylus with its protective threaded cap detached, showing how the cap secures the clear disc tip.

## SETUP

---

The BoxWave FineTouch Capacitive Stylus requires no complex setup. It is a passive stylus, meaning it does not need batteries, charging, or Bluetooth pairing. Simply uncap the stylus and it is ready for immediate use with any capacitive touchscreen device.

1. Remove the threaded cap from the stylus tip.
2. The stylus is now ready to interact with your touchscreen.
3. When not in use, replace the threaded cap to protect the clear disc tip.

## OPERATING INSTRUCTIONS

---

Using the FineTouch Capacitive Stylus is intuitive and similar to using your finger, but with enhanced precision.



- **Tapping:** Gently tap the clear disc tip on the screen to select items, open applications, or activate functions.
- **Swiping:** Drag the stylus across the screen to scroll, navigate through pages, or perform swipe gestures.
- **Writing and Drawing:** Apply light pressure and move the stylus as you would a pen on paper for precise writing, sketching, or detailed drawing. The clear disc allows you to see your exact point of contact.

*Note: This stylus does not support palm rejection or pressure sensitivity. Ensure your hand is not resting on the screen if you wish to avoid unintended inputs, and note that line thickness will not vary with pressure.*



Image: A user demonstrating the stylus in action on a tablet, highlighting its ease of use for various tasks.

## MAINTENANCE AND CARE

- **Cleaning:** To clean the stylus body, wipe with a soft, dry cloth. For the clear disc tip, gently wipe with a microfiber cloth to remove smudges or dust. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Always replace the threaded cap when the stylus is not in use to protect the clear disc tip from damage, dust, and debris. Store the stylus in a clean, dry place, away from extreme temperatures.

- **Handling:** While durable, avoid dropping the stylus or applying excessive force to the tip, as this could damage the clear disc.

## TROUBLESHOOTING

The FineTouch Capacitive Stylus is a passive device and typically requires no troubleshooting. If you experience issues, consider the following:

- **Stylus not responding:**
  - Ensure the clear disc tip is clean and free of debris.
  - Verify that your device's screen is clean.
  - Confirm your device has a capacitive touchscreen. This stylus is not compatible with resistive screens.
  - If the clear disc tip appears damaged or detached, the stylus may need replacement.
- **Inaccurate input:**
  - Ensure the clear disc tip is making full contact with the screen.
  - Clean the screen and the stylus tip.
  - Adjust your grip to ensure the stylus is held comfortably and stably.

## SPECIFICATIONS

Attribute	Detail
Model Name	FineTouch Capacitive Stylus
Brand	BoxWave
Item Weight	1 ounces
ASIN	B0CBML5W49
Compatibility	All capacitive touchscreen devices
Special Features	Clear Disc Tip, Integrated Metal Clip, Threaded Cap

## WARRANTY AND SUPPORT

BoxWave products are designed for quality and reliability. For any questions, concerns, or support needs regarding your FineTouch Capacitive Stylus, please contact BoxWave customer service. Refer to the product packaging or the official BoxWave website for the most current contact information and warranty details.

*Please note: This product includes limited 3rd party tech support for your device (up to 3 inquiries via messaging) - not affiliated with or endorsed by Wiseasy.*