

Flooyes Unicorn Sit and Spin Toy

Flooyes Unicorn Sit and Spin Toy Instruction Manual

Model: Unicorn Sit and Spin Toy

INTRODUCTION

Thank you for choosing the Flooyes Unicorn Sit and Spin Toy. This manual provides essential information for the safe assembly, operation, and maintenance of your new toy. Please read it thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: Adult supervision is required at all times. This toy is intended for toddlers aged 18 months to 5 years, with a maximum weight capacity of 55 lbs (25 kg).

- Ensure all parts are securely assembled before allowing a child to use the toy.
- Do not use the toy on elevated surfaces or near stairs, pools, or other hazards.
- Inspect the toy regularly for any damage or loose parts. Discontinue use if any damage is found.
- Keep small parts and batteries out of reach of children.
- Only use the recommended battery type (3 x AA batteries, not included).

WHAT'S IN THE BOX

Your Flooyes Unicorn Sit and Spin Toy package includes:

- 1 x Sit and Spin Toy (main base and central post)
- 1 x Unicorn dome assembly
- Small screwdriver and screws for assembly

SETUP AND ASSEMBLY

Follow these steps to assemble your Unicorn Sit and Spin Toy:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all listed items are present.
2. **Assemble the Central Post:** The central post consists of two purple pieces. Align the grooves and snap them

together to form the upright support.

3. **Attach Central Post to Base:** Insert the assembled central post into the designated hole in the center of the pink base. Secure it from underneath the base using the provided screws and screwdriver.
4. **Install Batteries:** Locate the battery compartment on the underside of the top handle section. Unscrew the cover, insert 3 AA batteries (not included) according to the polarity markings, and replace the cover, securing it with the screw.
5. **Attach Unicorn Dome:** Place the transparent dome over the unicorn figure on the top handle section. Ensure it clicks securely into place.



Figure 1: The one-piece design of the toy base ensures safety and prevents pinching.

Your browser does not support the video tag.

Video 1: This video demonstrates how to install the transparent dome onto the unicorn figure.

Your browser does not support the video tag.

Video 2: This video provides a review and shows the assembly process of the Unicorn Sit and Spin Toy.

OPERATING INSTRUCTIONS

The Flooyes Unicorn Sit and Spin Toy offers engaging features for toddlers:

1. **Sitting Position:** Instruct the child to sit on the pink base with their feet flat on the floor or crossed, holding onto the central handle.
2. **Spinning Action:** Encourage the child to push and pull the central handle to initiate a 360-degree spinning motion. This action helps develop balance and coordination.
3. **Music and LED Lights:** The toy features three different modes, controlled by buttons on the top handle section:
 - **Mode 1:** No lights or music (for quiet play).
 - **Mode 2:** Lights only (two colors flashing).
 - **Mode 3:** Lights and music (soft flashing lights with cheerful music).



Figure 2: The toy features three distinct modes for varied play experiences.



Figure 3: The LED lights and music enhance sensory development and imaginative play.

Your browser does not support the video tag.

Video 3: This video demonstrates the Unicorn Sit and Spin toy in action, showcasing its spinning motion and features.

Your browser does not support the video tag.

Video 4: This video shows a child enjoying the Sit and Play Unicorn Spinner, highlighting its interactive features.

MAINTENANCE AND CARE

To ensure the longevity and safe operation of your toy:

- **Cleaning:** Wipe the toy with a damp cloth and mild soap. Do not immerse in water.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.
- **Battery Replacement:** Replace batteries when the lights dim or music distorts. Always use fresh, high-quality AA batteries.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toy does not spin smoothly.	Debris under the base or worn mechanism.	Check for and remove any obstructions. Ensure the toy is on a flat, smooth surface.
Lights or music not working.	Dead or incorrectly installed batteries.	Replace with fresh AA batteries, ensuring correct polarity. Check the mode selection.
Transparent dome detaches easily.	Dome not fully secured or tabs worn.	Ensure the dome is pressed firmly until it clicks into place. If it continues to detach, contact customer support.
Music function is intermittent or broken.	Loose wiring or internal component issue.	This may indicate an internal defect. Contact customer support for assistance.

Your browser does not support the video tag.

Video 5: This video illustrates a common issue where the music function may be broken or intermittent.

SPECIFICATIONS

- **Product Dimensions:** 17.9 x 17.9 x 3.66 inches
- **Item Weight:** 5.09 pounds
- **Manufacturer Recommended Age:** 18 months - 5 years
- **Maximum Weight Capacity:** 55 lbs (25 kg)
- **Power Source:** 3 x AA batteries (not included)
- **Features:** 360° spin, LED lights (2 colors), 3 music modes

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Flooyes website. Keep your purchase receipt as proof of purchase.