

VEGA VHTH-36

VEGA SmartOne S3 Beard Trimmer User Manual

Model: VHTH-36

INTRODUCTION

This user manual provides comprehensive instructions for the safe and effective operation, maintenance, and troubleshooting of your VEGA SmartOne S3 Beard Trimmer. Please read this manual thoroughly before first use and retain it for future reference.



Image: The VEGA SmartOne S3 Beard Trimmer in green, shown with its two transparent comb attachments. The trimmer features a power button with a blue ring and indicator lights for battery and travel lock.

PRODUCT OVERVIEW

The VEGA SmartOne S3 Beard Trimmer is designed for precise beard grooming and styling. It incorporates AI SmartTrim Technology for smart memory function and offers multiple speed settings for a customized experience. Its robust design includes a skin-friendly titanium blade and IPX7 waterproofing for easy cleaning.

Key Components

- **Trimmer Body:** Ergonomic design with rubberized grip for comfortable handling.
- **Titanium Blade:** Skin-friendly and durable for efficient trimming.
- **Power Button:** Controls power and speed modes.
- **Indicator Lights:** Display battery status and travel lock activation.
- **Comb Attachments (2):** For adjusting trimming length.

- **Charging Cable:** USB cable for convenient charging.
- **Cleaning Brush:** For removing hair debris from the blade.
- **Lubricating Oil:** For maintaining blade performance.



Image: Illustration showing the contents included in the product box: two comb attachments, a small bottle of lubricating oil, a cleaning brush, and a USB charging cable.

FEATURES

- **AI SmartTrim Technology with Smart Memory Function:** The trimmer remembers your last used speed setting for convenience.

Powered by AI **SmartTrim Technology**

Remembers your
Last Speed Style with
Smart Memory Function

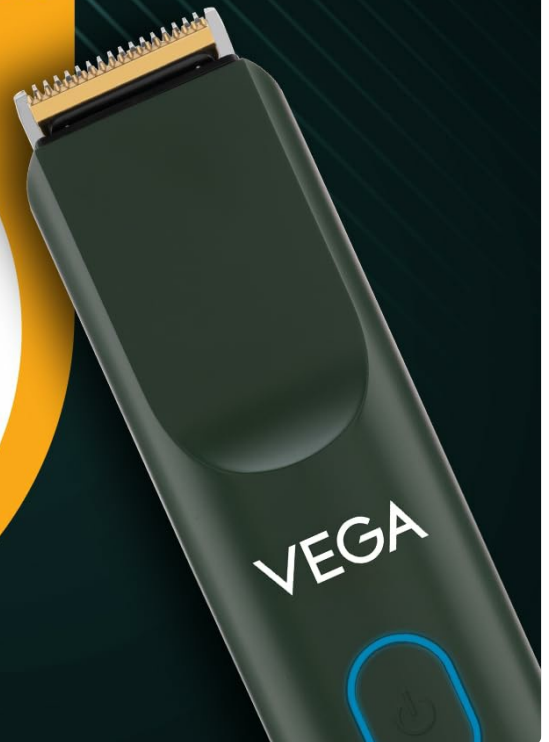


Image: A graphic illustrating the AI SmartTrim Technology, highlighting its ability to remember the last used speed setting, with text "Set. Style. Remember." and a stylized trimmer icon.

- **3 Unique Speed Modes (Eco, Pro, Max):** Customize your trimming experience with different power levels.

3 *Unique Speed Modes*

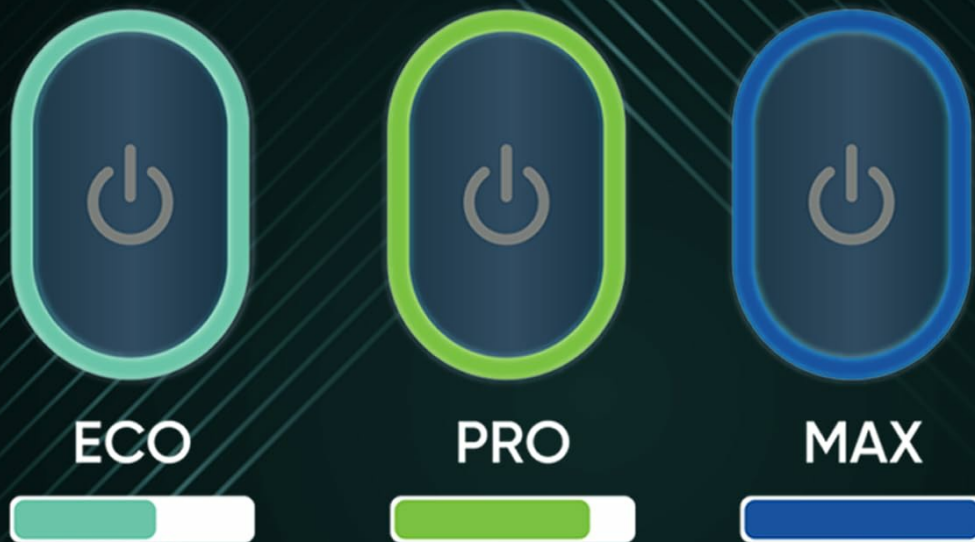


Image: Visual representation of the three distinct speed modes: Eco (indicated by light blue), Pro (indicated by green), and Max (indicated by dark blue), each with a power button icon.

- **40 Length Settings (0.5mm - 20mm):** Achieve precise beard styles with a wide range of length options using the two comb attachments.



Image: A graphic highlighting the 40 length settings available, ranging from 0.5mm to 20mm, for precise trimming.

- **5 Minutes Quick Charge:** Provides 10 minutes of runtime after a rapid 5-minute charge, ideal for quick touch-ups.

5 *Minutes
Quick Charge*



10 *Minutes
Runtime*

Image: A visual demonstrating the quick charge capability, indicating 5 minutes of charging provides 10 minutes of runtime.

- **160 Minutes Runtime & 90 Minutes Charging Time:** Long-lasting battery for extended use.

160 Minutes Runtime



90 Minutes Charging Time

Image: A clock-face graphic illustrating the impressive 160 minutes of runtime and the efficient 90 minutes of charging time for the trimmer.

- **IPX7 Waterproof:** Allows for safe use around water and easy cleaning under running water.



PX7 Waterproof



Image: The trimmer partially submerged in water with splashes, visually representing its IPX7 waterproof rating.

- **Travel Lock:** Prevents accidental activation during travel.



Image: A graphic depicting a lock icon with an arrow pointing to the trimmer, indicating the travel lock feature.

SETUP

1. **Initial Charge:** Before first use, fully charge the trimmer for approximately 90 minutes. Connect the USB charging cable to the trimmer and a compatible USB power adapter (not included). The indicator light will show charging

status.



Image: A green battery icon with a lightning bolt, symbolizing the charging process.

2. **Attach Comb Attachment:** Select the desired comb attachment based on your preferred trimming length. Align the comb with the trimmer head and push it firmly until it clicks into place.
3. **Adjust Length Setting:** The trimmer offers 40 length settings. Adjust the integrated length wheel or slide on the comb attachment to your desired length (0.5mm to 20mm).

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press and hold the power button for a few seconds to turn the trimmer on or off.
2. **Select Speed Mode:** Briefly press the power button to cycle through the three speed modes: Eco (Light Blue), Pro (Green), and Max (Dark Blue). The Smart Memory Function will remember your last selected speed mode when you turn the trimmer off and on again after 5 seconds.



Image: Individual icons representing the Eco, Pro, and Max speed settings, each with a distinct color indicator.

3. **Trimming:**
 - Ensure your beard is clean and dry.
 - Hold the trimmer with the blade flat against your skin.
 - Move the trimmer slowly against the direction of hair growth for an even trim.
 - For detailing or shaping, remove the comb attachment and use the bare blade carefully.
4. **Travel Lock Activation:** To activate the travel lock, press and hold the power button for approximately 3 seconds until the lock icon illuminates. To deactivate, repeat the process.

MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and extend the lifespan of your trimmer.

1. **Cleaning the Blades:** After each use, remove the comb attachment. Use the provided cleaning brush to brush away any loose hairs from the blade and trimmer head. Since the trimmer is IPX7 waterproof, you can rinse the

blade head under running water. Ensure the trimmer is turned off before rinsing.



Image: An icon indicating the product's waterproof capability, suitable for rinsing.

- 2. **Lubricating the Blades:** Periodically, apply a small drop of the provided lubricating oil to the blades. Turn on the trimmer for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and smooth operation.
- 3. **Storage:** Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Ensure it is clean and dry before storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted. Travel lock is activated.	Charge the trimmer. Deactivate the travel lock by pressing and holding the power button for 3 seconds.
Poor trimming performance.	Blades are clogged with hair. Blades need lubrication.	Clean the blades thoroughly. Apply lubricating oil to the blades.
Trimmer makes unusual noise.	Blades are dry or obstructed.	Clean and lubricate the blades. Ensure no foreign objects are lodged in the blade mechanism.
Trimmer does not charge.	Charging cable or adapter faulty. Connection is loose.	Check the charging cable and adapter. Ensure the cable is securely connected to both the trimmer and the power source.

SPECIFICATIONS

Feature	Detail
Model Number	VHTH-36
Blade Material	Titanium
Length Settings	40 (0.5mm to 20mm)
Runtime	Up to 160 minutes
Charging Time	90 minutes (Full Charge)
Quick Charge	5 minutes charge for 10 minutes runtime
Waterproof Rating	IPX7

Feature	Detail
Power Source	Battery Powered
Item Weight	148 g
Dimensions (LxWxH)	15.6 x 3.6 x 3.4 cm
Country of Origin	India

WARRANTY AND SUPPORT

Your VEGA SmartOne S3 Beard Trimmer comes with a **1 Year Warranty** from the date of purchase, covering manufacturing defects.



Image: A shield icon with "1 YEAR WARRANTY" text, signifying the product's warranty period.

Customer Support

For any product-related queries, service requests, or warranty claims, please contact the manufacturer:

Manufacturer: RISE APPLIANCES PVT LTD
Address: LOT NO. 31, SECTOR-155, 3RD FLR, NOIDA-201310, U.P. (INDIA)
Contact Number: 91-080-69496949

Please retain your purchase receipt as proof of purchase for warranty purposes.

© 2025 VEGA. All rights reserved.

Documents - VEGA – VHTH-36



[\[pdf\]](#) User Manual
VHTH 36 UM cdr Khursheed Alam User Manual Vega SmartOne S3 Beard Trimmer Men 160 mins
Runtime IPX7 Waterproof 40 Length Settings Green Health Personal Care C1IOA5a 89L m media
amazon images I |||
...
lang: score:18 filesize: 4.06 M page_count: 1 document date: 2023-04-20

