

BerlingerHaus BH/9380

Berlinger Haus BH/9380 Mini Chopper Instruction Manual

Model: BH/9380

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Berlinger Haus BH/9380 Mini Chopper. Keep this manual for future reference.

- Always unplug the appliance from the power supply before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- The blades are very sharp. Handle with extreme care during assembly, disassembly, and cleaning.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Avoid contact with moving parts.
- Do not use outdoors. This appliance is for household use only.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.

2. PRODUCT OVERVIEW

The Berlinger Haus BH/9380 Mini Chopper is designed for quick and efficient chopping of various ingredients.



Image: All components of the Berlinger Haus BH/9380 Mini Chopper laid out, including the motor unit, chopping bowl, lid, and double blade assembly.

Components:

- **Motor Unit:** The top part containing the motor and control mechanism.
- **Chopping Bowl:** A transparent container with a 0.6-liter capacity for ingredients.
- **Double Blade Assembly:** Sharp blades for efficient chopping. Handle with care.
- **Lid:** Covers the chopping bowl, also suitable for storage.

3. SETUP

Follow these steps to prepare your mini chopper for use:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the chopping bowl, lid, and blade assembly in warm soapy water. Rinse thoroughly and dry. The motor unit should only be wiped with a damp cloth.
3. **Assemble:**
 - Place the chopping bowl onto a stable, flat surface.
 - Carefully place the double blade assembly onto the central pin inside the chopping bowl. Ensure it sits securely.
4. **Add Ingredients:** Place your desired ingredients into the chopping bowl. Do not overfill. For best results, cut larger ingredients into smaller pieces before chopping.
5. **Attach Motor Unit:** Place the motor unit onto the chopping bowl, aligning it properly. The motor unit should sit firmly on top of the bowl.



Image: A person holds the chopping bowl containing chopped onions, with the motor unit and blade assembly visible on the table, illustrating the preparation stage.

4. OPERATING INSTRUCTIONS

Once assembled, your mini chopper is ready for use:

- 1. Connect Power:** Plug the power cord into a suitable electrical outlet (220-240V, 50Hz).
- 2. Chop:** Press down on the top of the motor unit to activate the blades. Use short, pulsing motions for coarse chopping, or hold down for a few seconds for finer results.
- 3. Monitor:** Observe the consistency of the ingredients through the transparent bowl. Release pressure on the motor unit to stop the blades.
- 4. Do Not Overload:** To prevent motor damage, do not operate continuously for more than 30 seconds. Allow the appliance to rest for at least 2 minutes between cycles.
- 5. Unplug:** After chopping, unplug the appliance from the power outlet before disassembling.
- 6. Remove Ingredients:** Carefully remove the motor unit, then the blade assembly. Empty the chopped ingredients from the bowl.



Image: A person's hand is shown pressing down on the motor unit of the assembled mini chopper, demonstrating the operation of the appliance.



Image: The Berlinger Haus BH/9380 Mini Chopper is shown fully assembled with finely chopped onions visible inside the transparent bowl, ready for use or storage.

5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your mini chopper.

- 1. Unplug:** Always ensure the appliance is unplugged from the power outlet before cleaning.

2. **Disassemble:** Carefully remove the motor unit, then the blade assembly from the chopping bowl.
3. **Wash Components:** The chopping bowl, lid, and blade assembly are dishwasher safe. Alternatively, wash them by hand in warm soapy water. Rinse thoroughly.
4. **Clean Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
5. **Dry and Store:** Ensure all parts are completely dry before reassembling or storing. The lid can be used to cover the bowl for storage of chopped ingredients in the refrigerator.



Image: A person places the chopping bowl, sealed with its lid, into a refrigerator, demonstrating the 2-in-1 storage feature of the appliance.

6. TROUBLESHOOTING

If you encounter issues with your mini chopper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; improper assembly; power outage.	Check power cord connection; ensure motor unit is correctly seated on the bowl; check household power supply.
Ingredients not chopping effectively.	Overfilled bowl; ingredients too large; blade not properly installed.	Reduce quantity of ingredients; cut ingredients into smaller pieces; ensure blade assembly is correctly placed on the central pin.
Motor unit feels hot or smells burnt.	Overuse; overloading.	Unplug immediately and let the appliance cool down for at least 30 minutes. Reduce load and operating time. If problem persists, discontinue use.

7. SPECIFICATIONS

Technical details for the Berlinger Haus BH/9380 Mini Chopper:

- **Model Number:** BH/9380
- **Power:** 300 W
- **Voltage:** 220-240 V
- **Frequency:** 50 Hz
- **Capacity:** 0.6 Liters
- **Material:** Plastic
- **Dimensions:** 13 x 13 x 25 cm
- **Item Weight:** 5.2 kg
- **Care Instructions:** Dishwasher safe (bowl, lid, blade assembly)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.