

[Manuals.plus](#) /

› [WENPZERAY](#) /

› WENPZERAY D-216 Portable AM/FM/SW Vintage Radio & Bluetooth Speaker Instruction Manual

WENPZERAY D-216

WENPZERAY D-216 Portable AM/FM/SW Vintage Radio & Bluetooth Speaker Instruction Manual

Model: D-216 | Brand: WENPZERAY

1. PRODUCT OVERVIEW

The WENPZERAY D-216 is a versatile portable radio and Bluetooth speaker designed for both indoor and outdoor use. It combines vintage aesthetics with modern functionality, offering multiple audio playback options and power supply modes.

Portable Good Multifunction Radio Speaker!



Image: Front view of the WENPZERAY D-216 radio, highlighting its compact dimensions (L: 6.3in, H: 2.16in, W: 4.33in) and various features including Wireless BT, USB Disk Jack, TF Card Jack, Earphone Jack, Great Sound Quality, Easy to Carry, Large Button, Big Clear Dial, Good Reception, AC Power, and Battery Power.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- WENPZERAY D-216 Portable Radio
- AC Power Cord
- Rechargeable Battery (pre-installed)
- Owner's Manual (this document)

3. SETUP

3.1 Powering the Device

The D-216 radio offers four power supply options:

1. **AC Power Cord:** Connect the included AC power cord to the radio and a wall outlet.
2. **USB Type-C Charging Cable:** Use a compatible USB Type-C cable (not included) to charge the internal rechargeable battery or power the device.
3. **D Batteries:** Insert two D-size batteries (not included) into the battery compartment.
4. **Rechargeable Battery:** The radio comes with a pre-installed rechargeable battery. Ensure it is charged before first use.

Video: Demonstrates connecting the AC power supply cable to power the WENPZERAY D-216 radio.

Video: Shows the WENPZERAY D-216 radio being powered by a USB-C charging cable.

3.2 Antenna Adjustment

For optimal radio reception, extend the telescopic antenna fully. Adjust its direction for the clearest signal.

4. OPERATING INSTRUCTIONS

4.1 Turning On/Off and Volume Control

Rotate the **Volume** knob clockwise to turn the radio on and increase the volume. Rotate counter-clockwise to decrease volume and turn off the device.

4.2 Radio Mode (AM/FM/SW)

Use the **Band/Function** switch to select AM, FM, or SW (Shortwave) radio bands. Rotate the **Tuning** knob to scan for stations. The large dial display will indicate the selected frequency.

4.3 Bluetooth Speaker Mode

Switch the **Band/Function** to BT (Bluetooth) mode. The radio will enter pairing mode. On your mobile device, search for 'D-216' in the Bluetooth settings and connect. Once paired, you can stream audio wirelessly.

4.4 MP3 Playback (USB/TF Card)

Insert a USB drive or TF (Micro SD) card containing MP3 audio files into the respective slot. The radio will automatically detect and begin playing the files. Use the playback control buttons (Prev, Next, Play/Pause) located on the top panel.

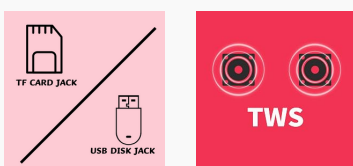


Image: Icons representing the TF Card Jack and USB Disk Jack for MP3 playback.

4.5 True Wireless Stereo (TWS) Function

If you have two D-216 devices, you can wirelessly connect them via Bluetooth to create a stereo sound experience. Refer to the detailed TWS pairing instructions in the full manual for specific steps.



Image: Two WENPZERAY D-216 radios shown side-by-side, illustrating the True Wireless Stereo (TWS) feature for enhanced audio.

4.6 Headphone Jack

Connect 3.5mm headphones to the headphone jack for private listening.

5. MAINTENANCE

- **Cleaning:** Wipe the radio with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Care:** For the rechargeable battery, avoid fully discharging it frequently to prolong its lifespan. If using D batteries, remove them if the radio will not be used for an extended period to prevent leakage.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

- **No Power:** Ensure the AC cord is securely plugged in, the rechargeable battery is charged, or fresh D batteries are installed correctly.
- **Poor Radio Reception:** Extend and adjust the telescopic antenna. Try moving the radio to a different location, especially near a window.
- **Bluetooth Not Connecting:** Make sure the radio is in Bluetooth pairing mode and within range of your device. Forget the device on your phone and try pairing again.
- **No Sound from USB/TF Card:** Verify that the USB drive or TF card is inserted correctly and contains compatible MP3 files. Check the volume level.

7. SPECIFICATIONS

Feature	Description
Model Number	D-216
Product Dimensions	8.6 x 2.8 x 6.3 inches
Item Weight	1.64 pounds
Power Source	Battery Powered (Rechargeable & D-cell), AC Power
Batteries	1 Lithium Ion battery (included)
Tuner Technology	AM/FM/SW (3-Band)

Feature	Description
Connectivity Technology	Bluetooth, USB
Special Features	Built-In AM Antenna, Portable, Rechargeable, True Wireless Stereo (TWS)
Included Components	AC Power Cord, Owner's Manual, Rechargeable Battery

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official WENPZERAY website. Keep your purchase receipt for warranty claims.

© 2026 WENPZERAY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question