

- Manuals.plus /
- > [COOK WITH COLOR](#) /
 - > COOK WITH COLOR 6 Cup Rice Cooker 300W Instruction Manual

COOK WITH COLOR 6 Cup Rice Cooker 300W

COOK WITH COLOR 6 Cup Rice Cooker 300W Instruction Manual

Model: 6 Cup Rice Cooker 300W | Brand: COOK WITH COLOR

INTRODUCTION

The COOK WITH COLOR 6 Cup Rice Cooker is designed for effortless preparation of perfectly cooked rice. This appliance features a powerful 300W motor and a 0.6L capacity, capable of cooking up to 3 cups of raw rice to yield 6 cups of fluffy, cooked rice. Its intuitive design includes a convenient Cook and Keep Warm function, ensuring your rice remains at an optimal serving temperature. Beyond rice, this versatile cooker can also be used for other grains and steaming vegetables. The non-stick inner pot simplifies cleaning, and essential accessories like a measuring cup and rice paddle are included for ease of use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your COOK WITH COLOR Rice Cooker:



- Main Unit:** The primary housing containing the heating element and control panel.
- Removable Non-Stick Inner Pot:** The cooking vessel where rice is prepared. Its non-stick coating ensures easy serving and cleaning.
- Tempered Glass Lid:** Allows for clear viewing of the cooking process and helps retain heat and moisture.
- Measuring Cup:** Specifically designed for accurate rice measurement for this cooker.
- Rice Spatula:** A non-stick friendly utensil for stirring and serving cooked rice.



This image displays all the individual components included with your rice cooker, highlighting their distinct forms and functions for easy identification and assembly.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the inner pot, glass lid, measuring cup, and rice spatula with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
4. **Insert Inner Pot:** Place the cleaned inner pot securely into the main unit.

OPERATING INSTRUCTIONS

This rice cooker is designed for simple, one-touch operation for perfect rice every time.

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of raw rice. For best results, rinse the rice under cold water until the water runs clear.
2. **Add Water:** Add water to the inner pot according to the rice-to-water ratio. A common ratio for white rice is 1:1 (one measuring cup of rice to one measuring cup of water). Adjust water levels based on desired rice consistency and type of rice.
3. **Place Lid:** Securely place the tempered glass lid on the inner pot.
4. **Connect Power:** Plug the power cord into a standard electrical outlet.
5. **Start Cooking:** Press the "COOK" switch down. The "COOK" indicator light will illuminate.
6. **Automatic Keep Warm:** Once the rice is cooked, the "COOK" switch will automatically flip up, and the "WARM" indicator light will illuminate. The cooker will then switch to "Keep Warm" mode, maintaining the rice at an optimal serving temperature until unplugged.
7. **Serve:** Use the provided rice spatula to fluff and serve the rice.



Serving freshly cooked rice from the non-stick inner pot.

CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and performance of your rice cooker.

- Unplug:** Always unplug the rice cooker from the power outlet and allow it to cool completely before cleaning.
- Wash Inner Pot and Accessories:** Remove the inner pot, glass lid, measuring cup, and rice spatula. Wash them with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating. Rinse thoroughly and dry completely.
- Clean Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit or power cord in water or any other liquid.
- Storage:** Ensure all parts are dry before reassembling and storing the rice cooker in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Rice is too hard/undercooked.	Insufficient water; lid not properly sealed; power interruption.	Add a small amount of hot water and cook for a few more minutes; ensure lid is secure; check power connection.
Rice is too soft/mushy.	Too much water; rice not rinsed properly.	Reduce water slightly for future batches; rinse rice thoroughly before cooking.
Rice sticks to the bottom.	Not enough water; inner pot not properly cleaned; damaged non-stick coating.	Ensure correct water ratio; clean inner pot thoroughly; if coating is damaged, consider replacement.
Cooker does not turn on.	Not plugged in; power outlet issue; switch not pressed down.	Check power cord connection; test outlet with another appliance; ensure "COOK" switch is fully engaged.

SPECIFICATIONS

- Brand:** COOK WITH COLOR
- Model:** 6 Cup Rice Cooker 300W
- Capacity:** 6 Cups cooked rice (from 3 cups raw rice)
- Power Source:** Electric
- Wattage:** 300 watts
- Color:** Creme
- Special Feature:** Non-Stick inner pot
- Included Components:** Rice Cooker, Instruction Manual, Measuring Cup, Rice Paddle, Power Cord
- UPC:** 192598129185
- Package Dimensions:** 8.9 x 8.7 x 8.07 inches
- Item Weight:** 3.21 pounds
- ASIN:** B0CBNCQTQM

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please refer to the contact details provided in the original product packaging or visit the official COOK WITH COLOR website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CBNCQTQM>

More documents and user manuals: <https://manuals.plus/>