

Whirlpool MWF259SB

Whirlpool MWF259SB Combined Microwave Oven

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Whirlpool MWF259SB Combined Microwave Oven. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before installation and operation, and keep it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Regularly clean the oven and remove any food deposits.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the microwave oven from its packaging. Inspect the appliance for any damage. If any damage is observed, do not operate the oven and contact your retailer.

3.2 Placement

This is a freestanding microwave oven. Ensure there is adequate ventilation around the appliance. Maintain a minimum clearance of 10 cm at the rear, 20 cm on the sides, and 30 cm above the oven for proper airflow. Do not block any ventilation openings.



Figure 1: Front view of the Whirlpool MWF259SB Combined Microwave Oven. The appliance features a sleek silver-black finish with a large black glass door and an electronic control panel on the right side.

3.3 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications indicated on the rating label of the appliance.

3.4 Initial Cleaning

Before first use, wipe the interior and exterior of the oven with a damp cloth. Ensure the turntable and any accessories are clean.



Figure 2: Interior view of the Whirlpool MWF259SB Microwave Oven with the door open. The stainless steel interior features a square turntable, designed for optimal cooking space.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The electronic control panel features a display, function buttons, and a control knob for setting time and power. The appliance offers 5 power levels.

4.2 Basic Microwave Cooking

1. Place food in a microwave-safe container on the square turntable.
2. Close the oven door securely.
3. Select the 'Microwave' function.
4. Use the control knob to set the desired cooking time and power level.
5. Press 'Jet Start' or the start button to begin cooking.

4.3 Special Functions

- **6th Sense Technology:** This exclusive technology automatically adjusts cooking time, temperature, and energy consumption for optimal results.
- **Crisp Function:** For achieving unparalleled crispiness in dishes like pizzas, pies, and gratins. Use with the dedicated Crisp plate.
- **Steam Function:** Prepare healthy and flavorful recipes quickly by pressing a single button.
- **Forced Air Technology:** Circulates preheated air inside the oven using an innovative convection

system, providing results comparable to a traditional oven.

- **DoughRising Function:** Ensures perfect leavening for bread and pasta by maintaining a stable temperature of 30°C inside the Maxi Chef.
- **Jet Start:** This quick start function brings the microwave to maximum power for approximately 30 seconds, rapidly heating foods with high water content.
- **ChefMenu:** A wide selection of pre-set recipes. Select one, and the microwave automatically adjusts cooking settings for perfect results.
- **Defrost Function:** Features automatic defrosting for various food types.
- **Grill Function:** For browning and crisping dishes.
- **Combined Cooking:** Combines microwave, grill, and/or forced air for versatile cooking.

5. MAINTENANCE AND CLEANING

5.1 General Cleaning

Always unplug the appliance before cleaning. Clean the oven cavity, door, and seals regularly with a mild detergent and a soft cloth. Do not use abrasive cleaners or metal scourers.

5.2 Turntable Care

The square turntable and its support can be removed for cleaning. Wash them in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.

5.3 Auto Clean Function

Utilize the 'Auto Clean' function for convenient interior cleaning. Follow the instructions on the display for this cycle.

6. TROUBLESHOOTING

If you encounter any issues with your microwave oven, please refer to the following common problems and solutions:

- **Oven does not start:** Check if the power cord is securely plugged in and if the circuit breaker has tripped. Ensure the door is fully closed.
- **Food is not heating:** Verify that the correct cooking time and power level have been set. Ensure the door is properly closed.
- **Unusual noises:** This may be due to the turntable not being correctly positioned. Re-seat the turntable and its support.
- **Display not working:** Unplug the oven for a few minutes, then plug it back in. If the issue persists, contact customer support.

For problems not listed here, or if solutions do not resolve the issue, please contact Whirlpool customer service.

7. SPECIFICATIONS

Feature	Specification
---------	---------------

Brand	Whirlpool
Model Name	MWF259SB
Capacity	25 Liters
Microwave Power	800 Watts
Power Levels	5
Control Type	Electronic (Buttons/Knob)
Installation Type	Freestanding
Interior Material	Stainless Steel
Turntable Diameter	30.5 cm
Weight	22 kg
Special Features	Grill, Steam, Forced Air, 6th Sense, Crisp, DoughRising, Jet Start, ChefMenu, Automatic Defrost, Timer

8. WARRANTY AND SUPPORT

Your Whirlpool MWF259SB Combined Microwave Oven comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical assistance, spare parts, or service requests, please contact Whirlpool customer support through their official website or the contact information provided in your warranty documentation.
