

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Relaxdays](#) /

› [Relaxdays Portable Football Goal Instruction Manual - Model 10047250](#)

Relaxdays 10047250

Relaxdays Portable Football Goal Instruction Manual

Model: 10047250

1. INTRODUCTION

Thank you for choosing the Relaxdays Portable Football Goal. This manual provides essential information for the safe and correct assembly, operation, and maintenance of your new football goal. Please read these instructions carefully before use and retain them for future reference.

This portable football goal is designed for recreational use by both children and adults, suitable for various outdoor environments such as gardens, parks, or beaches.

2. SAFETY INSTRUCTIONS

- Always supervise children during play.
- Ensure all components are securely assembled before use.
- Use the provided ground stakes to anchor the goal firmly to prevent tipping, especially in windy conditions.
- Do not hang or climb on the goal frame.
- Inspect the goal regularly for any signs of wear or damage. Discontinue use if any part is broken or compromised.
- Keep small parts away from young children to avoid choking hazards.
- Store the goal in a dry, protected area when not in use to prolong its lifespan.

3. PACKAGE CONTENTS

Please check that all the following items are included in your package:

- Football Goal Frame (fiberglass rods and connectors)
- Football Net
- Ground Stakes (4 pieces)

- Carry Bag

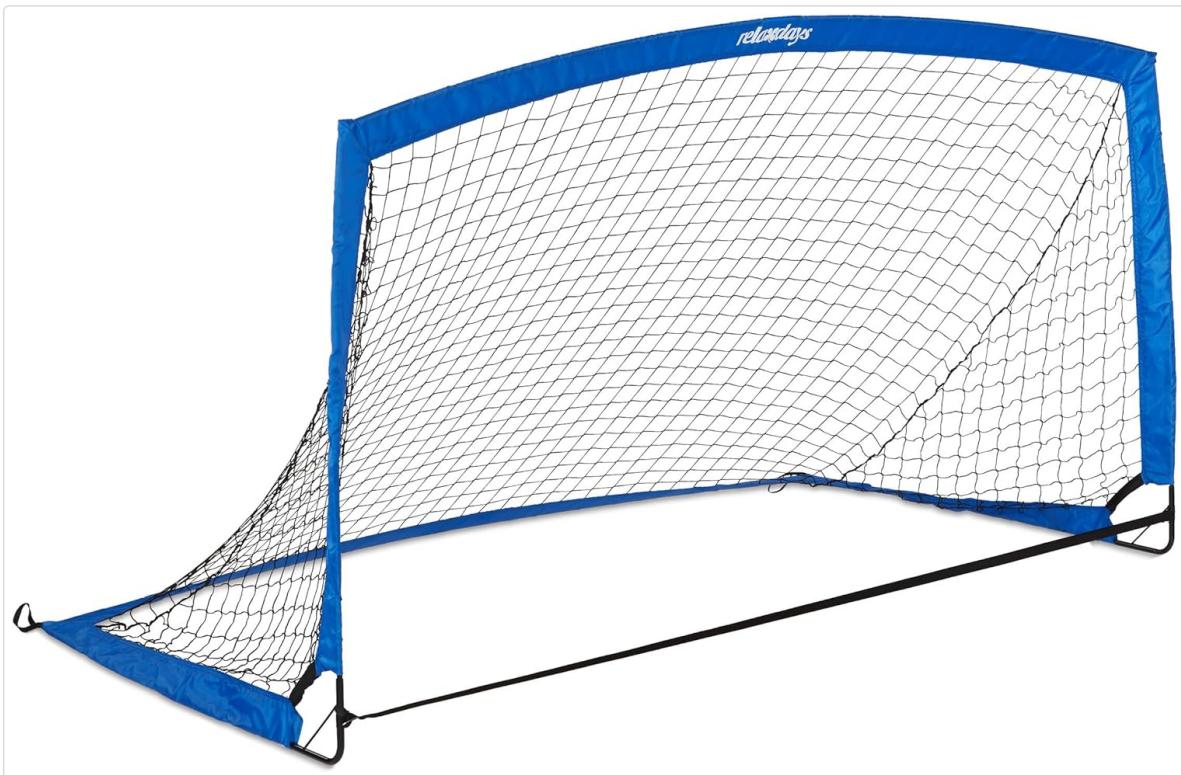


Image 1: All components of the Relaxdays Portable Football Goal, including the assembled goal, net, and stakes.

4. SETUP INSTRUCTIONS

Follow these steps to assemble your portable football goal:

1. **Unpack Components:** Remove all parts from the carry bag and lay them out on a flat surface.
2. **Assemble the Frame:** Connect the fiberglass rods to form the main frame of the goal. The rods are typically elastic-corded for easy assembly. Ensure all connections are firm.
3. **Attach the Net:** Drape the football net over the assembled frame. Secure the net to the frame using the integrated loops and straps. Ensure the net is evenly distributed and taut.



Image 2: Close-up view of how the net attaches to the goal frame, showing the secure connection points.



Image 3: Detail of a corner joint on the goal frame, illustrating the robust connection and elastic strap for stability.

4. **Secure with Ground Stakes:** Position the goal in your desired location. Use the four ground stakes to firmly anchor the goal to the ground through the designated loops at the base of the frame. This prevents the goal from moving or tipping during play.



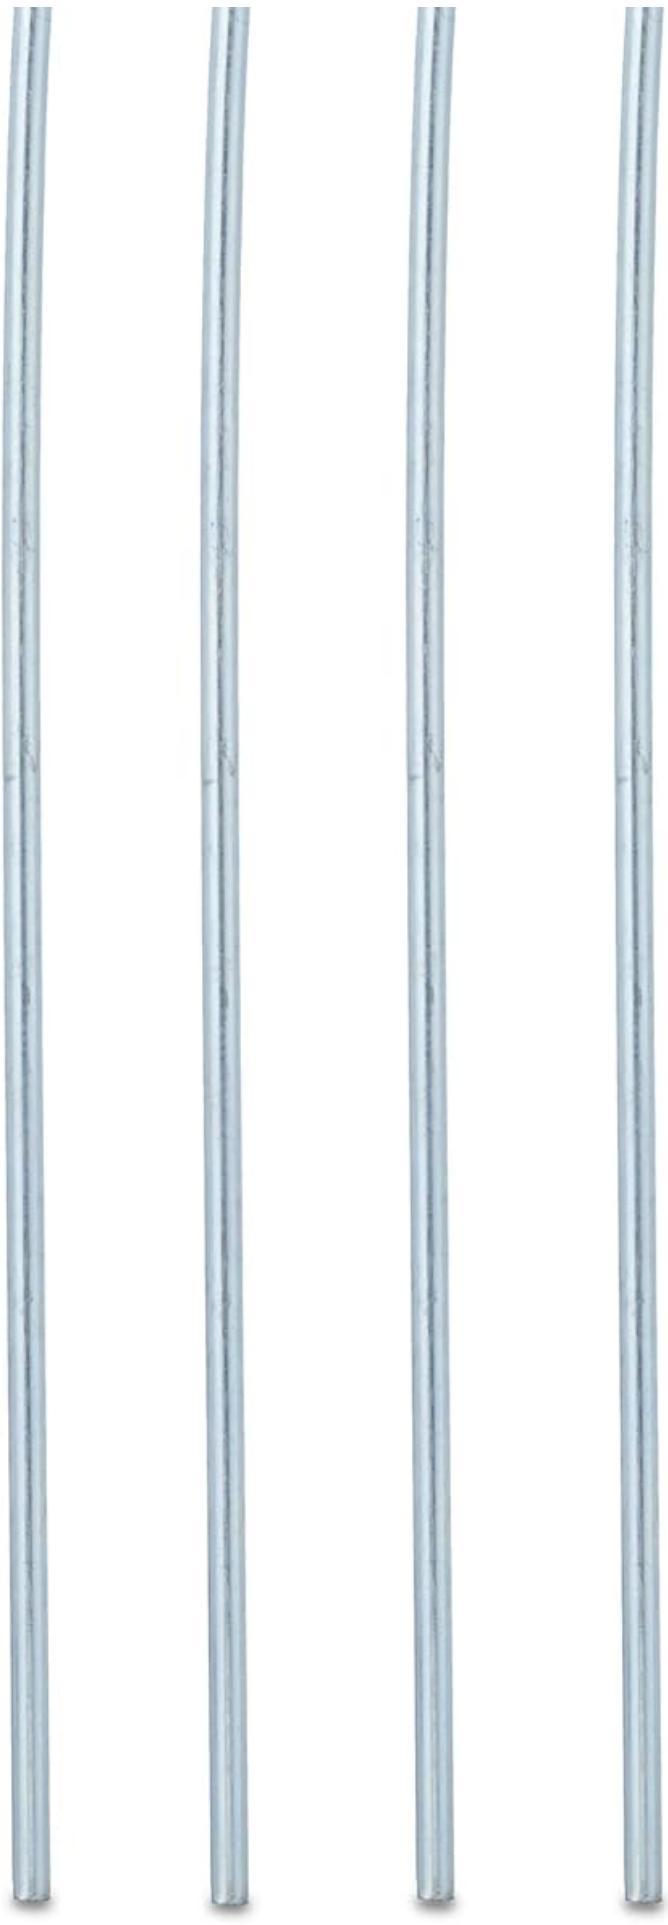


Image 4: Four metal ground stakes used to secure the football goal to the ground for stability.
Your Relaxdays Portable Football Goal is now ready for use.

5. OPERATING INSTRUCTIONS

The Relaxdays Portable Football Goal is designed for straightforward use:

- **Placement:** Choose a flat, open area for playing, such as a garden, park, or beach. Ensure there is sufficient space around the goal for safe play.
- **Play:** Use a standard football to play. The goal is suitable for various skill levels and ages.
- **Portability:** When not in use, disassemble the goal by reversing the setup steps. Store all components in the provided carry bag for easy transport and storage.



Image 5: The portable football goal set up in a lush green garden, ready for play.



Image 6: A group of people enjoying a game of football with the portable goal in an outdoor setting.



Image 7: The portable football goal positioned on a sandy beach, demonstrating its versatility for different environments.

6. MAINTENANCE

Proper maintenance will ensure the longevity of your football goal:

- **Cleaning:** Wipe down the frame and net with a damp cloth to remove dirt and debris. Avoid harsh chemicals that could damage the material.
- **Storage:** When not in use, especially during adverse weather conditions, disassemble the goal and store it in its carry bag in a cool, dry place. This protects the materials from UV degradation and moisture damage.
- **Inspection:** Regularly check the net for tears and the frame for bends or cracks. Ensure all connections are secure. Replace any damaged parts immediately to maintain safety and functionality.

7. TROUBLESHOOTING

Here are some common issues and their solutions:

- **Goal is unstable:** Ensure all fiberglass rods are fully connected and the net is properly attached.

Verify that the ground stakes are firmly inserted into the ground.

- **Net is sagging:** Check that the net is correctly stretched and secured to all attachment points on the frame.
- **Difficulty disassembling:** Ensure you are gently pulling apart the rod connections. Do not force them. If a connection is stuck, try twisting slightly while pulling.

8. SPECIFICATIONS

Feature	Detail
Brand	Relaxdays
Model Number	10047250
Color	Blue and Black
Dimensions (H x L x P)	115 x 195 x 115 cm (approximately 45.3 x 76.8 x 45.3 inches)
Material	Polyester (net), Fiberglass (rods)
Item Weight	1.6 Kilograms (approximately 3.5 lbs)

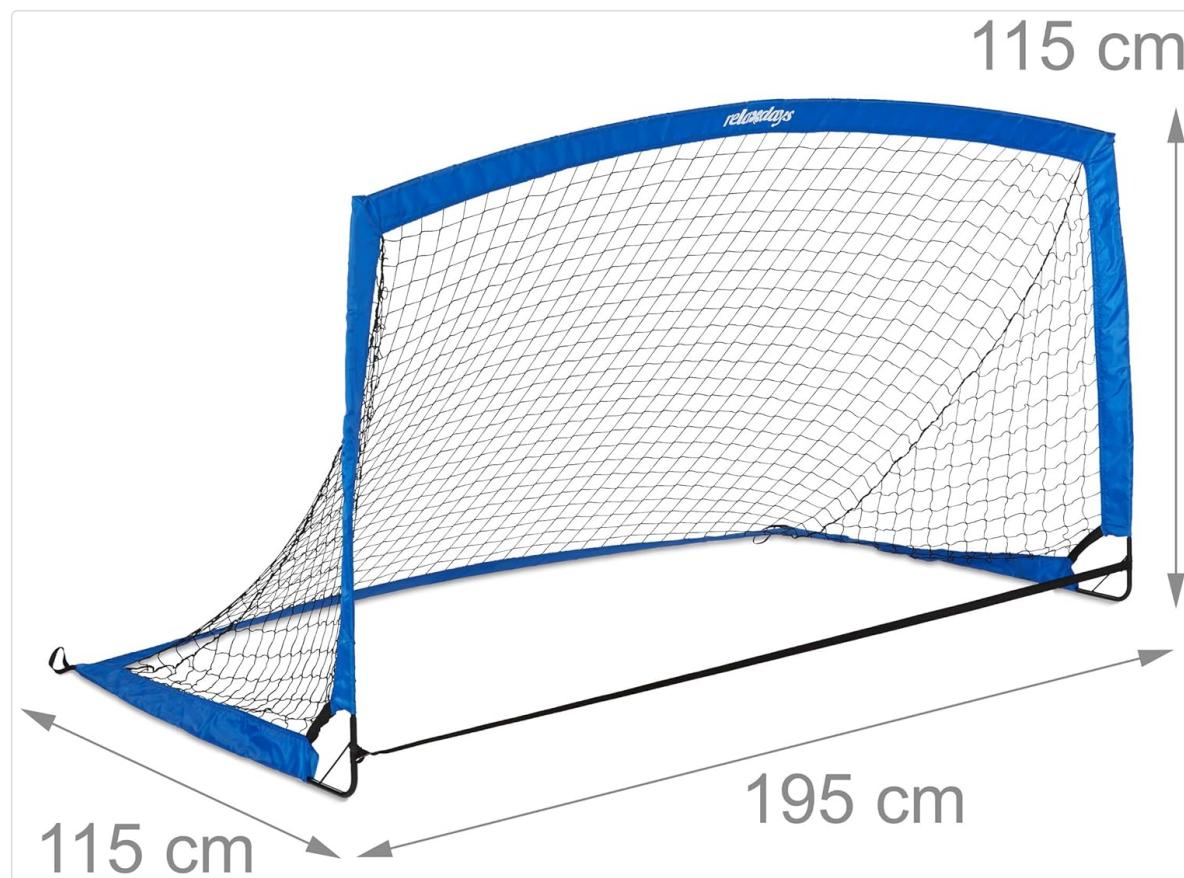


Image 8: Diagram illustrating the dimensions of the portable football goal: 115 cm height, 195 cm length, and 115 cm depth.

9. WARRANTY AND SUPPORT

For warranty information or support, please refer to the retailer's return policy or contact Relaxdays customer service directly. Keep your proof of purchase for any warranty claims.

For further assistance, please visit the official Relaxdays website or contact their customer support channels.

© 2023 Relaxdays. All rights reserved.