

[Manuals.plus](#) /

› [Kircuit](#) /

› Kircuit Replacement Tray-Cook Part Instruction Manual for KitchenAid Microwave Models YKHMS145JBL1, YKHMS145JBS1, YKHMS145JBT1, YKHMS145JWH1, YKHMS147HBL2

Kircuit YKHMS145JBL1, YKHMS145JBS1, YKHMS145JBT1, YKHMS145JWH1, YKHMS147HBL2

Kircuit Replacement Tray-Cook Part Instruction Manual

For KitchenAid Microwave Models YKHMS145JBL1, YKHMS145JBS1, YKHMS145JBT1, YKHMS145JWH1, YKHMS147HBL2, and compatible models.

1. INTRODUCTION

This manual provides essential information for the safe and correct installation, operation, and maintenance of your Kircuit replacement tray-cook part. This part is designed to replace the original tray-cook component in specific KitchenAid microwave models, ensuring proper functionality and ventilation within the appliance. Please read these instructions thoroughly before proceeding with installation or use.

2. SAFETY INFORMATION

- **Disconnect Power:** Always unplug the microwave oven from the power outlet before attempting any installation, removal, or maintenance of parts. Failure to do so can result in electric shock or injury.
- **Handle with Care:** The replacement part may have sharp edges. Wear appropriate protective gloves if necessary.
- **Proper Fit:** Ensure the replacement part fits securely and correctly before operating the microwave. An improperly installed part can affect microwave performance or safety.
- **Original Parts:** Use only genuine or approved replacement parts.
- **Professional Assistance:** If you are unsure about any step of the installation process, consult a qualified technician.

3. PACKAGE CONTENTS

Verify that your package contains the following item:

- 1 x Kircuit Replacement Tray-Cook Part (Interior and Ventilation Part)



Image 1: Kircuit Replacement Tray-Cook Part. This image displays the replacement tray-cook component, typically made of metal, designed for the interior and ventilation system of compatible KitchenAid microwave ovens.

4. COMPATIBLE MODELS

This Kircuit replacement tray-cook part is compatible with the following KitchenAid microwave oven models:

- YKHMS145JBL1
- YKHMS145JBS1
- YKHMS145JBT1
- YKHMS145JWH1
- YKHMS147HBL2
- YKHMS147HSS2
- YKHMS147HWH2
- YKHMS155LBL0, YKHMS155LBL1, YKHMS155LBL2
- YKHMS155LBT0, YKHMS155LBT1, YKHMS155LBT2
- YKHMS155LSS0, YKHMS155LSS1, YKHMS155LSS2
- YKHMS155LWH0, YKHMS155LWH1, YKHMS155LWH2
- YKHMS1850SB0, YKHMS1850SB1, YKHMS1850SB2
- YKHMS1850SS0, YKHMS1850SS1, YKHMS1850SS2
- YKHMS1850SW0, YKHMS1850SW1, YKHMS1850SW2
- YKHMS2040BS0
- YKHMS2040WB0
- YKHMS2040WS0, YKHMS2040WS1, YKHMS2040WS3
- YKHMS2040WW0

Please verify your microwave model number before purchasing and installing this part to ensure compatibility. The model

number is typically located on a label inside the microwave door or on the back of the appliance.

5. SETUP AND INSTALLATION

Follow these steps to safely install the replacement tray-cook part:

1. **Step 1: Disconnect Power.** Unplug the microwave oven from the electrical outlet to prevent any electrical hazards.
2. **Step 2: Access the Interior.** Open the microwave door.
3. **Step 3: Remove Old Part (if applicable).** If an old or damaged tray-cook part is present, carefully remove it from its position. Note how it was seated to aid in installing the new part.
4. **Step 4: Position New Part.** Carefully place the Kircuit replacement tray-cook part into the designated area within the microwave interior. Ensure it aligns correctly with any grooves, supports, or ventilation openings.
5. **Step 5: Secure the Part.** Gently press down or slide the part into place until it feels secure and stable. It should not wobble or move freely.
6. **Step 6: Close Door and Reconnect Power.** Close the microwave door and plug the microwave oven back into the electrical outlet.
7. **Step 7: Test Functionality.** Perform a brief test (e.g., heating a cup of water) to ensure the microwave operates normally and the new part remains securely in place.

If the part does not fit correctly or you encounter resistance, do not force it. Recheck your microwave model number and ensure you have the correct replacement part.

6. OPERATING THE TRAY-COOK PART

The tray-cook part is an integral component of your microwave's interior and ventilation system. Its primary function is to support cookware and facilitate proper airflow during cooking. Ensure that:

- The tray is always in place when operating the microwave.
- Cookware is placed centrally on the tray for even heating.
- The tray is clean and free from food debris to maintain hygiene and prevent interference with ventilation.

7. MAINTENANCE

To ensure the longevity and proper function of your replacement tray-cook part, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the tray-cook part with a soft cloth, mild detergent, and warm water. Rinse thoroughly and dry completely before placing it back into the microwave.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface of the part.
- **Inspection:** Periodically inspect the part for any signs of damage, such as cracks, bends, or corrosion. Replace the part if significant damage is observed.

8. TROUBLESHOOTING

If you encounter issues with your replacement tray-cook part, consider the following:

- **Part Does Not Fit:**
 - Double-check your microwave's model number against the list of compatible models in this manual.

- Ensure the part is oriented correctly.
 - Verify that no obstructions are preventing proper seating.
- **Part is Loose or Wobbles:**
 - Re-seat the part, ensuring it is fully engaged with all support points.
 - Inspect the microwave's interior for any damaged support structures.

- **Unusual Noises:**
 - Ensure the tray is clean and free of debris that could cause rattling.
 - Confirm the tray is properly seated and not touching other internal components during operation.

If problems persist after following these steps, contact customer support or a qualified appliance technician.

9. SPECIFICATIONS

Part Type	Tray-Cook (Interior and Ventilation Part)
Brand	Kircuit
Manufacturer	Kircuit
ASIN	B0CBP2293Y
Date First Available	July 12, 2023
Compatibility	KitchenAid Microwave models (refer to Section 4)

10. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Kircuit replacement part, please refer to the documentation provided with your purchase or contact the seller directly. Keep your purchase receipt as proof of purchase. For general inquiries or further assistance, you may visit the Kircuit brand's official website or contact their customer service department.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CBP2293Y>

More documents and user manuals: <https://manuals.plus/>