

[Manuals.plus](#) /

› [WOLFANG](#) /

› WOLFANG GB1350 Action Camera Battery Charging Kit User Manual

WOLFANG GB1350

WOLFANG GB1350 Action Camera Battery Charging Kit User Manual

Model: GB1350

1. PRODUCT OVERVIEW

The WOLFANG GB1350 Action Camera Battery Charging Kit provides extended power for your compatible WOLFANG action cameras. This kit includes two 1350 mAh rechargeable batteries and a dual-slot USB charger, designed for efficient and convenient charging.

1350mAh Battery

Take more photos and videos

Other Battery	Our Battery
 1050 mAh Battery	 1350 mAh Battery
 Can take < 300 photos	 Can take ≥ 300 photos
 Can record video < 160 minutes	 Can record video ≥ 160 minutes



Image: The WOLFANG GB1350 Charging Kit, featuring two 1350 mAh batteries and a dual-slot USB charger.

Key Features:

- **Higher Capacity:** Each 1350mAh battery offers approximately 30% more recording time compared to standard 1050mAh batteries.
- **Durable Construction:** Batteries are encased in aluminum alloy for improved heat dissipation and longevity.
- **Fast Dual Charging:** The USB charger allows simultaneous charging of two batteries, reducing downtime.
- **LED Indicators:** Clear red/blue LED lights indicate charging status.
- **Wide Compatibility:** Compatible with WOLFANG GA100, GA200, and GA300 action cameras. **Note: Not compatible with GA420.**

Compatible With Most Action Cameras Including **WOLFANG GA100/GA200/GA300**



Image: Comparison illustrating the extended photo and video recording capabilities of the 1350mAh WOLFANG batteries.

2. SETUP AND CHARGING INSTRUCTIONS

2.1 Package Contents:

Verify that your package contains the following items:

- 2 x WOLFANG 1350 mAh Rechargeable Li-ion Batteries
- 1 x Dual-Slot USB Battery Charger
- 1 x USB Type-C Charging Cable
- 1 x User Manual (this document)



1.Insert the battery into the charging port



2.Connect the charging cradle to the power supply



3.Red light is charging



4.Blue light charging complete

Image: The complete WOLFANG GB1350 Battery Pack contents.

2.2 Charging Procedure:

1. **Insert Batteries:** Gently slide one or two WOLFANG 1350 mAh batteries into the charging slots of the dual-slot charger. Ensure the battery contacts align correctly with the charger pins.



Image: Correctly inserting a battery into the charger slot.

2. **Connect to Power:** Connect the USB Type-C charging cable to the charger's port and then to a compatible USB power source. This can be a USB wall adapter, a power bank, a laptop, or a car charger.

Highly Adaptable Chargers



USB Port



Power Bank



Laptop



Car Charger

Image: Connecting the charger to a power source.



1. Insert the battery into the charging port



2. Connect the charging cradle to the power supply



3. Red light is charging



4. Blue light charging complete

Image: Examples of compatible power sources for the charger.

3. **Monitor Charging Status:** The LED indicator lights on the charger will show the charging status:

- **Red Light:** Indicates that the battery is currently charging.
- **Blue Light:** Indicates that the battery is fully charged or no battery is present in the slot.

Smart LED Charger With Type-C Interface

— Charging — Full Charged



Image: Charger showing red light for charging and blue light for fully charged.

4. **Remove Batteries:** Once the blue light appears, the battery is fully charged. Disconnect the charger from the power source and remove the batteries.

3. OPERATING THE BATTERIES

These 1350 mAh batteries are designed to provide extended power for your WOLFANG action cameras. To use, simply insert a charged battery into your compatible action camera (GA100, GA200, GA300).

Compatible With Most Action Cameras Including **WOLFANG GA100/GA200/GA300**



Image: The charging kit is compatible with WOLFANG GA100, GA200, and GA300 action cameras.

The increased capacity allows for longer shooting sessions, capturing more photos and videos without frequent battery changes.

4. MAINTENANCE AND CARE

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid fully discharging batteries before recharging to prolong their lifespan.
- Clean the battery contacts and charger pins periodically with a dry, soft cloth to ensure good connection.
- Do not disassemble, crush, or puncture the batteries or charger.
- Keep the charging kit away from water and moisture.
- If not using the batteries for an extended period, charge them to about 50% capacity before storage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Batteries not charging (no red light)	<ul style="list-style-type: none">◦ Battery not inserted correctly.◦ Charging cable or power source faulty.◦ Dirty battery contacts or charger pins.	<ul style="list-style-type: none">◦ Re-insert battery, ensuring proper alignment.◦ Try a different USB cable or power adapter.◦ Clean contacts with a dry cloth.
Blue light stays on, but battery is not charged	<ul style="list-style-type: none">◦ Battery is already fully charged.◦ Faulty battery.	<ul style="list-style-type: none">◦ Verify battery charge level in camera.◦ Try charging a different battery. If issue persists with one battery, it may be defective.
Batteries do not fit WOLFANG GA420 camera	<ul style="list-style-type: none">◦ Incompatibility with GA420 model.	<ul style="list-style-type: none">◦ The GB1350 batteries are specifically designed for GA100, GA200, and GA300 models and are not compatible with the GA420.

6. SPECIFICATIONS

Feature	Detail
Brand	WOLFANG
Model Number	GB1350
Battery Capacity	1350 mAh (each)
Battery Type	Lithium Polymer
Charger Type	Dual-Slot USB Charger
Connectivity	USB Type-C
Compatible Cameras	WOLFANG GA100, GA200, GA300
Incompatible Cameras	WOLFANG GA420
Item Weight	0.07 g (total kit)
UPC	698746847647

7. WARRANTY AND SUPPORT

WOLFANG provides a 1-year warranty for this product and offers a 1-month free return and exchange policy. For any support needs, technical assistance, or warranty claims, please contact WOLFANG customer service directly.

Email: support@wolfang.co

Please visit the official WOLFANG website or your retailer's support page for additional resources and contact information.

© 2024 WOLFANG. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CBP6SZKC>

More documents and user manuals: <https://manuals.plus/>