
[Manuals.plus](#) /

› [Cadrim](#) /

› Cadrim Candle Warmer Lamp User Manual

Cadrim CL23710

Cadrim Candle Warmer Lamp User Manual

Model: CL23710

INTRODUCTION

Thank you for choosing the Cadrim Candle Warmer Lamp. This electric candle warmer is designed to safely melt jar candles and wax melts using a low-energy heating bulb, eliminating the need for an open flame. It features adjustable height, dimmable light, and a convenient timer function, making it a versatile addition to any room.



Image: The Cadrim Candle Warmer Lamp, featuring a gold arched arm, a pleated gold lampshade, and a wooden base, positioned on a white table next to a potted plant and a lit candle.

SAFETY INFORMATION

Please read all safety instructions carefully before using the Cadrim Candle Warmer Lamp to ensure safe operation and prevent damage.

- This product is for indoor use only.
- Do not immerse the lamp or power cord in water or other liquids.
- Ensure the lamp is placed on a stable, flat, heat-resistant surface.
- Keep out of reach of children and pets.
- Do not touch the bulb or lampshade immediately after use, as they may be hot. Allow sufficient time for cooling.
- Use only the specified GU10 halogen bulbs (10 watts). Using incorrect bulbs may cause damage or fire.
- Unplug the lamp from the power outlet when not in use or before cleaning.
- Do not operate the lamp if the cord or plug is damaged, or if the lamp malfunctions or has been damaged in any manner.

- Ensure adequate ventilation around the lamp during operation.



Image: Graphic illustrating key safety features: low energy consumption, no open flame, and no smoke or waste, highlighting the environmental friendliness of the product.

PACKAGE CONTENTS

Verify that all items are included in your package:

- Cadrim Candle Warmer Lamp (main unit with wooden base, metal arm, and lampshade)
- GU10 Halogen Bulbs (2 pieces)
- Inline Controller with Dimmer and Timer Functions
- User Manual (this document)



Image: The complete package contents, showing the assembled candle warmer lamp, two spare GU10 halogen bulbs, and the wired control panel.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Bulb Installation:** Gently screw one of the provided GU10 halogen bulbs into the socket located under the lampshade. Ensure it is securely fastened.



Image: A close-up view of the GU10 bulb socket located inside the lampshade, ready for bulb insertion.

3. **Placement:** Place the candle warmer lamp on a stable, flat surface. Ensure there is enough space around the lamp for proper heat dissipation. The wooden base includes non-slip pads for stability.
4. **Adjust Height:** The lamp features an adjustable height mechanism. Loosen the knob on the vertical arm to adjust the height of the lampshade to accommodate different candle sizes. Tighten the knob to secure the height. The height can be adjusted from 10.2 inches to 13.3 inches.



Image: A detailed view of the height-adjustable knob on the lamp's vertical arm, allowing users to customize the lamp's height.

5. **Connect Power:** Plug the power cord into a standard 110V electrical outlet.

OPERATING INSTRUCTIONS

The Cadrim Candle Warmer Lamp is operated via an inline controller on the power cord.



10% Light



30% Light



70% Light



100% Light



Brightness Adjustments



Scheduled switchover

(8 Hours/4 Hours/2 Hours)
Short Press: 4-gear brightening

Long Press: Non-gear brightening
Short Press: 4-gear dimming

Long Press: Non-gear darkening
Short Press: On/Off

Long Press for one second: Delay 60 seconds off

Image: A visual guide to the inline controller, showing buttons for power, brightness adjustment (plus/minus), and timer settings (2H, 4H, 8H).

1. **Power On/Off:** Press the **Power Button** (red circle icon) to turn the lamp on or off. A long press for one second will delay shutdown by 60 seconds.

2. **Adjust Brightness (Dimmer):**

- Press the **"+" Button** to increase brightness. Short press for 4-gear brightening. Long press for non-gear brightening.
- Press the **"-" Button** to decrease brightness. Short press for 4-gear dimming. Long press for non-gear darkening.
- There are 4 brightness levels (10%, 30%, 70%, 100%) to choose from. Adjusting brightness also controls the speed at which the candle melts and diffuses scent.

3. **Set Timer:** Press the **Timer Button** (clock icon) to set an automatic shut-off time. Available settings are 2 hours, 4 hours, and 8 hours. The indicator light next to the selected time will illuminate.

Never Worry in Your Sleep

2H/4H/8H Timer-Never worry again while sleeping
Temperature Dimmer-Control the speed of aroma diffusion



Image: The candle warmer lamp in a bedroom setting, illustrating the 2H, 4H, and 8H timer functions for worry-free use while sleeping.

4. **Candle Placement:** Place your jar candle or wax melt directly on the wooden base beneath the lamp. Ensure the candle is centered for even melting.

Product Demonstration Video

Your browser does not support the video tag.

Video: A demonstration of the Cadrim Candle Warmer Lamp, showcasing its design, adjustable height feature, bulb installation, and the functionality of its inline controller for brightness and timer settings.

MAINTENANCE

- **Cleaning:** Before cleaning, ensure the lamp is unplugged and completely cool. Wipe the lamp and base with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Bulb Replacement:** If the bulb burns out, ensure the lamp is unplugged and cool. Carefully unscrew the old bulb and replace it with a new GU10 halogen bulb (10 watts).
- **Storage:** When not in use for extended periods, store the lamp in a cool, dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	◦ Not plugged in. ◦ Power outlet is not working. ◦ Bulb is loose or burnt out.	◦ Ensure the lamp is securely plugged into a working outlet. ◦ Test the outlet with another device. ◦ Check if the bulb is screwed in tightly. Replace the bulb if it is burnt out.
Candle is not melting or melting slowly.	◦ Brightness setting is too low. ◦ Lampshade height is too high. ◦ Candle is too large or old.	◦ Increase the brightness using the "+" button on the controller. ◦ Lower the lampshade closer to the candle by adjusting the height. ◦ Ensure the candle fits within the recommended dimensions. Some older candles may have reduced scent throw.
Timer function not working.	◦ Timer not activated correctly.	◦ Press the timer button repeatedly until the desired time (2H, 4H, or 8H) is indicated by the illuminated light.

SPECIFICATIONS

- **Model:** CL23710
- **Brand:** Cadrim
- **Power Source:** Corded Electric
- **Voltage:** 110 Volts
- **Wattage:** 10 watts (per bulb)
- **Bulb Type:** GU10 Halogen
- **Material:** Iron (lamp), Wood (base)
- **Color:** Gold
- **Product Dimensions:** 4.13"D x 4.13"W x 11.8"H (adjustable height up to 13.3 inches)
- **Item Weight:** 2.09 pounds
- **Special Features:** Adjustable Height, Dimmable, Timer (2H/4H/8H)
- **Control Method:** Push Button (inline controller)
- **UPC:** 704966849573



Image: A graphic detailing the product's key specifications, including working temperature, LED color, voltage, power supply, functions (On/Off, Dimming, Timer), and lamp bulb type.

WARRANTY AND SUPPORT

Cadrim products are designed for quality and reliability. For any questions, concerns, or support needs regarding your Cadrim Candle Warmer Lamp, please refer to the contact information provided with your purchase or visit the official Cadrim store on Amazon.

Online Store: [Cadrim Official Store](#)

Please retain your proof of purchase for warranty claims.

