

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [LELO](#) /
- › [LELO SONA 2 Travel Sonic Massager Instruction Manual](#)

## LELO SONA 2 Travel

# LELO SONA 2 Travel Sonic Massager Instruction Manual

Model: SONA 2 Travel (9233)

[Introduction](#)   [Setup](#)   [Operation](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

---

The LELO SONA 2 Travel is a compact sonic massager designed for external stimulation. It features Sensonic Technology, offering gentle yet powerful sonic waves without direct contact. This device is crafted from medical-grade silicone, ensuring both comfort and hygiene. With 12 pleasure settings, it provides a range of intensities and patterns. Its travel-friendly design includes a compact size and a travel lock function, making it suitable for use anywhere. The device is also USB rechargeable and fully waterproof.

## 2. SETUP

---

### 2.1 Unboxing

Carefully remove all components from the packaging. The box should contain the LELO SONA 2 Travel device, a USB charging cable, a satin storage pouch, a small manual, and a warranty registration card.



## Features



### **SONOSONIC™ TECHNOLOGY**

uses sonic pulses for deep but gentle stimulation



### **12 DIFFERENT MODES**

to experience and explore your sexuality



### **EXTRA-SOFT SILICONE**

that feels warm to the touch



### **TRAVEL LOCK**

perfect travel companion



### **LONG-LASTING CHARGE**

longer time for pleasure



### **WATERPROOF DESIGN**

perfect for the bath and shower

Image: Package contents of the LELO SONA 2 Travel, showing the device, USB charging cable, satin pouch, manual, and warranty card.

## 2.2 Initial Charging

Before first use, fully charge the device for 2 hours. Locate the charging port on the device and connect it to the provided USB charging cable. Plug the USB cable into a compatible USB power source. The LED lights on the device will blink to indicate the battery level during charging.



Image: The LELO SONA 2 Travel device with visual instructions, highlighting the charging process and button functions.

### 3. OPERATION

---

#### 3.1 Powering On/Off

- To turn on: Press the '+' button.
- To turn off: Press and hold the '()' button.

#### 3.2 Changing Settings and Intensity

The LELO SONA 2 Travel offers 12 powerful pleasure settings, varying in intensity and pattern.

- To switch between 12 modes: Press the '()' button.
- To decrease or increase intensity: Use the '+' and '-' buttons.

**SONIC WAVE STIMULATION ①**



Image: The LELO SONA 2 Travel device with key features labeled, including sonic wave stimulation and its compact design.

### **3.3 Sensonic Technology**

The device utilizes Sensonic Technology to deliver sonic waves for external stimulation without direct contact. These waves are designed to provide fast yet gentle sensations.

### **3.4 Waterproof Design**

The LELO SONA 2 Travel is 100% waterproof, allowing for use in the bath or shower. Ensure the charging port is dry before connecting the charging cable.

# Explore the LELOverse



Image: The LELO SONA 2 Travel device placed on a towel, illustrating its suitability for use in wet environments.

## 3.5 Travel Lock

To prevent accidental activation during travel, the device includes a travel lock feature. Refer to the included small manual for specific instructions on how to activate and deactivate the travel lock.

## 4. MAINTENANCE

### 4.1 Cleaning

The LELO SONA 2 Travel is made from medical-grade silicone, which is easy to clean. Wash the device thoroughly with warm water and a mild soap or a specialized toy cleaner after each use. Rinse thoroughly and pat dry with a lint-free cloth.

### 4.2 Storage

Store the device in the provided satin pouch in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid storing it with other materials that could damage the silicone.

## 5. TROUBLESHOOTING

### 5.1 Device Not Turning On

- Ensure the device is fully charged. Connect it to the charger for at least 2 hours.
- Check if the travel lock is activated. Deactivate it by following the instructions in the small manual.

## 5.2 Device Not Charging

- Verify that the USB cable is securely connected to both the device and the power source.
- Try using a different USB port or power adapter.
- Ensure the charging port on the device is clean and free of debris.

## 5.3 Unexpected Behavior

If the device exhibits unexpected behavior, try resetting it by fully discharging the battery and then recharging it. If issues persist, refer to the warranty information for support.

## 6. SPECIFICATIONS

<b>Model Name</b>	SONA 2 Travel
<b>Item Model Number</b>	9233
<b>Brand</b>	LELO
<b>Material</b>	Silicone
<b>Product Dimensions</b>	1.97 x 3.35 x 6.14 inches
<b>Weight</b>	2.22 ounces
<b>Battery</b>	1 Lithium Ion battery (included)
<b>Waterproof</b>	Yes
<b>Pleasure Settings</b>	12
<b>Technology</b>	Sensonic Technology

## 7. WARRANTY & SUPPORT

The LELO SONA 2 Travel comes with a 1-year warranty, alongside a 10-year quality guarantee. For detailed warranty terms and conditions, please refer to the warranty registration card included in your package or visit the official LELO website.



**ENSURED SATISFACTION**

1-year warranty, alongside a  
10-year quality guarantee



**NEW SENSATIONS**

Surrender to unseen  
satisfaction using patented  
pleasure technologies



**SELF-CARE MOVEMENT**

transcending gender,  
orientation, race, and age

Image: LELO product features, emphasizing the 1-year warranty and 10-year quality guarantee for customer satisfaction.

For product support, technical assistance, or to inquire about warranty claims, please contact LELO customer service through their official website or the contact information provided in your product documentation.