

[Manuals.plus](#) /

› [LELO](#) /

› LELO SONA 2 Travel Sonic Massager User Manual

LELO SONA 2 Travel (Model 9240)

LELO SONA 2 Travel Sonic Massager User Manual

Brand: LELO | Model: SONA 2 Travel (Model 9240)

PRODUCT OVERVIEW

The LELO SONA 2 Travel is a compact sonic massager designed for external stimulation. It features Sensonic Technology, offering gentle yet powerful sonic waves without direct contact. This device is crafted from medical-grade silicone, ensuring both comfort and hygiene. Its travel-friendly design includes a lock function for discreet and secure transport.

SONA™ 2 Travel
sonic clitoral massager



MANUAL
how to use guide



MOISTURIZER SACHET
water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING CORD
USB cable



SATIN POUCH
for storage



WARRANTY CARD
verifies product authenticity

Image: LELO SONA 2 Travel device, manual, moisturizer sachet, charging cord, satin pouch, and warranty card.

Key Features:

- **Compact Size & Travel Lock:** Ideal for portability and secure transport.
- **Sensonic Technology:** Utilizes sonic waves for external stimulation without direct contact.
- **12 Pleasure Settings:** Offers a variety of intensity levels and patterns.
- **Medical Grade Silicone:** Body-safe material for hygienic use.
- **USB Rechargeable & Waterproof:** Convenient charging and suitable for use in water.

SONIC WAVE STIMULATION ①

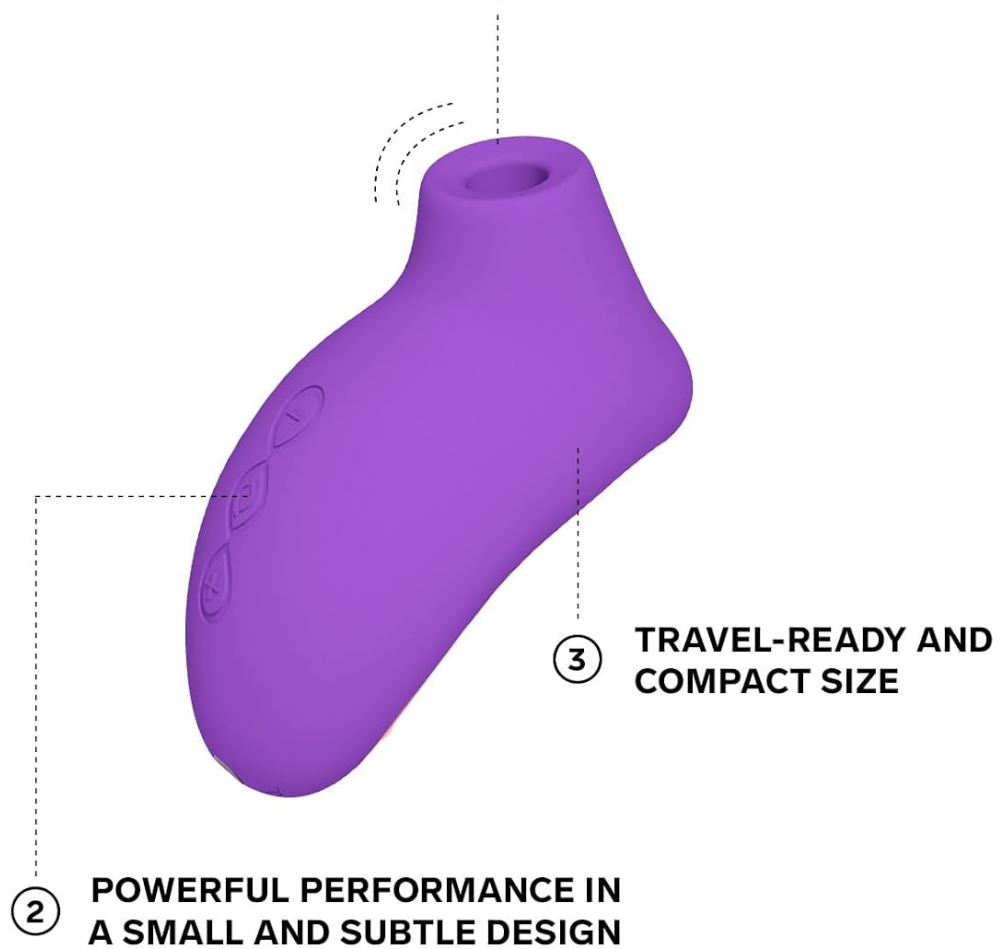


Image: Diagram illustrating the sonic wave stimulation, powerful performance in a small design, and travel-ready compact size of the LELO SONA 2 Travel.

SETUP

1. **Initial Charge:** Before first use, fully charge the device for 2 hours using the provided USB charging cable. The LED lights will blink to indicate battery level during charging.
2. **Cleaning:** Clean the device thoroughly before and after each use with LELO Toy Cleaner or a mild soap and water. Rinse well.

OPERATING INSTRUCTIONS

How to use

BEFORE FIRST USE

charge for 2 hours

TO TURN IT ON

press the + button

THE LED LIGHTS WILL BLINK

to indicate the battery level

TO SWITCH BETWEEN 12 MODES

press the () button

TO DECREASE OR INCREASE THE INTENSITY

use the + and the - buttons

TO TURN IT OFF

press and hold the () button

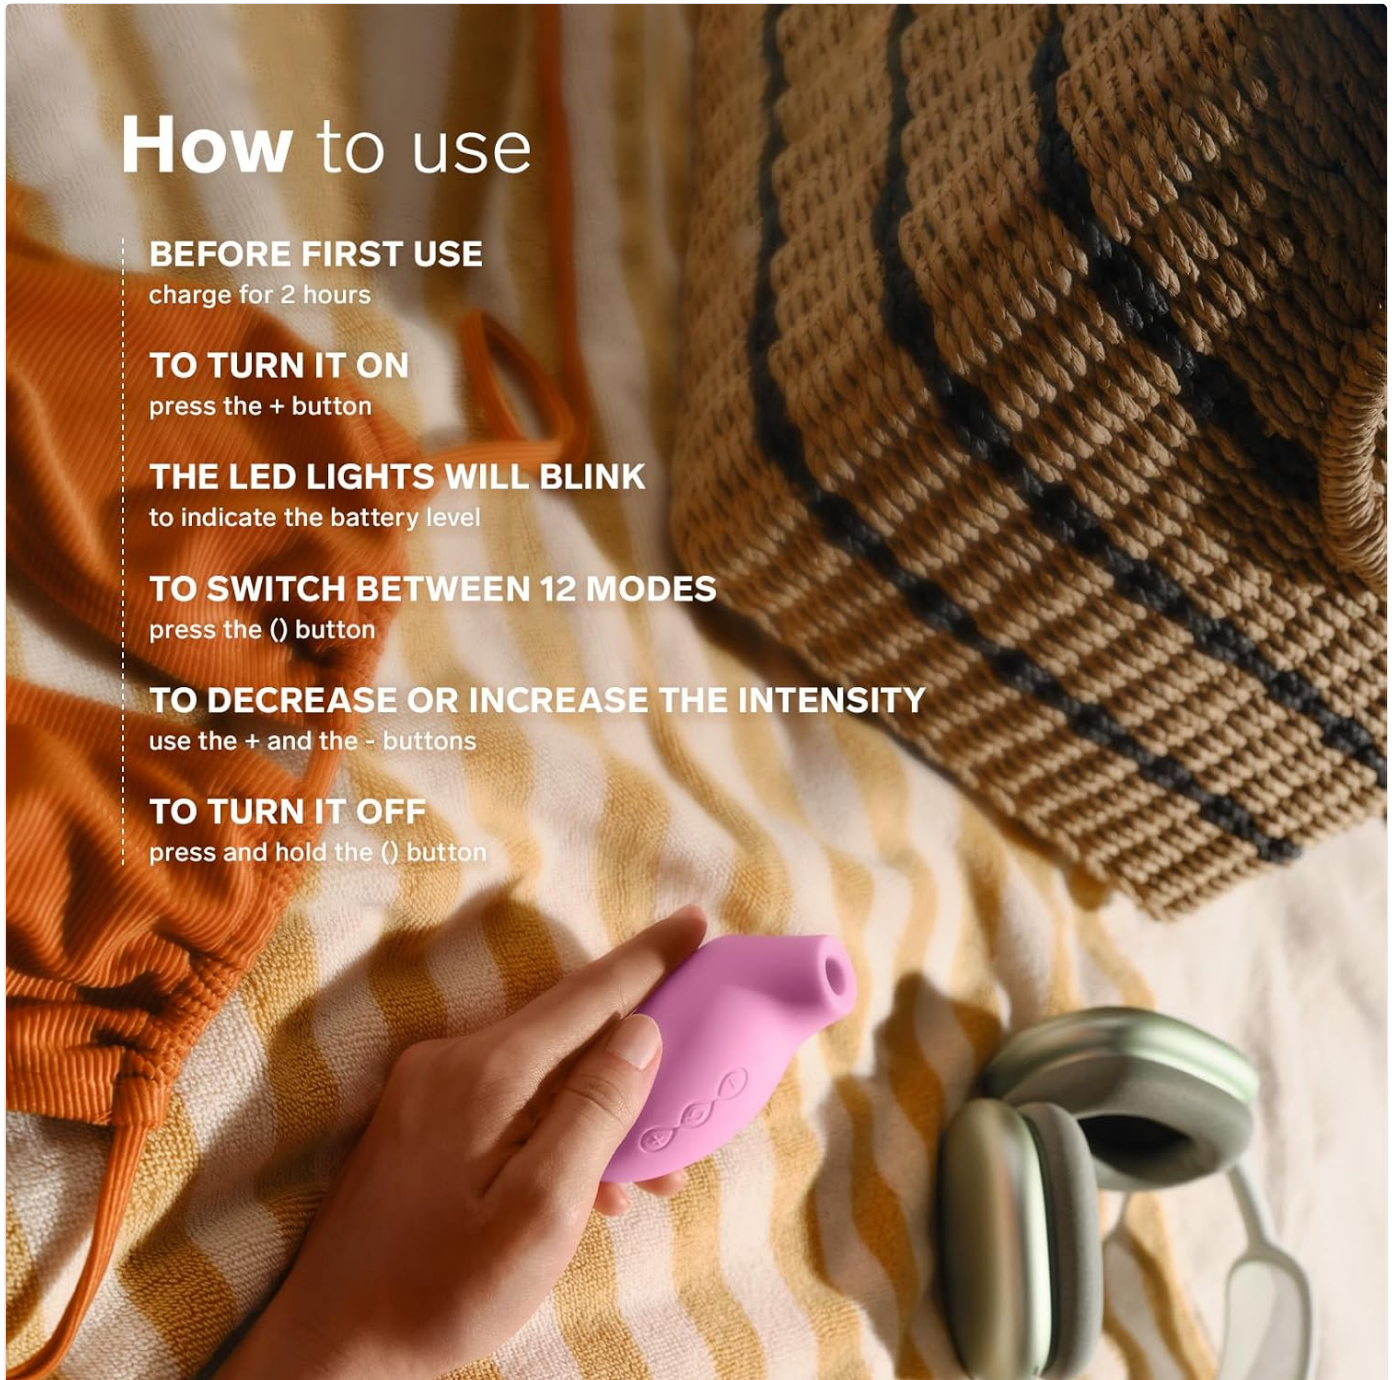


Image: Visual guide on operating the LELO SONA 2 Travel, including power, mode, and intensity controls.

1. **Turning On:** Press the '+' button to turn on the device. The LED lights will blink to indicate the current battery level.
2. **Changing Modes:** Press the '()' button to cycle through the 12 different pleasure settings.
3. **Adjusting Intensity:** Use the '+' and '-' buttons to increase or decrease the intensity of the chosen mode.
4. **Travel Lock:** To activate the travel lock, press and hold the '+' and '-' buttons simultaneously until the device locks. Repeat to unlock.
5. **Turning Off:** Press and hold the '()' button to turn off the device.

MAINTENANCE

- **Cleaning:** Always clean your SONA 2 Travel thoroughly before and after each use. Use LELO Toy Cleaner or a mild soap and water. Rinse with clean water and pat dry with a lint-free cloth or towel.
- **Storage:** Store the device in its satin pouch in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid storing with other toys made of different materials to prevent damage.

- **Charging:** Recharge the device when the battery is low. Do not overcharge for extended periods.

TROUBLESHOOTING

Problem	Solution
Device does not turn on.	Ensure the device is fully charged. If it's in travel lock mode, press and hold '+' and '-' buttons simultaneously to unlock.
Device does not charge.	Check the USB cable connection and ensure the charger is working. Clean the charging port if necessary.
Vibrations feel weak or inconsistent.	The battery might be low; recharge the device. Ensure the device is clean and free from debris.
Device is unusually loud.	While some operational sound is normal, excessive noise may indicate an issue. Ensure the device is not damaged. If the issue persists, contact customer support.

SPECIFICATIONS

- **Product Dimensions:** 1.97 x 3.35 x 6.14 inches
- **Weight:** 2.22 ounces
- **Model Number:** 9240
- **Battery:** 1 Lithium Ion battery (included)
- **Material:** Silicone
- **Color:** Purple
- **Waterproof:** Yes

WARRANTY AND SUPPORT

The LELO SONA 2 Travel comes with a 1-year warranty, alongside a 10-year quality guarantee. For detailed warranty information, product support, or troubleshooting assistance, please refer to the official LELO website or contact LELO customer service directly.

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question