

[Manuals.plus](#) /

› [VATOS](#) /

› VATOS 2 Pack Light-Up Bow and Arrow Toy Instruction Manual (Model 988-686A1)

VATOS 988-686A1

VATOS 2 Pack Light-Up Bow and Arrow Toy Instruction Manual

Model: 988-686A1

INTRODUCTION

This manual provides essential instructions for the safe and proper use, assembly, and maintenance of your VATOS 2 Pack Light-Up Bow and Arrow Toy set. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- **Adult Supervision Required:** This product is intended for use under direct adult supervision.
- **Eye Protection:** Always wear appropriate eye protection when using this toy.
- **Do Not Aim at Eyes or Face:** Never aim the bow, arrows, or foam darts at people or animals, especially at their eyes or face.
- **Use Only Provided Projectiles:** Only use the arrows, foam darts, sticky darts, and sticky balls supplied with this product. Do not modify the projectiles or the toy.
- **Check for Damage:** Before each use, inspect all components for any signs of damage. Do not use if any part is broken or damaged.
- **Small Parts Warning:** This set contains small parts that may pose a choking hazard for young children. Keep out of reach of children under 3 years old.

WHAT'S IN THE BOX

Verify that all components listed below are present in your package:

- Cup Suction Target (1)
- 29 Inch Dartboard (1)
- Light Up Bows (2)

- Shooting Guns (2)
- Suction Cup Arrows (20)
- Quivers (2)
- Soft Bullets (10 suction, 10 sticky)
- Sticky Darts (6)
- Sticky Balls (6)



Image: Overview of all included components in the VATOS 2 Pack Bow and Arrow Toy set.

SETUP

1. Bow Assembly and Battery Installation

1. Locate the battery compartment on each light-up bow.
2. Insert 2 AAA batteries into each bow, ensuring correct polarity.
3. Close the battery compartment securely.

4. To activate the LED lights, locate the light switch on the bow handle and slide it to the 'ON' position.

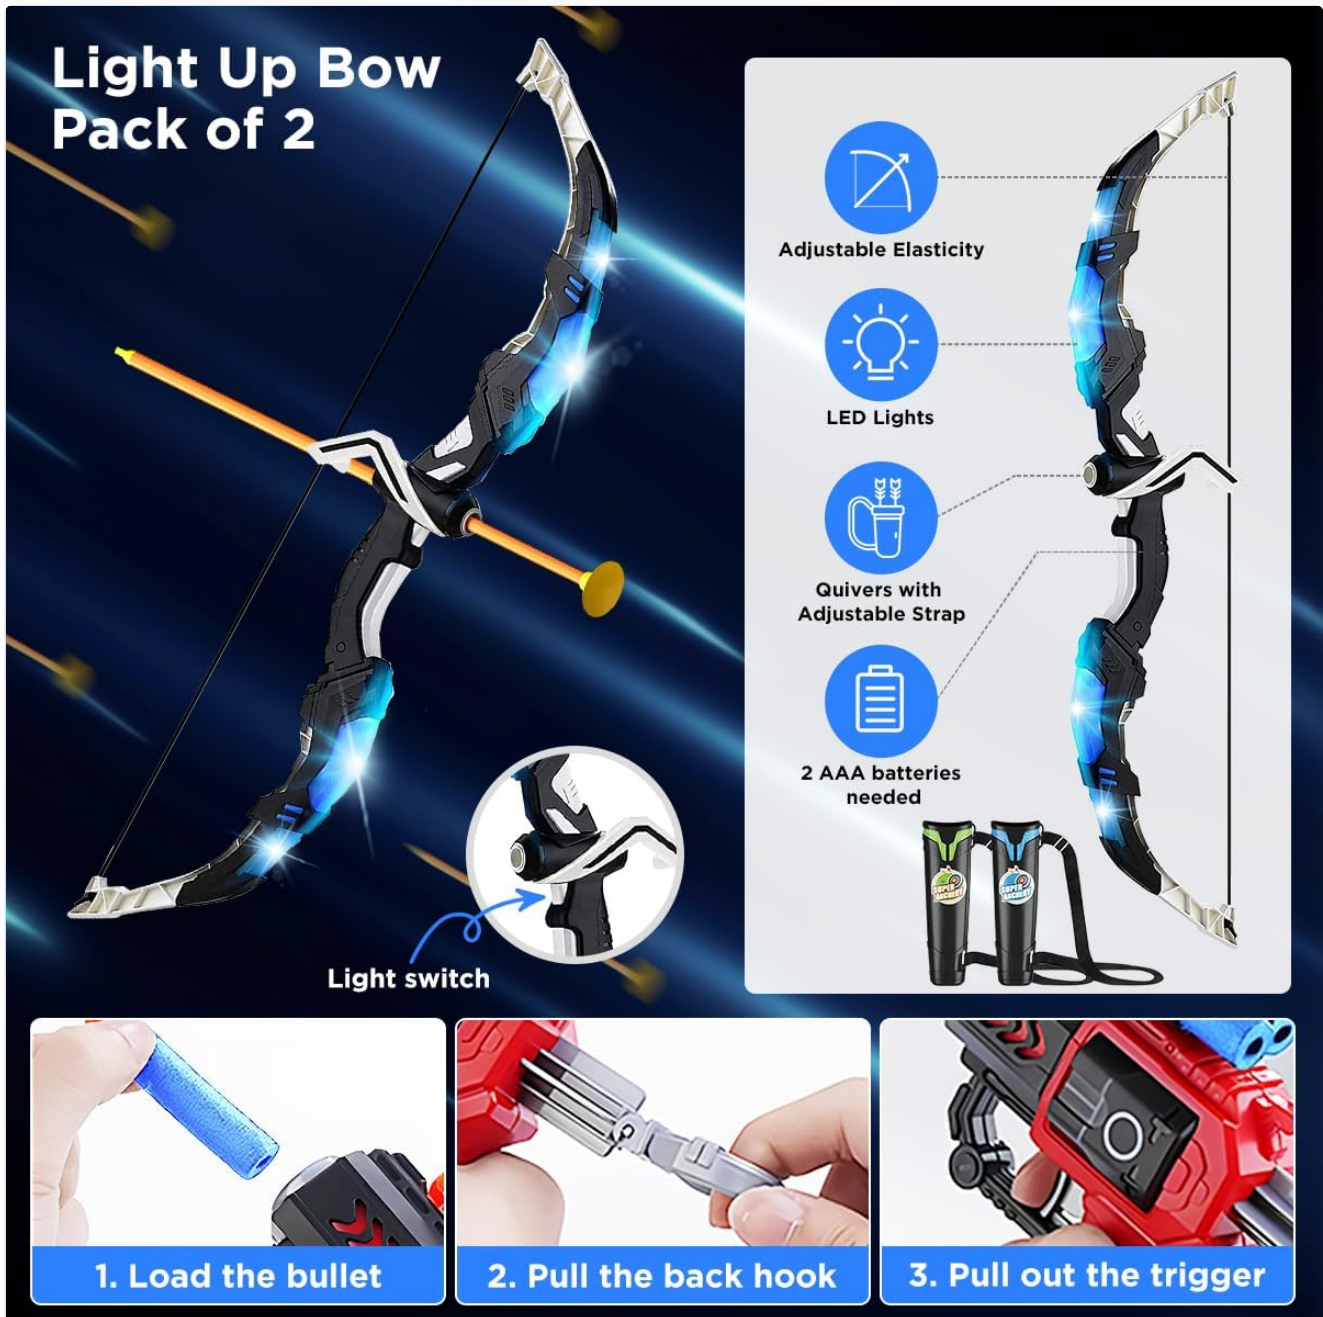


Image: Instructions for bow features, including battery installation for LED lights and loading steps for the shooting gun.

2. Target Assembly

1. For the standing cup suction target, connect the leg pieces as shown in the diagram, ensuring they click into place.
2. Attach the target board to the assembled stand.
3. The dartboard can be hung on a wall or placed on a flat surface using its integrated stand.

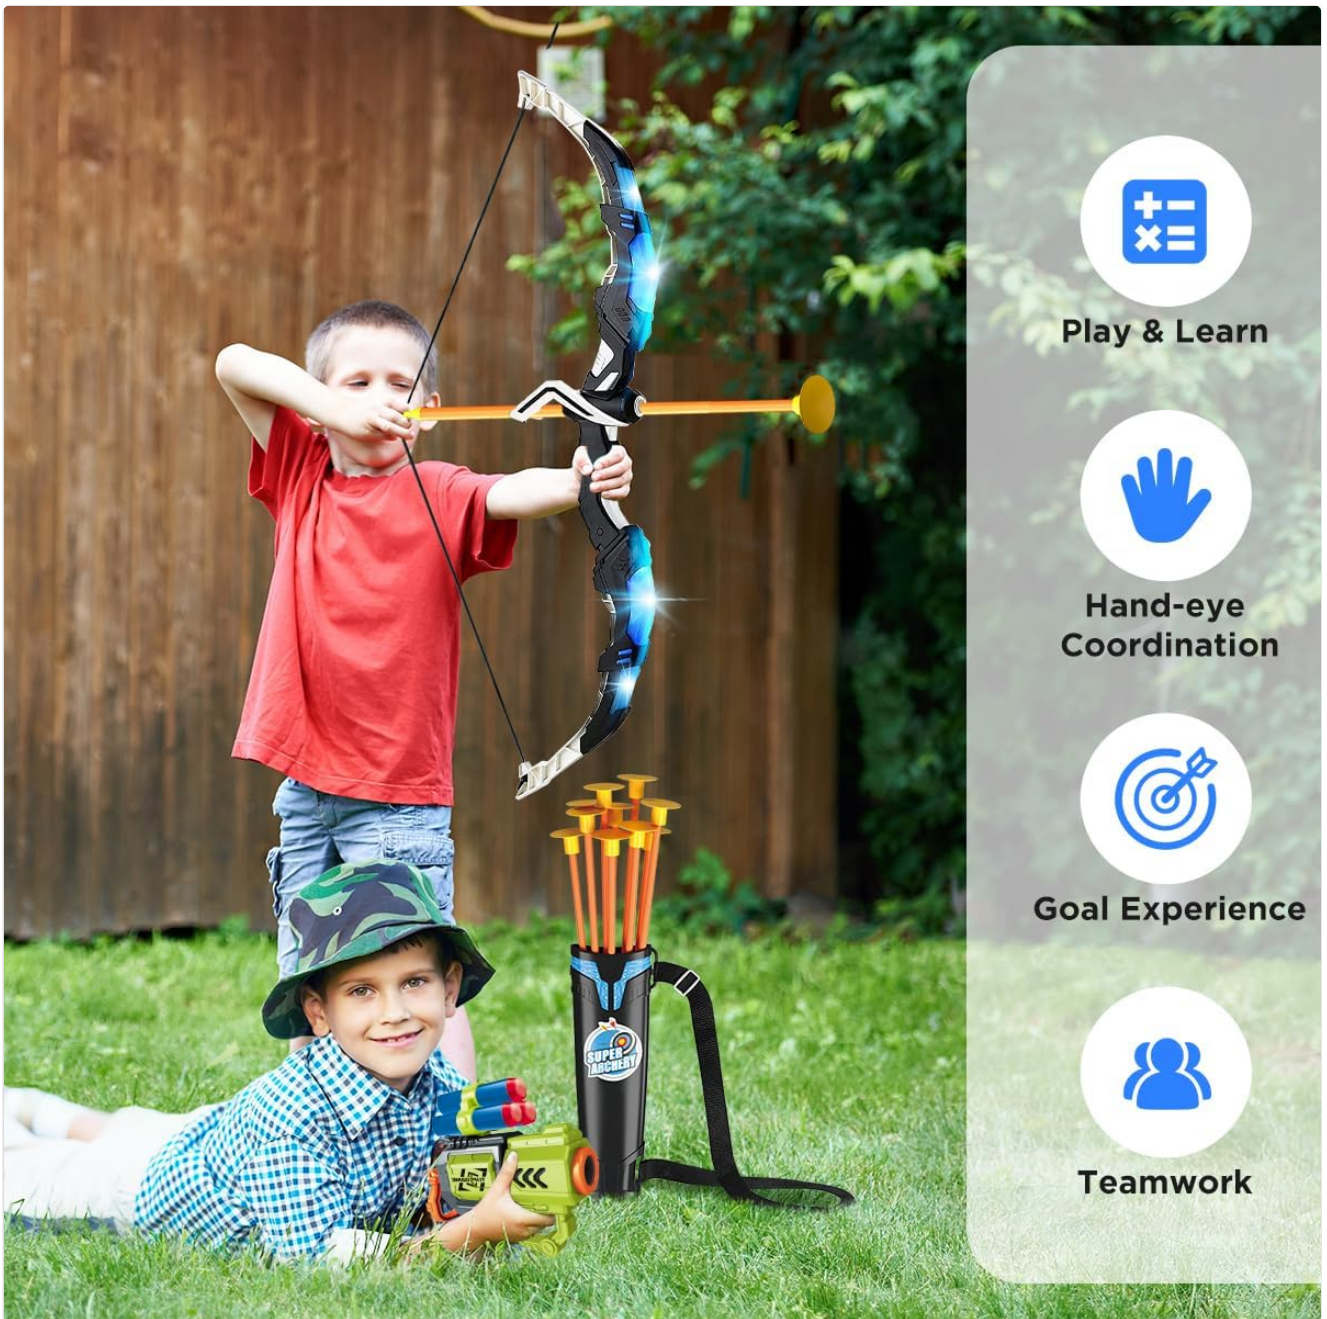


Image: Visual guide for assembling the standing target.

3. Quiver Setup

Attach the adjustable shoulder strap to each quiver for easy carrying of arrows.

OPERATING INSTRUCTIONS

1. Using the Light-Up Bow and Suction Cup Arrows

1. Ensure the bow's LED lights are switched on (if desired).
2. Place a suction cup arrow onto the bowstring, resting the arrow shaft on the arrow rest.
3. Hold the bow firmly with one hand and pull the bowstring back with the other, aiming at the cup suction target.
4. Release the bowstring to launch the arrow.

Target for Shooting with Suction Cups



Hanging

Standing

Image: Demonstrates using the bow with the standing target and the shooting gun with the hanging target.

2. Using the Shooting Gun and Foam Darts

1. Load a foam dart into the barrel of the shooting gun.
2. Pull back the priming mechanism (hook) until it locks into place.
3. Aim the gun at a target and pull the trigger to fire the dart.

3. Using the Dartboard with Sticky Darts and Sticky Balls

1. Set up the 29-inch dartboard on a flat surface or hang it securely.
2. For sticky darts, hold the dart by the shaft and throw it towards the dartboard, aiming for desired scores.
3. For sticky balls, throw them directly at the dartboard.



Image: Demonstrates various ways to use the dartboard, including with sticky balls and foam darts from the shooting gun.

MAINTENANCE

- **Cleaning:** Wipe all plastic components with a damp cloth. Do not immerse electronic parts (bows) in water.
- **Arrow Tips:** Keep suction cup arrow tips clean and free of dust for optimal sticking performance.
- **Storage:** Store the toy set in a cool, dry place away from direct sunlight when not in use. Remove batteries from the bows if storing for extended periods to prevent leakage.

TROUBLESHOOTING

- **Bow Lights Not Working:** Check if the light switch is in the 'ON' position. Replace AAA batteries if they are depleted. Ensure batteries are inserted with correct polarity.
- **Arrows Not Sticking:** Ensure the suction cup tips are clean and free of debris. The target surface should also be clean and smooth.
- **Shooting Gun Not Firing:** Ensure the foam dart is fully loaded and the priming mechanism is pulled back

completely until it locks.

SPECIFICATIONS

Feature	Detail
Product Dimensions	16.5 x 13 x 5.5 inches
Item Weight	3.98 pounds
Model Number	988-686A1
Manufacturer	VATOS
Bow Power Source	2 x AAA batteries (per bow, not included)



Image: Detailed dimensions of the toy components.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact VATOS customer service directly through their official website or the retailer where the product was purchased. Please have your model number (988-686A1) and proof of purchase available.