

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SXHY](#) /

› [SXHY YXP-UK09A Handheld Steam Cleaner User Manual](#)

SXHY YXP-UK09A

SXHY YXP-UK09A Handheld Steam Cleaner User Manual

1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your SXHY YXP-UK09A Handheld Steam Cleaner. Please read these instructions thoroughly before first use and retain for future reference. This device is designed for multipurpose cleaning tasks around the home, utilizing high-temperature steam for chemical-free sanitization.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the steam cleaner is unplugged before filling with water or performing maintenance.
- Do not direct steam at people, pets, or electrical appliances. Steam is extremely hot and can cause burns.
- Keep the device out of reach of children and pets.
- Use only clean tap water. Do not add cleaning solutions, perfumes, or other chemicals to the water tank, as this can damage the unit and void the warranty.
- Never immerse the steam cleaner in water or other liquids.
- Exercise caution when opening the water tank cap, as residual steam may escape.
- Ensure the water tank cap is securely tightened before operating the device.
- Do not operate the steam cleaner if the cord or plug is damaged.
- Allow the unit to cool completely before storing.

3. PRODUCT COMPONENTS AND ACCESSORIES

Your SXHY YXP-UK09A Handheld Steam Cleaner comes with a comprehensive 11-piece accessory kit designed for various cleaning tasks:

- **Angled Nozzle:** For concentrated steam application in tight spaces.
- **Soft Pipe:** Extends reach for hard-to-access areas.
- **Nozzle with Brush:** Combines steam with scrubbing action.
- **Fabric Steamer Tool:** For steaming garments and upholstery.
- **Rubber Wiper for Window/Door:** For streak-free cleaning of glass and smooth surfaces.
- **Microfiber Cloth:** For wiping and polishing.
- **Nylon Brushes (x2):** For general scrubbing on various surfaces.
- **Brass Brushes (x2):** For tough grime on durable, heat-resistant surfaces.
- **Funnel:** Aids in easy water refilling.
- **Measuring Cup:** For precise water measurement.



Image 1: The SXHY Handheld Steam Cleaner shown with its complete 11-piece accessory kit.

START STEAMING



Disinfection



High temperature



Principle of operation

When the oil or dirty thing meet high temperature, it will easy drop from the surface. So do not let the nozzle or accessories leave target too far. The steam will become cold and can not clean well. Please let the nozzle close for 5-10mm from the target that you want to clean.

Image 2: A visual breakdown of the 11 included accessories, each numbered for easy identification.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Fill Water Tank:** Unscrew the safety cap. Use the provided measuring cup and funnel to fill the water tank with up to 400ml of clean tap water. Do not overfill. The transparent tank allows you to monitor the water level.
3. **Secure Cap:** Replace the safety cap and twist firmly until it is securely closed.
4. **Attach Accessory:** Select the appropriate accessory for your cleaning task and securely attach it to the nozzle.
5. **Power On:** Plug the steam cleaner into a grounded electrical outlet. The indicator light will illuminate, signaling that the unit is heating up.
6. **Heat Up:** Allow approximately 3-5 minutes for the water to heat and steam to be ready. The indicator light may change or turn off when ready, depending on the model.

UNLIMITED USE TIME

Add **Water** Anytime During Use



Image 3: Illustrates the process of filling the water tank using the provided measuring cup and funnel.

5. OPERATING INSTRUCTIONS

- 1. Initiate Steam:** Once the unit is heated (indicator light ready), press and hold the steam trigger to release steam.
- 2. Continuous Steam Lock:** For extended cleaning, press the steam lock button (located near the trigger) while holding the trigger. Release the trigger, and steam will continue to flow automatically, freeing your hand. To stop continuous steam, simply press the steam lock button again.
- 3. Cleaning Technique:** Direct the steam nozzle close to the surface you wish to clean. For optimal results, keep the nozzle 5-10mm from the target. The high temperature steam (up to 230°F / 110°C) effectively loosens dirt, grime, and grease.
- 4. Wipe Clean:** After steaming, wipe the treated surface with a clean cloth to remove loosened debris and moisture.
- 5. Refilling During Use:** The SXHY YXP-UK09A allows for continuous use. If the water level is low, you can safely unscrew the cap and refill the tank while the unit is still warm, without waiting for it to cool down completely. This ensures unlimited cleaning time.
- 6. Power Off:** When finished, release the steam trigger (if using manually) or disengage the steam lock. Unplug the unit from the power outlet.

HANDS-FREE STEAMING

No need to keep pushing buttons,
no more hand fatigue



Image 4: Demonstrates the hands-free steaming feature, allowing for continuous steam without holding the trigger.

Please press down the steam lock first, at the same time, press the steam button. Than steam come out directly.

● You can only press the steam button success before you press steam lock first.



When you want to stop the steam, just press up the steam lock, steam will be stopped immediately.

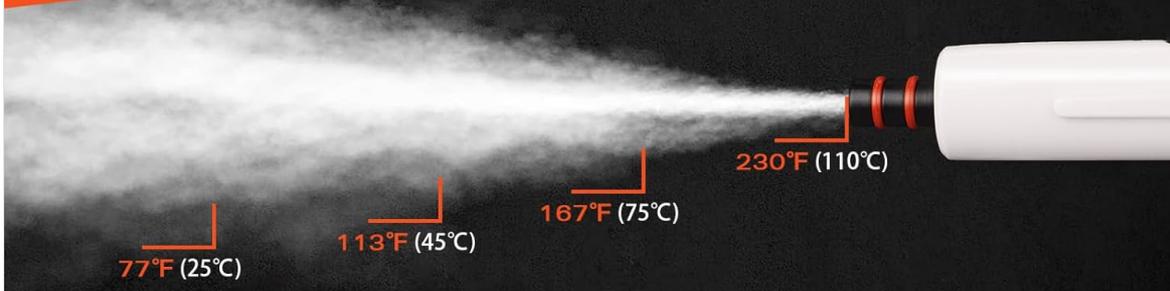


Image 5: Visual guide on how to activate and deactivate the steam lock button for continuous steam.

230°F(110°C)

**HIGH TEMPERATURE
STEAM CLEANER**

Cleans & sanitizes eliminates **99.9%** of germs & bacteria



Aim the steam cleaner at the stains as close as possible for better cleaning effect.

Image 6: Illustrates the high-temperature steam output and its effectiveness in cleaning and sanitizing surfaces.



Big nozzle+brush

Big nozzle

Big nozzle+Glass brush

Big nozzle+Flate brush

Soft pipe

Brush+Big nozzle+Ironing towel

Image 7: Examples of the steam cleaner's versatility with different accessories for various cleaning applications.

6. MAINTENANCE

- **Empty Water Tank:** After each use, ensure the unit is unplugged and cooled. Carefully unscrew the safety cap and empty any remaining water from the tank.
- **Clean Accessories:** Wash removable accessories with mild soap and water. Allow them to air dry completely before storing.
- **Wipe Down Unit:** Wipe the exterior of the steam cleaner with a damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling (Periodically):** Depending on water hardness, mineral deposits may build up. To descale, fill the tank with a mixture of 50% water and 50% white vinegar. Operate the unit until half the solution is used, then turn off and let it sit for 30 minutes. Empty the tank, rinse thoroughly with fresh water, and operate with fresh water to flush out any residue.
- **Storage:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank is empty or low. Unit not heated sufficiently. Nozzle clogged.	Refill water tank. Allow 3-5 minutes for heating. Clean nozzle with a small brush or pin.
Water leaking from nozzle.	Unit not fully heated. Condensation build-up.	Allow more time for heating until steam is consistent. This is normal during initial use or after pauses.
Indicator light not illuminating.	Unit not plugged in. Power outlet malfunction.	Ensure power cord is securely plugged in. Test with a different outlet.
Steam is not hot enough.	Unit not fully heated.	Wait for the unit to reach full operating temperature (indicator light ready).

8. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	SXHY
Model Name	YXP-UK09A
Wattage	1800 watts
Item Weight	4.11 Pounds
Tank Volume	400 Milliliters
Power Source	Corded Electric
Voltage	120V
Maximum Temperature	230 Degrees Fahrenheit (110 Degrees Celsius)
Product Dimensions	12.6 x 4.72 x 9.84 inches

9. WARRANTY AND SUPPORT

For any product-related inquiries, technical support, or warranty claims, please contact SXHY customer service through the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

Optional protection plans may be available for purchase from your retailer, offering extended coverage beyond the manufacturer's warranty. Please refer to the terms and conditions of any such plans for details.