

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sunnydaze](#) /

› [Sunnydaze Outdoor Gazing Globe Stand Instruction Manual](#)

## Sunnydaze ZIB-874

# Sunnydaze Outdoor Gazing Globe Stand

Model: ZIB-874

## INTRODUCTION

This instruction manual provides detailed guidance for the assembly, installation, use, and maintenance of your Sunnydaze Outdoor Gazing Globe Stand. Please read all instructions carefully before proceeding with assembly and installation to ensure proper setup and safe operation.





An image of the complete Sunnydaze Outdoor Gazing Globe Stand, featuring its black finish and three-pronged base.

## SETUP

---

- 1. Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present and undamaged.
- 2. Assemble Stand Sections:** The garden globe stand consists of multiple sections. Twist each section together tightly until securely connected.
- 3. Select Installation Location:** Choose a location in your yard, flower bed, garden, or patio that has sturdy ground. Avoid loose soil or uneven surfaces to ensure proper support and stability for the stand and gazing globe.
- 4. Install into Ground:** Press the three prongs at the base of the stand firmly into the selected ground. Ensure the stand is level and stable.
- 5. Place Gazing Globe:** Once the stand is securely installed, carefully place your gazing globe (not

included) onto the stem holder at the top of the stand. The stand is designed to accommodate gazing globes with a diameter of 8 to 12 inches and a stem diameter of 2.25 inches or less.





A detailed view of the three sturdy prongs at the base of the stand, designed for in-ground stability.

## OPERATING INSTRUCTIONS

After successful assembly and installation, the gazing globe stand is ready for use. Ensure the gazing globe is securely seated in the holder to prevent accidental dislodgement. The stand provides a stable base to display your decorative gazing globe in various outdoor settings.



The gazing globe stand installed in a garden setting, showcasing how it appears with a gazing ball (not included) placed on top, surrounded by plants.



An overhead view of the globe holder section, showing the circular support structure and the central stem holder where the gazing ball rests.

## MAINTENANCE

---

- **Cleaning:** Wipe the stand with a soft, damp cloth as needed to remove dirt and debris. Avoid abrasive cleaners that may damage the finish.
- **Inspection:** Periodically inspect the stand for any signs of wear, rust, or damage. Ensure all sections remain tightly connected and the prongs are firmly in the ground.
- **Weather Resistance:** The stand is constructed from durable steel with a black finish designed to withstand most weather conditions. However, prolonged exposure to extreme weather may affect its appearance over time.

## TROUBLESHOOTING

---

- **Stand is Wobbly:**

- Ensure the prongs are fully and firmly staked into solid, compact ground.
- Verify that all threaded sections of the stand are twisted together tightly.
- If the ground is too loose, consider relocating the stand to a more stable area or compacting the soil around the prongs.

- **Gazing Globe Does Not Fit:**

- Confirm that your gazing globe has a diameter between 8 and 12 inches.
- Ensure the stem of your gazing globe is 2.25 inches in diameter or less to fit into the holder.


- **Stand Appears to be Leaning:**

- Remove the gazing globe and carefully pull the stand out of the ground.
- Re-install the stand, ensuring it is inserted vertically into level ground.

## SPECIFICATIONS

---

Feature	Detail
Overall Dimensions	5.25" W x 5.25" D x 24" H
Stem Holder Dimensions	2.25" diameter x 2" H
Prong Length	3.75" L
Item Weight	1 lb (16 ounces)
Weight Capacity	30 lbs
Material	Alloy Steel
Finish	Black
Special Feature	Weather-Resistant
Assembly Required	Yes
Compatible Globe Size	8" to 12" diameter
Compatible Globe Stem	2.5" diameter or less

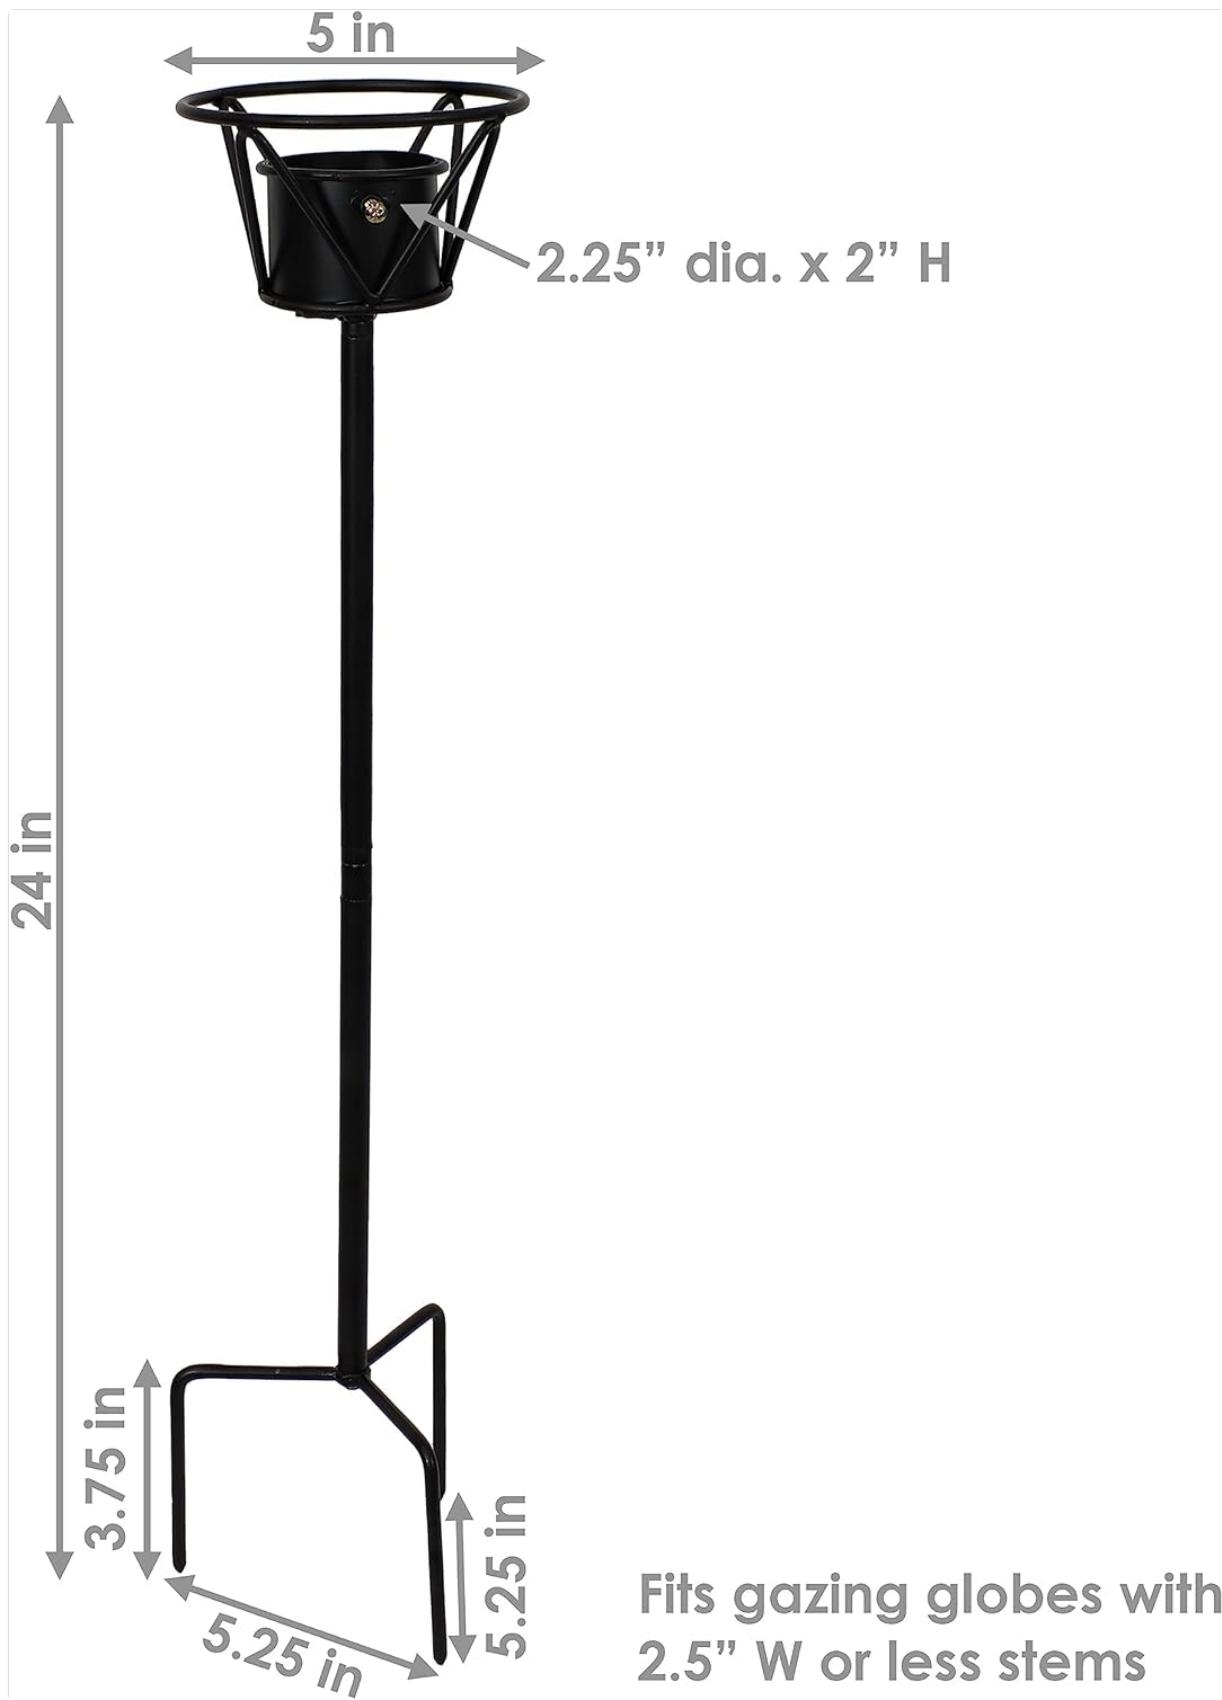

A diagram illustrating the key dimensions of the gazing globe stand, including its overall height of 24 inches, base width of 5.25 inches, and stem holder diameter of 2.25 inches.

## WARRANTY AND SUPPORT

Sunnydaze Decor provides a **1-year manufacturer's warranty** for this product. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or any questions regarding your Sunnydaze Outdoor Gazing

Globe Stand, please contact Sunnydaze Decor customer service. You can find more information and contact details on the official Sunnydaze Decor website: [Sunnydaze Decor Store](#).