

[manuals.plus](#) /› [Electrolux](#) /› [Electrolux Rechargeable Fabric Shaver LX-300R Instruction Manual](#)

## Electrolux LX-300R

# Electrolux Rechargeable Fabric Shaver

**MODEL: LX-300R**

Brand: Electrolux

## 1. Product Overview & Features


The Electrolux Rechargeable Fabric Shaver LX-300R is designed to efficiently remove fuzz, lint, and pilling from various fabrics, restoring their fresh appearance. Its ergonomic design and advanced features ensure effective and safe fabric care.

- **Adjustable 3-Speed Precision:** Features three adjustable speed settings to adapt to delicate fabrics (Speed 1 for silk, cashmere), medium fabrics (Speed 2 for sweaters, knits), and durable upholstery (Speed 3 for sofas & furniture).
- **Rechargeable with Type-C Fast Charging:** Powered by a 2000mAh lithium-ion battery, offering up to 180 minutes of use on a single charge. The Type-C charging port ensures faster, more convenient recharging.
- **User-Friendly LED Display:** A smart LED screen shows battery life, current speed level, and charging status at a glance.
- **Premium Fabric Care:** Engineered for performance and durability with ultra-sharp stainless steel blades for snag-free removal of lint, pills, and fuzz.

STAINLESS STEEL  
6-LEAF BLADES

# Power Meets Precision

High-torque motor delivers smooth,  
consistent performance

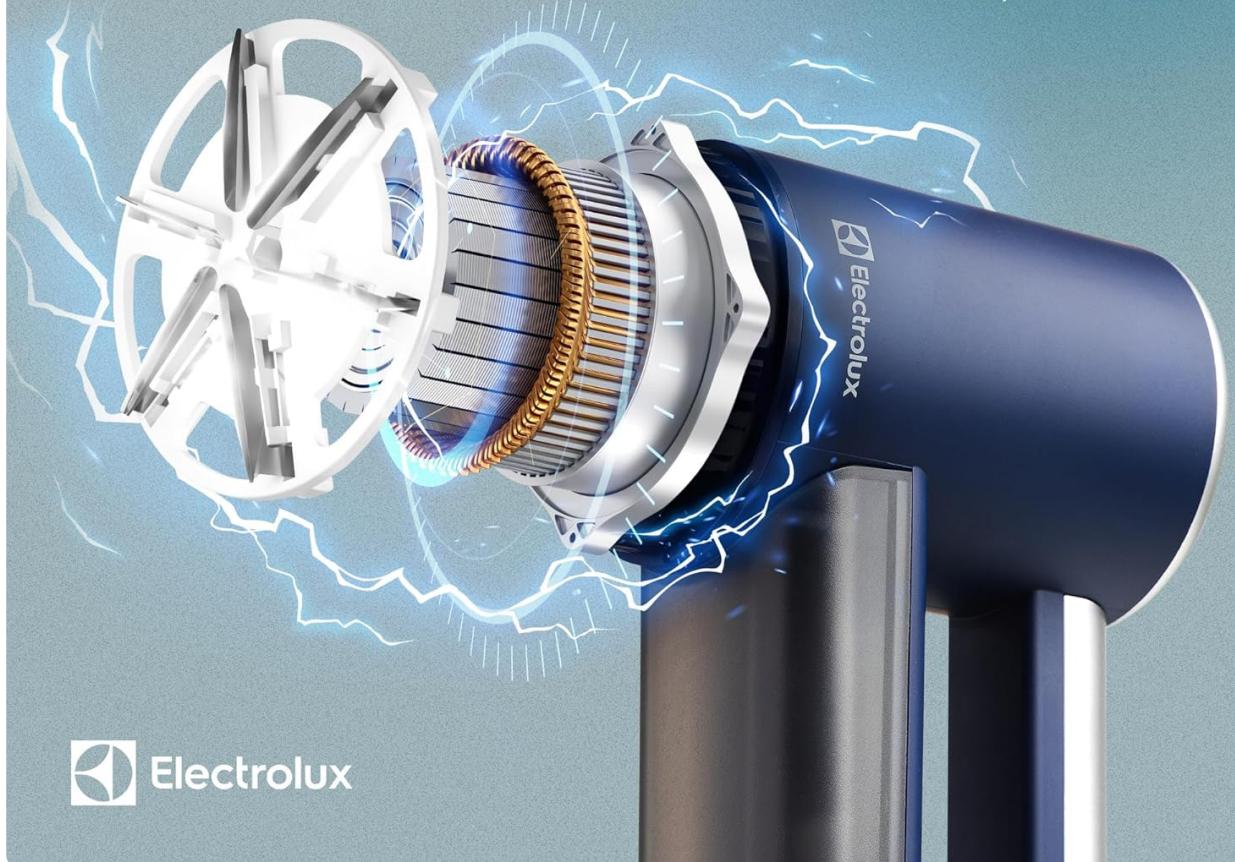

 Electrolux

Image: Internal view of the Electrolux Fabric Shaver, highlighting its stainless steel 6-leaf blades and high-torque motor for precise and consistent performance.

## 2. Package Contents

Your Electrolux Rechargeable Fabric Shaver package includes everything needed for comprehensive fabric care:

- Electrolux Rechargeable Fabric Shaver (LX-300R)
- Extra Blade Set
- Cleaning Brush
- USB-C Charging Cable
- Blade Protector/Cover
- Stylish Storage Case

# Complete Kit for Fabric Care

Fabric Shaver

Extra Blades

Cleaning Brush

USB-C Cable

Blade Protector

Storage Case



Image: The complete Electrolux Fabric Shaver kit, showcasing the shaver itself along with all included accessories: extra blades, cleaning brush, USB-C cable, blade protector, and a storage case.

## 3. Safety Instructions

- Keep out of reach of children.
- Do not use on wet fabrics. Ensure fabrics are completely dry before use.
- Avoid pressing too hard on the fabric to prevent damage.
- Always place the protective cover over the blades when not in use or during storage.
- Do not disassemble the unit beyond recommended maintenance steps.
- Use only the provided USB-C cable for charging.

## 4. Setup

Before first use, fully charge your fabric shaver.

1. Connect the provided USB-C charging cable to the charging port located at the bottom of the shaver.
2. Plug the other end of the USB-C cable into a compatible USB power adapter (not included) or a computer USB port.
3. The LED display will indicate the charging status. A full charge typically takes approximately 3 hours and provides up to 180 minutes of use.

# Cordless Convenience Fast Charging



**LONG-LASTING  
2000mAh  
RECHARGEABLE  
BATTERY**

**3-HOUR FULL CHARGE  
= UP TO 120-180  
MINUTES OF USE**

**USB-C FAST  
CHARGING FOR  
ON-THE-GO POWER**

Image: The Electrolux Fabric Shaver's LED display showing a full 100% battery charge, highlighting its cordless convenience and fast Type-C charging capability.

## 5. Operating Instructions

Follow these steps to effectively remove lint and pilling from your fabrics:

1. **Prepare the Fabric:** Lay the garment or fabric item flat on a hard, smooth surface. Ensure the fabric is taut and free of wrinkles.
2. **Power On & Select Speed:** Press the power button on the shaver. The LED display will light up. Press

the power button again to cycle through the three speed settings (Speed 1 for delicate, Speed 2 for medium, Speed 3 for tough fabrics). Choose the appropriate speed for your fabric type.

3. **Glide Gently:** Gently move the shaver over the affected area in a circular motion or back and forth. Do not press down too hard. Allow the blades to do the work.
4. **Monitor Progress:** Observe the fabric as you work. The shaver will collect lint and fuzz in its transparent collector bin.
5. **Power Off:** Once finished, press the power button until the device turns off. Replace the protective blade cover.

The image shows a close-up of a person using the Electrolux Fabric Shaver on a grey and green garment. The shaver is dark blue with a digital display showing '00'. Below the image, five circular icons represent different items: Socks, Sweaters, Coats, Bedding, and Cloth Furniture. The text 'Restore. Refresh. Revive' is prominently displayed at the bottom, followed by the tagline 'Renews tired fabrics and removes years of wear in minutes'.

**Electrolux**

Socks      Sweaters      Coats      Bedding      Cloth Furniture

Restore. Refresh. Revive

Renews tired fabrics and removes years of wear in minutes

Image: The Electrolux Fabric Shaver in action on a sweater, illustrating its versatility across various items like socks, sweaters, coats, bedding, and cloth furniture to restore, refresh, and revive fabrics.

# Custom Care For Every Fabric



## SPEED 1

Delicates (silk, cashmere)



## SPEED 2

Medium fabrics (sweaters, knits)



## SPEED 3

Tough textiles (sofas & furniture)



Image: The Electrolux Fabric Shaver highlighting its custom care for every fabric with three speed settings: Speed 1 for delicates (silk, cashmere), Speed 2 for medium fabrics (sweaters, knits), and Speed 3 for tough textiles (sofas & furniture).

## Official Product Demos

Video: A demonstration titled "Does This Actually Work???Let Me Show You!!!!" by Sheira Family Adventures, showcasing the Electrolux Fabric Shaver's effectiveness.

Video: A full review and product demo of the Electrolux Fabric Shaver by Taylor Landis.

Video: An in-depth review and demo of the Electrolux Rechargeable Fabric Shaver by That's So Nia.

Video: A user trying out the rechargeable fabric shaver for home use, presented by Tetiana Rozhanska Amazon Cozy Finds .

Video: A short clip titled "Works like a charm." by Alfred A. Arvizu, demonstrating the fabric shaver's effectiveness.

Video: A closer look with a demo of the Electrolux Fabric Shaver by Why should you buy?.

Video: A short review titled "Worth Every Penny" by Gina, demonstrating the fabric shaver.

Video: A detailed overview of the Electrolux Rechargeable Fabric Shaver by Britephase.

Video: A review titled "DON'T GET RID OF IT-Saving my Sweaters from the Donation Center" by Simply Reviewed, demonstrating the fabric shaver's ability to restore garments.

## 6. Maintenance

Regular maintenance ensures optimal performance and longevity of your fabric shaver.

- Emptying the Lint Collector:** The oversized collector bin prevents clogs. To empty, gently slide off the transparent lint collector from the handle. Dispose of the collected lint.
- Cleaning the Blades:** Use the provided cleaning brush to remove any trapped lint or debris from the blades and the protective mesh. Ensure the device is turned off and unplugged before cleaning.
- Blade Replacement:** If the blades become dull or damaged, replace them with the extra blade set included in your package. Carefully remove the old blades and insert the new ones, ensuring they are securely in place.



Image: The Electrolux Fabric Shaver demonstrating its oversized collector bin and quick-release design for easy emptying, promoting clean and efficient use.

## 7. Troubleshooting

- **Device not turning on:** Ensure the device is fully charged. If the battery is low, connect it to the Type-C charger.
- **Ineffective lint removal:** Check if the lint collector is full and needs emptying. Ensure the blades are clean and not dull. Replace blades if necessary.
- **Fabric damage:** Ensure you are using the correct speed setting for the fabric type and not applying excessive pressure.

## 8. Specifications

|                                 |  |
|---------------------------------|--|
| <b>Brand</b>                    | Electrolux                                 |
| <b>Model Number</b>             | LX-300R                                    |
| <b>Color</b>                    | Blue                                       |
| <b>Material</b>                 | Stainless Steel (Blades), Plastic (Handle) |
| <b>Operation Mode</b>           | Semi-Automatic                             |
| <b>Battery</b>                  | 2000mAh Lithium-ion (Rechargeable)         |
| <b>Charging Port</b>            | Type-C                                     |
| <b>Usage Time (Full Charge)</b> | Up to 180 minutes                          |
| <b>Product Dimensions</b>       | 8 x 6.4 x 3.7 inches                       |
| <b>Item Weight</b>              | 1.34 pounds                                |
| <b>UPC</b>                      | 850039796029                               |

## 9. Warranty

Please refer to the warranty information provided in your product packaging or contact Electrolux customer support for details regarding your product's warranty coverage.

## 10. Support

For further assistance, troubleshooting, or to purchase replacement parts, please visit the official Electrolux website or contact their customer service department. Contact information can be found in your product's documentation.

