

[Manuals.plus](#) /

› [Topsand](#) /

› Topsand N8 Android 13 Tablet User Manual

Topsand N8

Topsand N8 Android 13 Tablet User Manual

Model: N8

INTRODUCTION

Welcome to the user manual for your new Topsand N8 Android 13 Tablet. This guide provides essential information to help you set up, operate, maintain, and troubleshoot your device. The Topsand N8 is an 8-inch tablet featuring a quad-core 2.0 GHz processor, 64GB of internal storage expandable up to 1TB, dual auto-focus cameras, Face ID unlock, GPS, and support for 2.4G & 5G WiFi. It runs on the latest Android 13 operating system, offering enhanced privacy, customization, and tablet-optimized features.

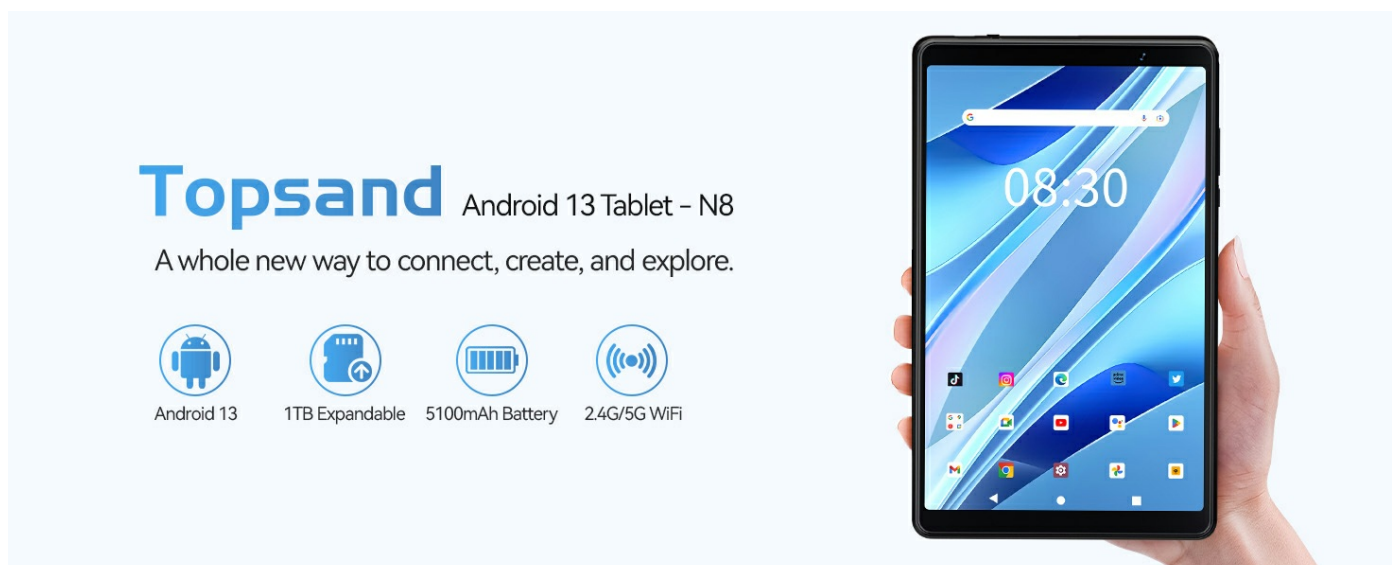 


Image: Overview of the Topsand N8 Android 13 Tablet highlighting its key features.

WHAT'S IN THE BOX

Please check the contents of your package to ensure all items are present:

- 1 x Topsand N8 8 Inch Android 13 Tablet
- 1 x Power Adapter
- 1 x Charging Cable
- 1 x Quick Guide Manual



Image: Visual representation of the tablet, its layout, and the items included in the box.

PRODUCT LAYOUT

Familiarize yourself with the physical components and ports of your Topsand N8 tablet:

No.	Component
1	USB-C Port
2	Memory Card Tray
3	Rear Camera
4	Flash Light
5	Microphone
6	Front Camera
7	Volume+ Button
8	Volume- Button
9	Forced Shutdown Pinhole
10	Power On/Off Button
11	Speakers
12	Headphone Jack

SETUP

1. Initial Power On

Press and hold the **Power On/Off Button** (10) located on the side of the tablet until the Topsand logo appears on the screen. The tablet will then boot up to the Android setup wizard.

2. Charging the Tablet

Before first use, it is recommended to fully charge your tablet. Connect the provided **Charging Cable** to the **USB-C Port** (1) on the tablet and the **Power Adapter** to a wall outlet. The battery indicator on the screen will show charging status. A full charge typically takes less than 3 hours.

3. Connecting to Wi-Fi

During the initial setup, you will be prompted to connect to a Wi-Fi network. Select your desired network from the list and enter the password if required. The Topsand N8 supports both 2.4G and 5G WiFi for stable and fast connectivity.

4. Google Account Setup

Sign in with your Google account or create a new one. This is necessary to access the Google Play Store for apps, synchronize data, and utilize Google services.

5. Storage Expansion

The tablet comes with 64GB of internal storage. If you require more space, you can expand it up to 1TB using a microSD card. Insert the microSD card into the **Memory Card Tray** (2).

OPERATING THE TABLET

Basic Navigation (Android 13)

The Topsand N8 runs on Android 13, offering an intuitive user experience. Navigate using gestures or the on-screen navigation bar. Swipe down from the top for quick settings and notifications. Swipe up from the bottom to access the app drawer.

Blazing Fast Performance

Experience seamless multitasking and lightning speed

2.0GHz

Quad-Core

12nm

Process

3GB

RAM

64GB

ROM

1TB

Expandable



Image: The tablet showcasing its Android 13 interface and multitasking capabilities.

Display Modes

The 8-inch 1280x800 display offers three customizable modes to suit your viewing needs:

- **Normal Mode:** Provides vibrant colors and optimal clarity for general use.
- **Eye Protection Mode:** Filters out harmful blue light, reducing eye strain during prolonged use.
- **Read Mode:** Adjusts the display to mimic the appearance of a book, ideal for reading e-books.

A Big-sized Kindle, But More Than That

Freely switch between 3 display modes to meet your diverse needs.

The versatile N8 tablet offers customizable display settings to cater to your specific tasks or preferences. Its ergonomic design guarantees a comfortable viewing experience, even during extended periods of use. Whether you're using it in low-light conditions, watching videos, browsing the internet, or indulging in long reading sessions, this tablet provides various display modes to suit different needs.

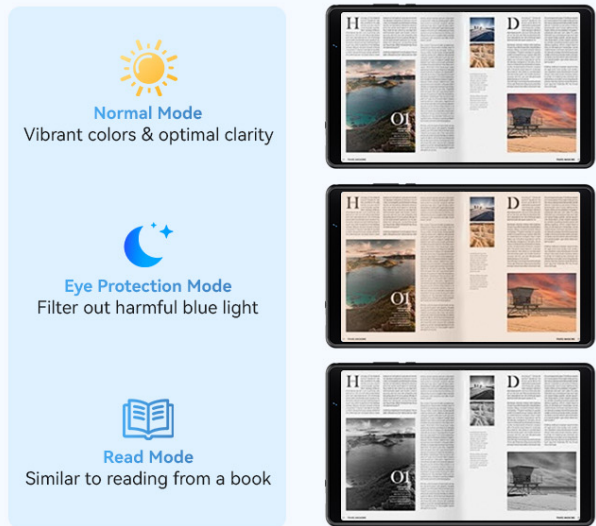 


Image: Illustration of the tablet's various display modes for different viewing preferences.

Camera Usage

The tablet features a 2MP front camera (6) and an 8MP auto-focus rear camera (3). Use the camera app to capture photos and videos. The Face ID unlock feature uses the front camera for secure access.

Capture Life's Moments

Instantly preserve life's special moments in stunning clarity



Face ID

- **2MP** Front Camera

Auto Focus

- **8MP** Rear Camera



Image: Demonstrates the Face ID feature and the tablet's dual cameras for capturing moments.

Parental Controls

The Topsand N8 supports parental control features through the Family Link app. This allows you to filter content, manage screen time, supervise remotely, and monitor user location for peace of mind.

Worry-Free Parental Controls

Easily follow up your child's activity for peace of mind



Filter content



Time management



Remote supervision



User location



Note: You can access these helpful features through the Family Link app.

Image: A child using the tablet, illustrating the availability of parental control features.

Screen Mirroring / Wireless Projection

Easily mirror your tablet's content to a smart TV or projector using wireless projection. This feature is ideal for presentations, video calls, or enjoying media on a larger screen. Ensure both devices are connected to the same Wi-Fi network.

Size up the Screen

Easily mirror your tablet content to smart TV screen when needed.

Powered by advanced dual-band WiFi technology, this N8 tablet ensures a lightning-fast and stable wireless connection. Whether watching a presentation, taking video conferences, or watching movies, casting your screen seamlessly becomes effortless. Simply connect the tablet to a TV, projector, or any compatible device for higher-definition streaming.



Wireless projection



2.4GHz & 5GHz WiFi



Screen recording



Image: The tablet's screen mirroring capability demonstrated in a professional setting.

Battery Management


The Topsand N8 is equipped with a robust 5100mAh battery, providing up to 8 hours of continuous entertainment. Battery life can vary based on usage and configuration. To optimize battery life, reduce screen brightness, close unused apps, and disable Wi-Fi or Bluetooth when not in use.

Endless Power, Perfectly Portable

Never lose power on the go with a 5100 mAh battery



5100mAh

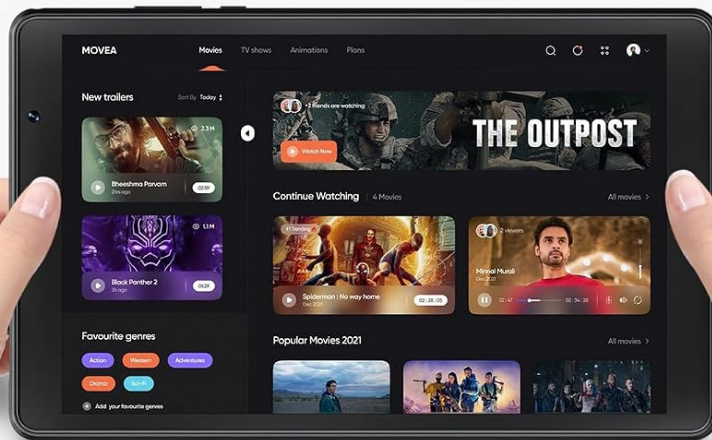

24 Hours Music



13 Hours Reading



7 Hours Video

Note: Battery life varies by use and configuration.

Image: Visual representation of the tablet's 5100mAh battery capacity and estimated usage times.

MAINTENANCE

Cleaning

To clean your tablet, use a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid using harsh chemicals or abrasive materials, as they can damage the screen and finish.

Software Updates

Periodically check for system updates to ensure your tablet has the latest features, security patches, and performance improvements. You can usually find this option in the Settings menu under 'System' or 'About tablet'.

Storage Management

Regularly manage your tablet's storage to maintain optimal performance. Delete unnecessary files, uninstall unused apps, and move large media files to external storage (microSD card) if applicable.

TROUBLESHOOTING

If you encounter issues with your Topsand N8 tablet, refer to the following common solutions:

- **Tablet is unresponsive:** Press and hold the Power On/Off button for about 10-15 seconds to force a restart. If this doesn't work, use a pin to press the **Forced Shutdown Pinhole** (9).
- **Cannot connect to Wi-Fi:** Ensure Wi-Fi is enabled in settings. Restart your router and the tablet. Verify the Wi-Fi password.
- **Apps are crashing or slow:** Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Ensure sufficient storage space is available.
- **Battery drains quickly:** Reduce screen brightness. Disable GPS, Bluetooth, and Wi-Fi when not in use. Close power-intensive applications.
- **Face ID not working:** Ensure you are in a well-lit environment. Clean the front camera lens. Re-register your Face ID if necessary.

For more complex issues or persistent problems, please contact Topsand customer support.

SPECIFICATIONS

Feature	Detail
Brand	Topsand
Model Name	N8 (Tablet for Adults)
Operating System	Android 13
Screen Size	8 Inches
Screen Resolution	1280x800 Pixels
Processor	2.0 GHz Quad-Core (Unisoc)
RAM	3 GB SDRAM DDR3
Internal Storage	64 GB
Expandable Storage	Up to 1 TB (Flash Memory Size)
Graphics Coprocessor	PowerVR Rogue GE8300
Wireless Type	802.11a/b/g/n/ac (2.4G & 5G WiFi)
Rear Webcam Resolution	8 MP (Auto-Focus)
Front Camera Resolution	2 MP
Battery	5100mAh Lithium Polymer (included)
Item Weight	1.46 pounds
Product Dimensions	8 x 4.9 x 0.33 inches

WARRANTY AND SUPPORT

Topsand stands firmly behind the quality of its products. Your Topsand N8 tablet comes with a **12-month**

comprehensive warranty and a **30-day money-back guarantee**. We also offer **24/7 U.S.-based customer support** to assist you with any questions or issues.

If you require assistance, please contact our customer support team. We aim to reply within 24 hours. If you do not hear back, please check your spam folder.



Image: Icons illustrating customer support, money-back guarantee, and warranty.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question