

Porodo PB-ARPD3-WH

Porodo Blue Deep Bass Wireless Earbuds 3 - User Manual

Model: PB-ARPD3-WH

INTRODUCTION

Thank you for choosing the Porodo Blue Deep Bass Wireless Earbuds 3. This manual provides essential information on how to set up, operate, and maintain your new wireless earbuds. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

SAFETY INFORMATION

To prevent damage to your earbuds or injury to yourself, please observe the following safety precautions:

- Do not expose the earbuds or charging case to extreme temperatures, humidity, or liquids.
- Avoid dropping, impacting, or disassembling the device.
- Do not use abrasive cleaners or harsh chemicals to clean the earbuds.
- Listen at moderate volume levels to prevent hearing damage. Prolonged exposure to loud sounds can cause permanent hearing loss.
- Keep out of reach of children and pets.
- The product is not water resistant. Avoid exposure to water or sweat.

PACKAGE CONTENTS

Please check the package for the following items:

- Porodo Blue Deep Bass Wireless Earbuds 3 (Left and Right)
- Charging Case
- Charging Cable
- User Manual



Image: Retail packaging of the Porodo Blue Deep Bass Wireless Earbuds 3, showing the earbuds and charging case on the front.

PRODUCT OVERVIEW



Image: The Porodo Blue Deep Bass Wireless Earbuds 3, white in color, resting inside their open charging case. A small LED indicator is visible on the front of the case.



Image: Individual Porodo Blue Deep Bass Wireless Earbuds 3, showing the 'L' for left and 'R' for right markings on their stems, indicating their respective sides.

The Porodo Blue Deep Bass Wireless Earbuds 3 feature a compact design with touch controls and a portable charging case. Each earbud is marked 'L' for left and 'R' for right for proper placement. The charging case includes an LED indicator to show charging status.



Image: Graphic illustrating key features of the Porodo Blue Deep Bass Wireless Earbuds 3, including Touch Control, Deep Bass, Wireless Charging, 20H Total Working Time, and Independent Earbuds functionality.

Key features include:

- **Touch Control:** Manage playback, calls, and voice assistant with simple taps.
- **Deep Bass:** Enhanced audio experience with rich bass.
- **Wireless Charging:** Convenient charging for the case.
- **20H Total Working Time:** Extended battery life with the charging case.
- **Independent Earbuds:** Use either earbud independently.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

- **Charging the Case:** Connect the charging cable to the charging port on the case and a USB power source. The LED indicator on the case will show charging status.
- **Charging the Earbuds:** Place the earbuds into the charging case. Ensure they are properly seated. The earbuds will automatically begin charging. The LED indicator on the case will confirm charging.

Note: For wireless charging, place the charging case on a compatible wireless charging pad.

2. Pairing with a Device

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode (indicated by a flashing LED on the earbuds or case).
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings.
4. Search for available devices and select "Porodo Blue Earbuds 3" (or similar name).
5. Once connected, the LED indicator will stop flashing, and you will hear a confirmation tone.

Note: The earbuds will automatically reconnect to the last paired device when taken out of the case, if Bluetooth is enabled on the device.

OPERATING INSTRUCTIONS

The Porodo Blue Deep Bass Wireless Earbuds 3 feature intuitive touch controls. The control functions are typically mirrored on both earbuds unless specified.

Power On/Off

- **Power On:** Open the charging case, or take the earbuds out of the case. They will power on automatically.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will power off automatically.

Music Playback Controls

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.

Call Management

- **Answer/End Call:** Single tap on either earbud during an incoming call or active call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.

Volume Control

- **Volume Up:** Triple tap on the right earbud.
- **Volume Down:** Triple tap on the left earbud.

Voice Assistant Activation

- **Activate Voice Assistant (Siri, Google Assistant, etc.):** Press and hold either earbud for 3 seconds.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your earbuds.

Cleaning

- Use a soft, dry, lint-free cloth to clean the earbuds and charging case.
- Do not use liquids, sprays, or chemical cleaners.
- Gently clean the charging contacts on both the earbuds and the case to ensure proper connection.

Storage

- When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Porodo Blue Deep Bass Wireless Earbuds 3, try the following solutions:

Problem	Solution
Earbuds not pairing/connecting	<ul style="list-style-type: none"> • Ensure earbuds and case are charged. • Turn off and on Bluetooth on your device. • Forget "Porodo Blue Earbuds 3" from your device's Bluetooth list and re-pair. • Place earbuds back in the case, close the lid, wait 10 seconds, then open to re-enter pairing mode.
No sound from one earbud	<ul style="list-style-type: none"> • Ensure both earbuds are charged. • Place both earbuds back in the case, close the lid, then take them out again. • Try resetting the earbuds (refer to specific reset instructions if available, otherwise re-pairing is the common method).
Earbuds not charging	<ul style="list-style-type: none"> • Check the charging cable and power adapter. • Ensure the charging contacts on the earbuds and case are clean and free of debris. • If using wireless charging, ensure the case is correctly placed on the charging pad.
Poor sound quality	<ul style="list-style-type: none"> • Ensure earbuds are clean and free of earwax buildup. • Move closer to your connected device to avoid interference. • Try playing different audio sources.

SPECIFICATIONS

Model Name	PB-ARPD3-WH
Connectivity Technology	Wireless (Bluetooth)
Control Type	Volume Control, Remote (Touch Control)

Item Weight	100 Grams
Water Resistance Level	Not Water Resistant
Material	Silicone, Plastic, Rubber
Form Factor	In Ear
Audio Driver Type	Dynamic Driver
Total Working Time (with case)	Up to 20 Hours
Product Dimensions	10 x 3 x 3 cm

WARRANTY AND SUPPORT

Porodo products are designed with quality and reliability in mind. For information regarding warranty coverage, please refer to the warranty card included in your product packaging or visit the official Porodo website.

If you require further assistance or have questions not covered in this manual, please contact Porodo customer support through their official channels. Please have your product model number (PB-ARPD3-WH) and purchase details ready when contacting support.