

Foppapedretti B0CBS9C6X6

Foppapedretti 2023 Cordless Stick Vacuum Cleaner User Manual

Model: B0CBS9C6X6 | Brand: Foppapedretti

1. INTRODUCTION

Thank you for choosing the Foppapedretti 2023 Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and retain it for future reference.



Image 1.1: Overview of the Foppapedretti Cordless Stick Vacuum Cleaner's key features.

This cordless vacuum cleaner features 25KPa powerful suction, a 2200mAh lithium battery providing up to 35 minutes of runtime,

and a 4-layer filtration system for efficient particle capture. Its lightweight design and multiple accessories make it versatile for various cleaning tasks.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer.
- Do not modify or attempt to repair the appliance or battery pack.

3. PACKAGE CONTENTS

Please check the package contents upon unpacking. If any parts are missing or damaged, contact customer support.

- Main Motor Unit (Handheld Vacuum)
- Extension Wand
- Motorized Floor Brush with LED Headlights
- Crevice Tool
- 2-in-1 Brush Tool
- Detachable Battery Pack
- Power Adapter/Charger
- Wall Mount Bracket with Screws
- User Manual

4. PRODUCT OVERVIEW

The Foppapedretti Cordless Stick Vacuum Cleaner is designed for versatile cleaning, easily converting between a stick vacuum and a handheld unit.

Multiple Accessories for Multifunctional Use



Image 4.1: The vacuum cleaner's adaptable design for various cleaning needs.

Key components include a powerful motorized brush, a multi-layer filtration system, and integrated LED headlights for improved visibility.



Image 4.2: Internal components and features like the motorized brush and filtration system.

The vacuum can be configured in several ways to suit different cleaning tasks and storage preferences.

Thoughtful and Practical Christmas Gifts for Family



Image 4.3: Various assembly configurations of the vacuum cleaner.

5. SETUP

5.1 Assembly

1. **Attach the Extension Wand:** Insert the extension wand into the main motor unit until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension wand, ensuring it locks.
3. **Alternative Handheld Use:** For handheld operation, attach the crevice tool or 2-in-1 brush tool directly to the main motor unit.

5.2 Battery Charging

The vacuum cleaner is powered by a detachable lithium-ion battery.

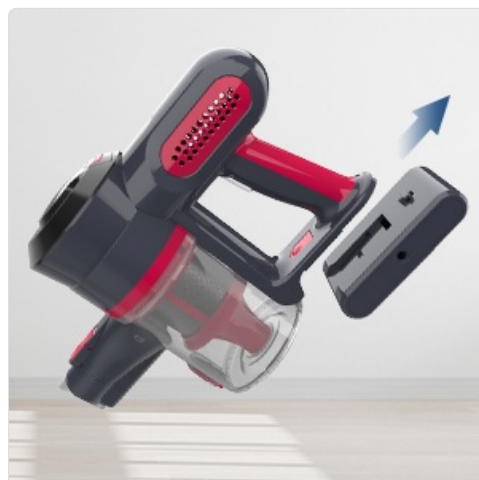


Image 5.1: Detachable battery for convenient charging.

- To charge, remove the battery pack from the main unit.

- Connect the power adapter to the battery pack and plug it into a wall outlet.
- The battery indicator lights will show charging status. A full charge takes approximately 3.5 hours.
- Ensure the battery is fully charged before first use.

5.3 Wall Mount Installation

The included wall mount bracket allows for convenient storage and charging.

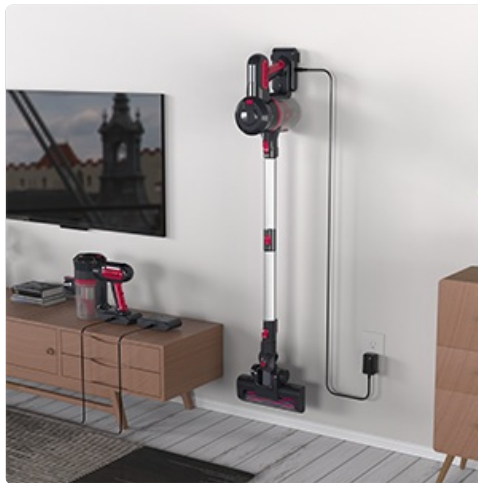


Image 5.2: Wall-mounted storage and charging setup.

1. Choose a suitable location near a power outlet.
2. Mark the drilling points for the wall mount bracket.
3. Drill holes and insert wall anchors if necessary.
4. Secure the wall mount bracket with the provided screws.
5. Hang the vacuum cleaner on the bracket and connect the charger if desired.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off and Suction Modes

- Press the power button to turn the vacuum cleaner on. It will start in Standard mode.
- Press the mode button to switch between Standard (18KPa) and Powerful (25KPa) suction modes.
- Press the power button again to turn the vacuum cleaner off.



Image 6.1: Recommended suction modes for different types of debris.

6.2 Cleaning Various Surfaces

The motorized floor brush is suitable for both hard floors and carpets. The integrated LED headlights illuminate dark areas for thorough cleaning.

Suitable for floors of various materials, making cleaning more efficient



Image 6.2: The vacuum cleaner is effective on various floor materials.

6.3 Using Attachments

- **Crevice Tool:** Ideal for narrow gaps, corners, and edges.
- **2-in-1 Brush Tool:** Use the brush for delicate surfaces like upholstery or curtains, and the nozzle for general dusting.



Image 6.3: Using the handheld vacuum with a crevice tool for targeted cleaning.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1 Emptying the Dustbin

- Ensure the vacuum is turned off and disconnected from the charger.
- Press the dustbin release button to detach the dustbin from the main unit.
- Hold the dustbin over a trash can and press the bottom release button to empty the contents.



Image 7.1: One-touch dustbin emptying.

7.2 Cleaning Filters

The filters should be cleaned regularly to maintain suction power. The filter components are washable.



Image 7.2: Washable filter components.

- Remove the filters from the dustbin.
- Rinse the filters under cold running water until the water runs clear.
- Allow the filters to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters.

7.3 Cleaning the Brush Roll

- Turn off the vacuum and detach the floor brush.
- Use a coin or screwdriver to unlock the brush roll cover.
- Remove the brush roll and clear any tangled hair or debris.
- Reassemble the brush roll and cover, ensuring it locks securely.

8. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

| Problem | Possible Cause | Solution |
|-------------------------|---|--|
| Vacuum does not turn on | Battery not charged Battery not properly installed | Charge the battery fully Ensure battery is clicked into place |

| Problem | Possible Cause | Solution |
|-------------------------|--|--|
| Low suction power | Dustbin full Filters clogged Brush roll tangled Hose/nozzle blocked | Empty dustbin Clean and dry filters Clear brush roll of debris Check for and remove blockages |
| Battery not charging | Charger not connected properly Faulty power outlet Damaged battery/charger | Ensure secure connection Try a different outlet Contact customer support |
| Brush roll not spinning | Brush roll tangled Brush roll cover not secured | Clear debris from brush roll Ensure cover is locked into place |

9. SPECIFICATIONS

| Feature | Specification |
|-------------------|---|
| Brand | Foppapedretti |
| Model | B0CBS9C6X6 |
| Suction Power | Standard: 18KPa, Powerful: 25KPa |
| Battery Type | Lithium-Ion |
| Battery Capacity | 2200mAh |
| Runtime | Up to 35 minutes |
| Charge Time | Approximately 3.5 hours |
| Dustbin Capacity | 0.55 Liters |
| Filtration System | 4-layer, HEPA filter |
| Noise Level | 71 Decibels |
| Item Weight | 5.5 Pounds |
| Voltage | 220 Volts |
| Wattage | 210 watts |
| Amperage | 0.95 Amps |
| Special Features | Lightweight, Portable, LED Headlights, Detachable Battery |
| Recommended Use | Carpet, Hard Floor, Rug |

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Foppapedretti website. Keep your purchase receipt as proof of purchase for warranty claims.

