

Mebus 25622/785829

Mebus 25622/785829 Electronic Alarm Clock with Wireless Charger

User Manual

1. INTRODUCTION

Thank you for choosing the Mebus 25622/785829 Electronic Alarm Clock. This device combines a clear digital time display with a convenient wireless charging pad, making it an ideal companion for your bedside table or office desk. This manual provides detailed instructions on how to set up, operate, and maintain your alarm clock to ensure optimal performance and longevity.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before using the device.
- Keep this manual for future reference.
- Do not expose the device to water, moisture, or extreme temperatures.
- Avoid placing the device near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only the power adapter supplied by the manufacturer or a compatible alternative.
- Do not attempt to disassemble, repair, or modify the device yourself. Refer all servicing to qualified service personnel.
- Ensure proper ventilation around the device. Do not block any ventilation openings.
- Keep the device away from strong magnetic fields.
- The wireless charging function is designed for Qi-compatible devices. Ensure your device supports wireless charging before use.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Mebus 25622/785829 Electronic Alarm Clock
- Power Adapter (USB cable and wall adapter)
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your Mebus Electronic Alarm Clock.



Figure 4.1: Front View

This image shows the front of the Mebus Electronic Alarm Clock. The large digital display clearly shows the time, with indicators for AM/PM and alarm status. The sleek design features a black finish.



Figure 4.2: Top View with Wireless Charging Pad

This image provides a top-down perspective of the Mebus Electronic Alarm Clock. It highlights the integrated wireless charging pad, indicated by a cross symbol, and the control buttons located on the top edge for setting time and alarms. The Mebus brand logo is visible on the right side of the charging pad.

Controls and Indicators:

- **Digital Display:** Shows time, alarm status, and other indicators.
- **Time Set Button:** Used to enter time setting mode.
- **Alarm Set Button:** Used to enter alarm setting mode.
- **Up/Down Buttons:** Used to adjust values (time, alarm).
- **Snooze/Dimmer Button:** Activates snooze during an alarm; adjusts display brightness.
- **Wireless Charging Pad:** Area for charging Qi-compatible devices.
- **Charging Indicator Light:** Illuminates when a device is wirelessly charging.

5. SETUP

5.1 Powering On

1. Connect the USB cable to the power adapter.
2. Plug the power adapter into a standard electrical outlet.
3. Connect the other end of the USB cable to the power input port on the back of the alarm clock.
4. The digital display will illuminate, and the clock will be ready for initial setup.

5.2 Initial Time Setting

1. Press and hold the **Time Set Button** (often labeled 'SET' or a clock icon) for approximately 3 seconds until the hour digits begin to flash.
2. Use the **Up** or **Down Buttons** to adjust the hour. Pay attention to the AM/PM indicator if your clock uses a 12-hour format.
3. Press the **Time Set Button** again to confirm the hour and move to the minute setting. The minute digits will flash.
4. Use the **Up** or **Down Buttons** to adjust the minutes.
5. Press the **Time Set Button** one more time to confirm the minutes and exit time setting mode. The time will now be set.

6. OPERATING INSTRUCTIONS

6.1 Setting the Alarm

1. Press and hold the **Alarm Set Button** (often labeled 'AL' or an alarm icon) for approximately 3 seconds until the alarm hour digits begin to flash.
2. Use the **Up** or **Down Buttons** to adjust the alarm hour.
3. Press the **Alarm Set Button** again to confirm the alarm hour and move to the alarm minute setting. The minute digits will flash.
4. Use the **Up** or **Down Buttons** to adjust the alarm minutes.
5. Press the **Alarm Set Button** one more time to confirm the alarm minutes and exit alarm setting mode. The alarm icon will appear on the display, indicating the alarm is active.

6.2 Activating/Deactivating the Alarm

- To activate the alarm, ensure the alarm icon is visible on the display. If not, briefly press the **Alarm Set Button** to toggle it on.
- To deactivate the alarm, briefly press the **Alarm Set Button** until the alarm icon disappears from the display.

6.3 Using the Snooze Function

- When the alarm sounds, press the **Snooze/Dimmer Button** (often a large button on top). The alarm will pause for a set period (e.g., 9 minutes) and then sound again.
- To turn off the alarm completely after it sounds, press any other button (e.g., Time Set, Alarm Set, Up/Down) or let it ring for its full duration.

6.4 Adjusting Display Brightness

- Briefly press the **Snooze/Dimmer Button** (when the alarm is not sounding) to cycle through different brightness levels for the digital display.

6.5 Using the Wireless Charging Function

1. Ensure the alarm clock is powered on.
2. Place your Qi-compatible smartphone or other device directly onto the wireless charging pad located on the top surface of the alarm clock. Ensure the device is centered on the charging symbol.
3. The charging indicator light on the alarm clock will illuminate, and your device should indicate that it is charging.
4. If charging does not begin, reposition your device on the charging pad. Remove any thick cases or metallic objects from your device that might interfere with charging.

7. MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the surface of the alarm clock. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** If storing the device for an extended period, disconnect it from power and store it in a cool, dry place.
- **Avoid Liquids:** Do not allow liquids to enter the device.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or not lighting up.	No power connection.	Ensure the power adapter is securely plugged into both the wall outlet and the alarm clock. Check the power outlet.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Verify that the alarm time is set correctly and the alarm icon is visible on the display.
Wireless charging is not working.	Device not Qi-compatible; device not positioned correctly; thick phone case; metallic objects.	Ensure your device supports Qi wireless charging. Reposition the device on the charging pad. Remove any thick cases or metallic objects.
Time is incorrect.	Time was not set correctly or power interruption.	Reset the time following the "Initial Time Setting" instructions.

9. SPECIFICATIONS

- **Brand:** Mebus
- **Model:** 25622 / 785829
- **Display Type:** Digital
- **Power Source:** Electric (AC/DC Adapter)
- **Alarm Function:** Yes
- **Wireless Charging:** Yes (Qi-compatible)
- **Mounting Type:** Tabletop
- **Color:** Multi-color (referring to the product's general description, though the device itself appears

black)

- **Batteries Included:** No

10. WARRANTY AND SUPPORT

Mebus products are manufactured with high-quality materials and undergo strict quality control. For warranty information, technical support, or service inquiries, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for warranty claims.