

[Manuals.plus](#) /

› [Calypso](#) /

› Calypso Digital Men's Watch K5836 Flash Time Instruction Manual

Calypso K5836

Calypso Digital Men's Watch K5836 Flash Time Instruction Manual

Model: K5836

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Calypso Digital Men's Watch, Model K5836 Flash Time. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch. Keep this manual for future reference.

PRODUCT OVERVIEW

The Calypso K5836 Flash Time digital watch is designed for modern and active lifestyles, offering a range of useful functions. It features a durable rubber strap and is water-resistant up to 5 ATM.

Key Features:

- Digital Time Display (12/24 hour format)
- Date and Calendar Function
- Chronograph (Stopwatch)
- Alarm Function
- Dual Time Zone Display
- Backlight for low-light conditions
- Water Resistance: 5 ATM (50 meters)
- Durable Rubber Strap

Watch Components:

Familiarize yourself with the buttons and display areas of your watch:



Image 1: Front view of the Calypso K5836 Flash Time digital watch. The display shows time, date, and day of the week. Buttons are visible on the sides: 'LIGHT' (top left), 'MODE' (bottom left), 'START' (top right), 'RESET' (bottom right).

- **LIGHT Button (Top Left):** Activates the backlight.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Chronograph, Alarm, Dual Time) and enters setting mode when held.
- **START Button (Top Right):** Starts/stops the chronograph, adjusts values in setting mode.

- **RESET Button (Bottom Right):** Resets the chronograph, selects items in setting mode.

SETUP AND TIME SETTING

Initial Activation:

Your watch may arrive in a power-saving mode. Press any button to activate the display.

Setting Time and Date:

1. In normal time display mode, press and hold the **MODE** button until the seconds begin to flash. This indicates you are in setting mode.
2. Press the **RESET** button to cycle through the settings: Seconds → Hours → Minutes → Year → Month → Day → 12/24 Hour Format.
3. Use the **START** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button again to exit setting mode and return to normal time display.

OPERATING MODES

Cycling Through Modes:

Press the **MODE** button repeatedly to cycle through the following functions:

- Normal Time Display
- Chronograph (Stopwatch)
- Alarm Setting
- Dual Time Display

Chronograph (Stopwatch):

1. From normal time display, press **MODE** once to enter Chronograph mode. The display will show "CHRONO" or similar.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to resume timing from the paused point.
5. To stop and reset the chronograph, press **START** to stop, then **RESET** to clear the time to zero.

Alarm Setting:

1. From normal time display, press **MODE** twice to enter Alarm mode. The display will show "ALARM" or "AL".
2. Press and hold the **START** button until the alarm hours begin to flash.
3. Press **RESET** to select between hours and minutes.
4. Use the **START** button to adjust the flashing value.
5. Once the desired alarm time is set, press **MODE** to confirm and exit setting mode.
6. To turn the alarm ON/OFF, in Alarm mode, press the **START** button once. An alarm icon will appear/disappear on the display.

Dual Time:

1. From normal time display, press **MODE** three times to enter Dual Time mode. The display will show "DUAL" or "T2".
2. Press and hold the **START** button until the hours begin to flash.
3. Press **RESET** to select between hours and minutes.

4. Use the **START** button to adjust the flashing value.
5. Once the second time zone is set, press **MODE** to confirm and exit setting mode.

Backlight:

Press the **LIGHT** button (top left) to illuminate the display for a few seconds in low-light conditions.

MAINTENANCE

Water Resistance (5 ATM):

Your Calypso K5836 watch is water-resistant up to 5 ATM (50 meters). This means it is suitable for everyday use, splashes, rain, and short periods of recreational swimming. **Do not press any buttons while the watch is wet or submerged.** Avoid exposure to hot water, steam, or extreme temperature changes, as this can compromise the water seals.

Battery Replacement:

When the display becomes dim or the watch stops functioning, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure the water resistance is maintained. Attempting to replace the battery yourself may void the warranty and damage the watch.

Cleaning:

To clean your watch, wipe it gently with a soft, damp cloth. For the rubber strap, mild soap and water can be used, then rinse thoroughly and dry. Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish or strap.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Display is blank or dim.	Battery may be low or depleted. Replace the battery.
Buttons are unresponsive.	Ensure the watch is not in a locked mode (if applicable, though not a common feature for this model). Try a soft reset by pressing all four buttons simultaneously for a few seconds (if watch allows). If issue persists, battery may be low.
Time is incorrect.	Refer to the "Setting Time and Date" section to reset the time. Check if the 12/24 hour format is set correctly.
Water inside the watch.	Water resistance may have been compromised. Avoid pressing buttons underwater. Seek professional repair immediately to prevent further damage.

SPECIFICATIONS

Feature	Detail
Model Number	K5836
Display Type	Digital
Movement Type	Quartz
Case Material	Metal

Feature	Detail
Band Material	Rubber
Dial Window Material	Mineral Glass
Case Diameter	54 Millimeters
Case Thickness	15.6 Millimeters
Water Resistance Depth	50 Meters (5 ATM)
Power Source	Battery Powered
Special Features	Date, Chronograph, Dual Time, Light, Alarm, 12/24h format

WARRANTY AND SUPPORT

Your Calypso K5836 Flash Time watch comes with a limited warranty. For specific details regarding the warranty period and coverage, please refer to the warranty card included with your purchase or contact the retailer. For technical support, repairs, or any questions not covered in this manual, please contact Calypso customer service or an authorized service center.

You can find more information and contact details on the official Calypso website: www.calypso-watch.com