

SOMMER Y4054V005

SOMMER Y4054V005 310MHz 2-Button Remote Control Instruction Manual

For Direct Drive and Synoris Garage Door Openers

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your SOMMER Y4054V005 310MHz 2-Button Remote Control. Please read these instructions carefully before using the device to ensure safe and efficient operation. This remote control is designed for use with compatible SOMMER Direct Drive and Synoris garage door opener systems.

PRODUCT OVERVIEW

The SOMMER Y4054V005 is a compact, 2-button remote control operating at a 310 MHz radio frequency. It is designed for convenient control of compatible garage door openers.



Image 1: The SOMMER Y4054V005 310MHz 2-Button Remote Control. This image displays the remote control in its closed position, highlighting its two blue operational buttons and the 'SOMMER Made in Germany' branding.



Image 2: The SOMMER Y4054V005 310MHz 2-Button Remote Control shown alongside its metal clip. This image illustrates the remote control with its slide-open cover revealing the buttons, positioned next to the included clip for attachment.

SETUP AND PROGRAMMING

To program your SOMMER Y4054V005 remote control, follow the instructions provided with your specific garage door opener model. The general procedure involves placing your garage door opener into programming mode and then activating the remote control.

1. **Locate the Learn Button:** On your garage door opener motor head, locate the 'Learn' or 'Program' button. Refer to your opener's manual for its exact location.
2. **Activate Programming Mode:** Press and release the 'Learn' or 'Program' button on your garage door opener. An indicator light on the opener will typically illuminate, signaling that it is in programming mode.
3. **Program the Remote:** Within approximately 30 seconds of activating programming mode, press and hold the desired button on your SOMMER Y4054V005 remote control.

4. **Confirm Programming:** Release the remote button once the garage door opener's light flashes or makes a sound, indicating successful programming. Test the remote control to ensure it operates the garage door correctly.

Compatibility: This remote is compatible with the following SOMMER models:

- Direct Drive Blue and Synoris series
- SOMMER Synoris 550 Model 1043V000
- SOMMER Synoris 800 Model 1053V000
- Direct Drive 550 Models: 1042V001, 1042V002, 1042V003, 1042V004
- Direct Drive 800 Models: 1052V000, 1052V002, 1052V003
- 310 MHz Receiver In Housing Model 4798V000

OPERATING INSTRUCTIONS

Once programmed, operating your SOMMER Y4054V005 remote control is straightforward:

- **Open/Close Garage Door:** Press the programmed button on the remote control once to activate the garage door opener. The door will either open or close, depending on its current state.
- **Stop Operation:** Press the programmed button a second time while the door is in motion to stop its movement.

MAINTENANCE

Regular maintenance ensures the longevity and reliable performance of your remote control.

- **Battery Replacement:** If the remote's range decreases or the indicator light (if present) does not illuminate, the battery may need replacement. To replace the battery, carefully open the remote casing (refer to any markings or grooves for leverage) and replace the old battery with a new one of the appropriate type (typically a coin cell battery like CR2032, though not specified for this model, consult the remote itself for battery type). Ensure correct polarity.
- **Cleaning:** Clean the remote control with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the casing or internal components.
- **Storage:** Store the remote control in a dry place, away from extreme temperatures and direct sunlight.

TROUBLESHOOTING

If you encounter issues with your remote control, consider the following troubleshooting steps:

- **Remote Not Working:**
 - Check the battery. Replace it if necessary.
 - Ensure the remote is within range of the garage door opener.
 - Verify that the remote is properly programmed to your garage door opener. If unsure, repeat the programming steps.
 - Check for any obstructions between the remote and the opener's antenna.
- **Reduced Operating Range:**
 - Replace the battery with a fresh one.

- Ensure the opener's antenna is extended and not obstructed.
- Interference from other radio frequency devices or large metal objects can affect range. Try operating from a different location.
- **Garage Door Opener Not Responding:**
 - Confirm the garage door opener has power.
 - Check if the opener's safety sensors are aligned and clear of obstructions.

SPECIFICATIONS

Model Number	Y4054V005
Brand	SOMMER
Radio Frequency	310 MHz
Number of Buttons	2
Compatible Devices	Direct Drive, Synoris Garage Door Openers
Product Dimensions	1 x 1 x 1 inches
Item Weight	1.6 ounces
Connectivity Technology	Radio Frequency

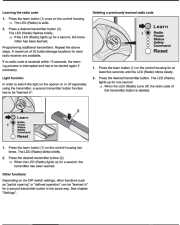
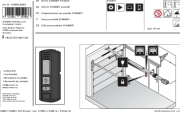


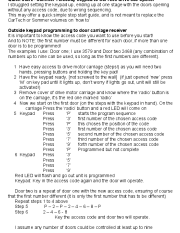
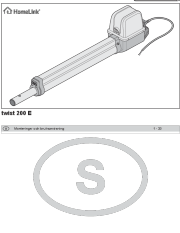
WARRANTY INFORMATION

For specific warranty details regarding your SOMMER Y4054V005 remote control, please refer to the documentation included with your purchase or visit the official SOMMER website. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase.

SUPPORT

If you require further assistance or have questions not covered in this manual, please contact the manufacturer or your authorized dealer. Have your product model number (Y4054V005) and purchase information ready when seeking support.

Related Documents - Y4054V005

	<p>SOMMER Transmitter Initial Operation and Programming Guide</p> <p>Comprehensive guide to initial operation, programming, and deletion of radio codes for SOMMER garage door opener transmitters. Learn about light functions and other settings.</p>
	<p>SOMMER Wallstation Installation Manual</p> <p>Installation guide for the SOMMER Wallstation, compatible with various SOMMER garage door opener models. Includes setup instructions and technical specifications.</p>
	<p>SOMMER Wallstation Installation Manual and Guide</p> <p>Comprehensive installation guide for the SOMMER Wallstation, detailing setup, wiring, operation, and compatibility with SOMMER garage door opener systems. Includes product specifications and operational instructions.</p>
	<p>SOMMER Garage Door Opener Carriage Installation & Disassembly Guide</p> <p>Official guide from SOMMER for the installation and disassembly of their garage door opener carriage, covering models S 9050, S 9060, S 9080, S 9110, A 550 L, and A 800 XL. Includes manufacturer details and highlights the visual nature of the original guide.</p>
	<p>Quick Start: Sommer Telecody Keypad to CarTeck Drive 600 Opener Programming Guide</p> <p>A concise guide to programming the Sommer Telecody keypad for the CarTeck Drive 600 garage door opener, including step-by-step instructions for single and multiple door setups.</p>
	<p>SOMMER twist 200 E Gate Opener Manual</p> <p>Comprehensive installation, operation, and maintenance manual for the SOMMER twist 200 E gate opener system, providing detailed instructions and safety information.</p>