Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- · LUMI /
- > LUMI Flex Mount Universal Floor Stand FS40-46T Instruction Manual for 37-75 Inch TVs

LUMI FS40-46T

LUMI Flex Mount Universal Floor Stand FS40-46T Instruction Manual

Model: FS40-46T

1. PRODUCT OVERVIEW

The LUMI Flex Mount Universal Floor Stand FS40-46T is a freestanding television stand designed for screens ranging from 37 to 75 inches. It features a robust frame, two integrated wood shelves for media devices or decor, and a cable management system to maintain an organized appearance. The design incorporates elements of Bauhaus style, offering both functionality and a distinct aesthetic.



Figure 1.1: Front view of the LUMI Flex Mount Universal Floor Stand FS40-46T, showcasing its design and two integrated shelves.

Key Features:

- Universal Compatibility: Supports most 37-75 inch televisions.
- 2-Tier Wood Shelves: Provides ample space for storing various items such as media players, soundbars, or decorative objects.
- Cable Management: Integrated system to keep cables organized and out of sight, contributing to a clean setup.
- Sturdy Base: Designed for stability and durability, ensuring secure placement of your television.
- Anti-Skid Pads: Prevents scratches or scuffs on flooring and enhances stability.
- Space Utilization: Optimized for corner placement, making efficient use of room space.

2. SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Failure to follow these instructions may result in serious personal injury or property damage. If you have any questions, contact customer support.

- Weight Capacity: Do not exceed the maximum weight capacity specified for this stand. Refer to the specifications section for details.
- TV Size: Ensure your television's screen size and VESA mounting pattern are compatible with this stand.
- Assembly: Assemble the stand strictly according to the instructions. Do not modify the product.
- Stability: Place the stand on a flat, level, and stable surface. Avoid placing it in high-traffic areas where it could be easily bumped.
- **Children:** Keep children away from the stand during assembly. Do not allow children to climb on or play with the stand or mounted television.
- Tools: Use appropriate tools for assembly. Ensure all screws are tightened securely but do not overtighten.
- Inspection: Periodically check all connections and fasteners to ensure they remain secure.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Main Support Frame Components
- TV Mounting Bracket
- · Wood Shelves (2 units)
- Base Plate/Feet
- Cable Management Clips
- Hardware Kit (screws, washers, spacers for TV mounting and stand assembly)
- Anti-Skid Pads
- Assembly Tools (e.g., Allen wrench)
- Instruction Manual

4. SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your LUMI Flex Mount Universal Floor Stand. It is recommended to have two people for certain assembly steps, especially when mounting the television.

- 1. **Prepare the Area:** Clear a spacious, flat area for assembly. Lay down a blanket or soft material to protect both the stand components and your floor.
- 2. **Assemble the Base:** Attach the main support frame components to the base plate using the provided screws. Ensure all connections are secure.

- 3. **Install Shelves:** Secure the two wood shelves to the main support frame at the designated positions. Use the appropriate screws and ensure they are level.
- 4. **Attach TV Mounting Bracket:** Fasten the TV mounting bracket to the upper part of the support frame. This bracket will hold your television.
- 5. **Apply Anti-Skid Pads:** Affix the anti-skid pads to the bottom of the stand's base to prevent movement and protect your floor.

6. Mount the Television:

- Identify the VESA mounting holes on the back of your television.
- Select the correct screws, washers, and spacers from the hardware kit that fit your TV's mounting holes.
- Attach the TV adapter plates (if applicable) to the back of your television.
- Carefully lift the television and hook it onto the mounting bracket on the stand. Ensure it is securely seated.
- Secure the TV to the bracket using the safety screws or locking mechanisms provided.
- 7. **Cable Management:** Route all television and device cables along the stand's frame using the provided cable management clips for a tidy appearance.



Figure 4.1: Feature diagram illustrating the 2-tier wood shelves, rubber pads, tilt range (0-10 degrees), and height range (1160-1250mm).



Figure 4.2: Detail of the integrated cable management system, showing how cables can be routed along the stand's frame for a clean look.

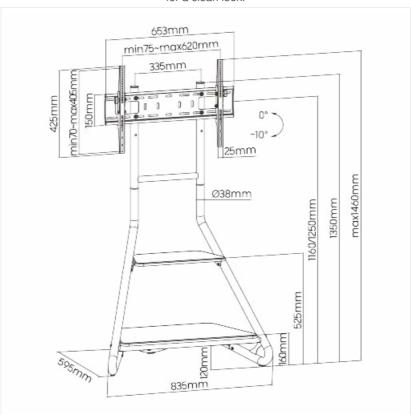


Figure 4.3: Technical drawing providing detailed dimensions of the stand, including height, width, depth, and VESA mounting specifications.

5. OPERATING INSTRUCTIONS

Once assembled, the LUMI Flex Mount Universal Floor Stand is designed for straightforward use.

- TV Placement: Ensure the television is securely mounted and level.
- **Tilt Adjustment:** The TV mounting bracket allows for a tilt range of 0 to 10 degrees. Adjust the tilt by loosening the tilt adjustment knobs (if present), setting the desired angle, and then securely tightening the knobs.
- **Shelf Usage:** Utilize the two wood shelves for placing media players, gaming consoles, remote controls, or other accessories. Ensure items placed on shelves do not exceed their weight capacity.
- **Relocation:** If relocating the stand, always lift it carefully from the base. Avoid dragging the stand, especially with a TV mounted, to prevent damage to the stand or your flooring.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your TV stand.

- **Cleaning:** Wipe the stand's metal frame with a soft, damp cloth. For the wood shelves, use a wood-safe cleaner if necessary, and dry immediately. Avoid abrasive cleaners or solvents.
- Fastener Check: Periodically (e.g., every 6 months) check all screws and bolts to ensure they are tight. Retighten if necessary, but do not overtighten.
- Cable Management: Ensure cables remain neatly organized and are not pinched or strained.
- **Damage Inspection:** Inspect the stand for any signs of wear, damage, or instability. If any issues are found, discontinue use and contact customer support.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your TV stand.

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	 Not all screws are tightened. Stand is on an uneven surface. Weight capacity exceeded. 	 Check and tighten all assembly screws. Move the stand to a flat, level surface. Ensure TV and shelf items do not exceed specified weight limits.
TV is not level after mounting.	 Mounting bracket not installed level. TV adapter plates unevenly attached. 	 Re-check the level of the mounting bracket during installation. Adjust the TV adapter plates on the back of the TV.
Cables are messy or visible.	Cable management not fully utilized.	 Use all provided cable clips to route cables along the stand's frame. Consider additional cable ties for a neater appearance.

8. SPECIFICATIONS

Brand	LUMI	
-------	------	--

Model	FS40-46T	
Compatible TV Size	37" - 75"	
Mounting Type	Floor Mount	
Movement Type	Fixed (with tilt adjustment)	
Tilt Range	0° to -10°	
Material	Wood, Metal	
Color	Black (frame), Wood (shelves)	
Item Weight	18 kg	
Dimensions (Approx.)	Refer to Figure 4.3 for detailed measurements.	

9. WARRANTY AND SUPPORT

This LUMI product is covered by a **3-Year Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use.

For warranty claims, technical support, or missing parts, please contact your retailer or LUMI customer service.

Please have your model number (FS40-46T) and proof of purchase ready when contacting support.

Contact Information:

Please refer to the contact details provided with your purchase documentation or visit the official LUMI website for support.

© 2023 LUMI. All rights reserved.

This manual is subject to change without notice.

Related Documents - FS40-46T



LUMI RecoveryMAX Cold Water Therapy User Manual

User manual for the LUMI RecoveryMAX cold water therapy ice bath, including setup, usage, safety, and product specifications.



LUMI Recovery Pod User Manual - Cold Water Therapy Guide

Comprehensive user manual for the LUMI Recovery Pod, detailing setup, usage, safety, and maintenance for cold water therapy. Includes product specifications and warranty information.



LUMI Recovery PRO Cold Water Therapy User Manual

User manual for the LUMI Recovery PRO cold water therapy ice bath, including assembly, usage, safety instructions, and product specifications.

והטו

275/1.19/19/19/19:10

Smart Plug

Lumi Smart Plug with Nest Connect: User Manual & Specifications

Comprehensive user manual for the Lumi Smart Plug (Model BR-USH01) with Nest Connect. Includes setup, system requirements, features, cautions, restart/reset procedures, status indicators, specifications, technical support, FCC and IC compliance, and important safety instructions.



<u>Déclaration de Transparence sur les Données - Lumi Thermostat de Pièce W100</u>

Informations détaillées sur le traitement des données, le stockage, les droits des utilisateurs et le partage pour le Lumi Thermostat de Pièce W100, conformément au Règlement sur les Données EU (Data Act).



LUMI miniultra Chiller Unit User Manual - Cold Water Therapy System

Comprehensive user manual for the LUMI miniultra chiller unit, detailing setup, operation, safety warnings, features, and maintenance for cold water therapy and ice baths.