



Manuals.plus /

› Wishouse /

› Wishouse M8 Rechargeable Walkie Talkies User Manual

## Wishouse M8

# Wishouse M8 Rechargeable Walkie Talkies User Manual

Model: M8

## 1. INTRODUCTION

---

This manual provides instructions for the safe and effective use of your Wishouse M8 Rechargeable Walkie Talkies. Please read this manual thoroughly before operating the devices and retain it for future reference.



Image 1.1: Wishouse M8 Walkie Talkies (3-pack) with accessories.

## 2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 3 x Wishouse M8 Walkie Talkies (Green, Blue, Orange)
- 3 x Belt Clips
- 9 x 3000mAh AA Rechargeable Batteries (3 sets)
- 2 x 2-in-1 USB Charging Cables
- 3 x Lanyards
- 1 x User Guide (this manual)



Image 2.1: Package contents of the WisHouse M8 Walkie Talkie set.

## 3. SETUP

### 3.1 Battery Installation

1. Locate the battery compartment cover on the back of the walkie talkie.
2. Slide the cover down or unclip it to open the compartment.
3. Insert three (3) AA rechargeable batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

### 3.2 Charging the Batteries

The walkie talkies come with rechargeable batteries and USB charging cables.

1. Connect one end of the 2-in-1 USB charging cable to the charging port on the walkie talkie.
2. Connect the other end of the USB cable to a compatible USB power source (e.g., wall adapter, computer USB port).
3. The battery indicator on the walkie talkie display will show charging status.
4. Charge until the battery indicator shows a full charge.



Image 3.1: Wishouse M8 Walkie Talkie connected for charging.

### 3.3 Attaching Accessories

- **Belt Clip:** Slide the belt clip into the designated slot on the back of the walkie talkie until it clicks into place.
- **Lanyard:** Thread the lanyard through the small loop at the top of the walkie talkie and secure it.

## 4. OPERATING INSTRUCTIONS

### 4.1 Power On/Off

Press and hold the **Power** button (usually marked with a power symbol) for approximately 3 seconds to turn the walkie talkie on or off.

### 4.2 Adjusting Volume

Use the **Up** (▲) and **Down** (▼) buttons to adjust the speaker volume. The current volume level will be displayed on the screen.

### 4.3 Channel Selection

1. Press the **MENU** button once. The channel number on the display will flash.

2. Use the **Up** (▲) or **Down** (▼) buttons to select your desired channel (1-22).
3. Press the **MENU** button again or wait a few seconds for the selection to be saved.

**Important:** All walkie talkies in your group must be set to the same channel to communicate.

#### 4.4 Sub-Code (CTCSS/DCS) Selection

To reduce interference from other users on the same channel, you can set a sub-code (CTCSS/DCS). All walkie talkies in your group must use the same channel and sub-code.

1. Press the **MENU** button twice. The sub-code number will flash.
2. Use the **Up** (▲) or **Down** (▼) buttons to select your desired sub-code.
3. Press the **MENU** button again or wait a few seconds to save.



Image 4.1: Walkie Talkie display showing channel and sub-code for one-to-many communication.

#### 4.5 Transmitting and Receiving

- To transmit, press and hold the **PTT (Push-To-Talk) button** (usually on the side). Speak clearly into the microphone.
- Release the **PTT button** to stop transmitting and listen for a response.
- When receiving, the signal indicator will light up.

## 4.6 VOX Function (Voice Operated Exchange)

VOX allows hands-free communication. When activated, the walkie talkie will automatically transmit when it detects your voice.

1. Press the **MENU** button until the VOX icon appears and flashes.
2. Use the **Up (▲)** or **Down (▼)** buttons to select a VOX sensitivity level (e.g., 1-3, with 3 being most sensitive). Select "OFF" to disable VOX.
3. Press the **MENU** button again or wait to save.

## 4.7 Flashlight Function

Press the **LAMP** button (usually marked with a flashlight icon) to turn the built-in flashlight on or off.



**NIGHT ADVENTURES BEGIN!**

**Stay connected. stay safe.  
Illuminate the fun!**

Image 4.2: Children using the walkie talkie flashlight feature during an outdoor activity.

## 5. MAINTENANCE

- **Cleaning:** Wipe the walkie talkies with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the devices in a cool, dry place when not in use. Remove batteries if storing for extended periods to prevent leakage.

- **Water Resistance:** These walkie talkies are **not water resistant**. Avoid exposure to rain, splashes, or immersion in water.
- **Battery Care:** Use only the provided rechargeable batteries and charging cables. Do not attempt to charge non-rechargeable batteries.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Batteries are low or incorrectly installed.	Charge batteries fully or re-install them with correct polarity.
Cannot communicate with other units	Units are on different channels or sub-codes. Out of range.	Ensure all units are on the same channel and sub-code. Move closer to the other unit.
Static or unclear audio	Weak signal, interference, or low battery.	Move to an open area. Change channel/sub-code. Charge batteries.
Walkie talkie turns off randomly	Low battery.	Charge batteries fully.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	M8
Brand	Wishouse
Product Dimensions	1.1"D x 2.3"W x 6.2"H (2.8 cm D x 5.8 cm W x 15.7 cm H)
Item Weight	1.41 pounds (0.64 kg)
Batteries	9 AA rechargeable batteries required (included)
Number of Channels	22
Frequency Range	462.5500-462.7250 MHz, 467.5625-467.7125 MHz
Talking Range Maximum	Up to 5 miles (under optimal conditions)
Voltage	3.6 Volts
Special Features	Adjustable Receiver Sensitivity, Automatic Squelch, Integrated Flashlight, Long Range, Rechargeable, VOX
Water Resistance Level	Not Water Resistant

# Family Walkie Talkie Upgrade

## Perfect for Home Use



Image 7.1: Physical dimensions of the Wishouse M8 Walkie Talkie.

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official Wishouse website. Keep your proof of purchase for warranty claims. For additional assistance, you may contact Wishouse customer service directly.