

[Manuals.plus](#) /

› [SANJOIN](#) /

› SANJOIN Kids Walkie Talkies User Manual

SANJOIN T-388

SANJOIN Kids Walkie Talkies User Manual

Model: T-388

1. INTRODUCTION

Thank you for choosing SANJOIN Kids Walkie Talkies. These devices are designed to provide clear and reliable communication for children aged 3 and up, perfect for outdoor adventures, camping, and imaginative play. With a range of up to 3 miles and multiple channels, your children can stay connected while exploring.



Image: A pair of SANJOIN T-388 walkie talkies in blue and green, displayed next to their colorful packaging box. The box highlights features like "Walkie Talkie Age 3+" and simple operating steps.

2. SAFETY INFORMATION

- **Battery Safety:** Use only the specified battery type (4 AAA batteries per unit, not included). Do not mix old and new batteries, or different types of batteries. Insert batteries with correct polarity. Remove batteries if the device will not be used for an extended period.
- **Choking Hazard:** This product contains small parts and is not suitable for children under 3 years old without adult supervision.
- **Water Resistance:** These walkie talkies are *not* water resistant. Avoid exposure to water or high humidity.
- **Antenna:** Do not attempt to remove or bend the antenna.
- **Cleaning:** Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

3. PRODUCT FEATURES

- **Long Range Coverage:** Up to 3 miles wireless talkback in open areas.

- **Multiple Channels:** 22 main channels and 99 sub-channels (CTCSS) for clear communication and reduced interference.
- **Ultra-Clear Sound:** Crisp and smooth sound quality with adjustable volume level and auto squelch function to mute background noise.
- **Durable and Safe Materials:** Made from ABS eco-material, compliant with US and EU safety standards (FCC CE RoHS), free from BPA, PVC, phthalates, or external coatings.
- **Ergonomic Design:** Comfortable for children's hands with an uncomplicated push-to-talk button.
- **Built-in Flashlight:** For added utility in low-light conditions.
- **Belt Clip:** Easy to carry for on-the-go adventures.
- **Interactive Screen:** LCD display for channel and battery status.



ABS Eco-Material



Clear Sound



Vox Mode



Image: A child demonstrating the comfortable grip of the walkie talkie, with icons illustrating key features such as eco-friendly materials, clear sound, and VOX mode.

4. COMPONENTS

Each SANJOIN Kids Walkie Talkie package includes:

- SANJOIN T-388 Walkie Talkie Units (quantity as per package, e.g., 2 units)
- User Manual (this document)

Note: 4 AAA batteries are required per walkie talkie unit and are not included.



Image: A detailed view of the walkie talkie's controls and features, including the LCD screen, buttons for navigation, talk, monitor, and the battery compartment.

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment cover on the back of the walkie talkie.
2. Slide the latch or unscrew the screw to open the cover.
3. Insert 4 AAA batteries into the compartment, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

5.2 Powering On/Off

- To power on, press and hold the **Power Button** (usually marked with a power symbol) until the LCD screen illuminates.
- To power off, press and hold the **Power Button** again until the LCD screen turns off.

6. OPERATING INSTRUCTIONS

6.1 Setting Channels and Sub-Channels

1. Press the **Menu Button** (usually marked "MENU") once. The channel number on the LCD screen will flash.
2. Use the **Up** (▲) or **Down** (▼) buttons to select your desired main channel (1-22).
3. Press the **Menu Button** again. The sub-channel (CTCSS code) number will flash.
4. Use the **Up** (▲) or **Down** (▼) buttons to select your desired sub-channel (1-99).
5. Press the **Menu Button** a third time or the **Talk Button** to confirm and exit the menu.

Important: Both walkie talkies must be set to the same main channel and sub-channel to communicate.

6.2 Transmitting and Receiving

- To transmit (talk), press and hold the **Talk Button** (usually marked "TALK"). Speak clearly into the microphone.
- Release the **Talk Button** to stop transmitting and listen for a response.
- The walkie talkie will automatically receive messages when the Talk Button is not pressed.

6.3 Adjusting Volume

Use the **Up** (▲) or **Down** (▼) buttons to adjust the speaker volume. These buttons typically control volume when not in menu mode.

6.4 Using the Flashlight

Press the **Lamp Button** (usually marked with a light bulb icon) to turn the built-in flashlight on or off.

Your browser does not support the video tag.

Video: This video demonstrates the various features of the walkie talkies, including the interactive screen, easy-to-carry belt clip, and the built-in flashlight function. It also shows the different color options available.

7. MAINTENANCE

- Keep the walkie talkies dry. Moisture can damage the electronic circuits.
- Do not expose to extreme temperatures (hot or cold).
- Avoid dropping or rough handling, as this can damage internal components.
- Clean the exterior with a soft, slightly damp cloth. Do not use harsh chemicals.
- Remove batteries if storing the device for more than 30 days to prevent battery leakage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity.
Cannot communicate with another unit	Units are on different channels/sub-channels or out of range.	Ensure both units are on the same main channel and sub-channel. Move closer to the other unit. Check for obstructions.
Sound is unclear or static	Interference, low battery, or out of range.	Change channel/sub-channel. Replace batteries. Move to an open area.
Short range	Obstructions (buildings, hills), weather conditions, or low battery.	Move to an open area. Ensure batteries are fresh.

9. SPECIFICATIONS

Feature	Detail
Model Number	T-388
Brand	SANJOIN
Number of Channels	22 Main Channels, 99 Sub-Channels (CTCSS)
Frequency Range	462.5625-462.7125 MHz
Talking Range Maximum	3 Kilometers (approx. 1.86 miles)
Power Source	4 x AAA Batteries (not included)
Product Dimensions	1 x 2.5 x 5.5 inches
Item Weight	7 ounces
Display Type	LCD
Water Resistance Level	Not Water Resistant
Certifications	FCC, CE, RoHS

10. WARRANTY AND SUPPORT

SANJOIN provides a 90-day no-reason return or exchange warranty for this product. For any questions, concerns, or support needs, please contact SANJOIN customer service through your purchase platform or refer to the contact information provided with your product packaging.

We are committed to providing safe and reliable support, ensuring your ultimate shopping experience.