

[Manuals.plus](#) /

> [AceGamer](#) /

> AceGamer Wireless Controller for PS4 User Manual

AceGamer V2 Gamepad Joystick

AceGamer Wireless Controller User Manual

Model: V2 Gamepad Joystick

Brand: AceGamer

INTRODUCTION

This manual provides comprehensive instructions for the AceGamer Wireless Controller, designed for use with PS4, PS4 Pro, PS4 Slim, and Windows PC. Featuring a unique white crack custom design with vibrant RGB lighting, a 1000mAh battery, and a 3.5mm audio jack, this controller offers an enhanced gaming experience with precise control and ergonomic comfort.

PACKAGE CONTENTS

- 1x AceGamer RGB Wireless Controller for PS4
- 1x USB Type-C Charging Cable
- 1x User Manual

PRODUCT OVERVIEW

Familiarize yourself with the controller's layout and features:



Figure 1: Front and rear view of the AceGamer Wireless Controller with key components labeled for easy identification.

- **D-pad:** Directional pad for navigation.
- **Left Joystick:** Primary movement control.
- **Right Joystick:** Camera and aiming control.
- **Action Buttons (Triangle, Circle, Cross, Square):** Game-specific actions.
- **Share Button:** For sharing gameplay content.
- **Options Button:** Accessing in-game menus.
- **Light Bar:** Displays controller status and RGB lighting.
- **RB/LB (R1/L1):** Shoulder buttons.
- **RT/LT (R2/L2):** Trigger buttons with pressure sensitivity.
- **3.5mm Headphone Port:** For audio output and microphone input.
- **USB Charging Jack:** Type-C port for charging and initial wired connection.

SETUP

Initial Pairing (PS4/PS4 Pro/PS4 Slim)

For the first-time connection, the controller must be activated with a USB cable for initial pairing. After this initial setup, normal wireless Bluetooth connection can be made without the USB cable.

1. Connect the AceGamer Wireless Controller to your PS4 console using the included USB Type-C cable.
2. Press the HOME button on the controller. The LED indicator will flash white for approximately 2 seconds to indicate the connection state.
3. Wait for over 3 seconds. The LED indicator will change color to indicate a successful connection.

Connecting to Windows PC

To connect the controller to a Windows PC wirelessly, a Bluetooth receiver is required (not included). Ensure your PC has Bluetooth capabilities or an external Bluetooth adapter.



Figure 2: The controller's wide compatibility with various gaming platforms.

OPERATING INSTRUCTIONS

RGB Light Mode Change

The controller features customizable RGB lighting that glows through the white crack design.

- To switch between light modes (colorful light, breath light, flashing light, and light off), press the **Right Joystick** and **Share** buttons simultaneously.
- To adjust brightness, press the **Right Joystick** and move the **Left Joystick** up or down.



Figure 3: Demonstration of the controller's seven light colors and four light modes.

Turbo Function

The controller supports a Turbo function for rapid button presses.

- To activate Turbo, hold down the **Share** button and press the desired **Action Button** (e.g., Triangle, Circle, Cross, Square) or **Trigger Button** (R1, L1, R2, L2).
- To deactivate Turbo for a specific button, repeat the process.

Vibration Feedback and 6-Axis Gyro Sensor

Experience immersive gameplay with dual motor vibration and precise motion control.

- The built-in dual motors provide excellent dual shock effects, enhancing tactile feedback during gameplay.
- The 6-axis gyro sensor allows for smoother and more precise control, responding to your movements.



Figure 4: Visualizing the vibration feedback feature for an authentic gaming experience.

SENSITIVE 6-AXIS SOMATOSENSORY

Smoother & Faster



Figure 5: The 6-axis somatosensory feature provides smoother and faster control.

Official Product Video

Video 1: An official product video showcasing the AceGamer RGB OLED Wireless Controller for PS4, highlighting its design and features.

CHARGING AND BATTERY LIFE

The controller is equipped with a high-capacity battery for extended gameplay.

- Built-in 1000mAh battery provides over 10 hours of playing time with RGB OLED lit mode.
- Fully charges in approximately 3 hours using the included USB Type-C fast charging cable.



Figure 6: The controller's 1000mAh battery being charged via USB-C.

MAINTENANCE

To ensure the longevity and optimal performance of your AceGamer Wireless Controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the controller regularly. For stubborn dirt, slightly dampen the cloth with water or a mild electronic cleaner. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and excessive humidity.
- **Battery Care:** Avoid completely draining the battery frequently. For long-term storage, charge the controller to about 50% to prolong battery life.
- **Cable Management:** Handle the charging cable carefully. Avoid bending or twisting it excessively, especially near the connectors, to prevent damage.

TROUBLESHOOTING

If you encounter issues with your AceGamer Wireless Controller, refer to the following common solutions:

Problem	Possible Cause	Solution
Controller does not connect wirelessly.	Not initially paired via USB; Bluetooth interference; low battery.	Perform initial USB pairing. Ensure no strong interference sources. Charge the controller fully.
RGB lights are not working or dim.	Light mode is off; brightness is set too low; low battery.	Press Right Joystick + Share to cycle modes. Adjust brightness with Right Joystick + Left Joystick. Charge the controller.
Controller not recognized by PC.	Missing Bluetooth receiver; driver issues.	Ensure a Bluetooth receiver is installed. Check PC device manager for driver updates.
Short battery life.	RGB lights constantly on; frequent vibration.	Reduce RGB brightness or turn off lights. Limit vibration intensity if possible in game settings.

SPECIFICATIONS

Feature	Detail
Model	V2 Gamepad Joystick
Compatibility	PS4, PS4 Pro, PS4 Slim, Windows PC
Battery Capacity	1000mAh Lithium Ion (included)
Charging Time	Approx. 3 hours
Play Time (RGB lit mode)	Over 10 hours
Connectivity	Wireless (Bluetooth), Wired (USB Type-C)
Audio Jack	3.5mm
Dimensions	3.9 x 5.9 x 1.9 inches
Item Weight	11.3 ounces
Manufacturer	AceGamer
Country of Origin	China

WARRANTY AND SUPPORT

AceGamer is committed to providing high-quality products and professional after-sales service. If you have any questions, concerns, or require assistance with your controller, please do not hesitate to contact our customer support team.

- **Customer Service:** Please refer to the contact information provided on the product packaging or the official AceGamer website for support.
- **Warranty:** Information regarding product warranty is typically included with your purchase documentation. Please retain your proof of purchase for warranty claims.

