

## HTC AT-206A

# HTC AT-206A Rechargeable Hair Trimmer User Manual

Model: AT-206A

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using this appliance. Keep this manual for future reference.

- This appliance is intended for household use only.
- Do not immerse the appliance in water or other liquids.
- Keep the appliance away from water sources, especially when charging.
- Do not use the appliance if the cord or plug is damaged. Contact customer support for repair.
- Always ensure the appliance is switched off before cleaning or performing maintenance.
- Keep out of reach of children. This appliance is not a toy.
- Avoid contact with moving parts.
- Do not use the trimmer on irritated skin or open wounds.
- Only use the charging adapter supplied with the appliance.

## 2. PRODUCT OVERVIEW

---

The HTC AT-206A is a rechargeable hair trimmer designed for precise grooming tasks such as edging, outlining, dry shaving, and light shaping around areas like the neck, ears, and sideburns.



Image 2.1: HTC AT-206A Trimmer and its retail packaging, showing the device and included accessories.

### Components:

- Trimmer Unit (HTC AT-206A)
- Charging Cable
- Cleaning Brush
- Lubricating Oil Bottle
- Comb Attachment



Image 2.2: The HTC AT-206A trimmer displayed with its charging cable, cleaning brush, oil bottle, and comb attachment.

## 3. SETUP AND CHARGING

---

### 3.1 Initial Charging

1. Before first use, fully charge the trimmer for approximately 8-10 hours.
2. Ensure the trimmer is switched off.
3. Connect the charging cable to the trimmer's charging port.
4. Plug the adapter into a suitable electrical outlet.
5. The charging indicator light (if present) will illuminate to show charging is in progress.
6. Once fully charged, disconnect the charger from the outlet and the trimmer.

### 3.2 Attaching the Comb Attachment

1. Ensure the trimmer is switched off.
2. Align the comb attachment with the trimmer blade.
3. Gently push the comb attachment onto the blade until it clicks into place.
4. To remove, gently pull the comb attachment away from the blade.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Basic Operation

1. Ensure the trimmer is charged.
2. Press the power button to turn the trimmer on.
3. Press the power button again to turn the trimmer off.



Image 4.1: The HTC AT-206A trimmer held in hand, demonstrating its ergonomic design for ease of use.

### 4.2 Trimming Techniques

- For best results, use the trimmer on clean, dry hair.
- Hold the trimmer at a slight angle against the skin.
- Move the trimmer slowly and steadily against the direction of hair growth.
- Use the comb attachment for longer hair lengths (0.5mm-13mm).
- For edging and outlining, use the trimmer without the comb attachment for a closer trim.
- Stretch the skin taut with your free hand to ensure a smooth surface for trimming.

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will ensure optimal performance and extend the life of your trimmer.

### 5.1 Cleaning the Blades

1. Ensure the trimmer is switched off and disconnected from the charger.
2. Use the provided cleaning brush to remove any loose hairs from the blades.
3. For a more thorough clean, you may carefully detach the blade head (refer to specific instructions if provided with your model for blade removal).
4. Do not rinse the entire trimmer under water unless explicitly stated as waterproof.

### 5.2 Oiling the Blades

1. After cleaning, apply 1-2 drops of the provided lubricating oil onto the blades.
2. Turn the trimmer on for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.
4. Oiling the blades regularly (e.g., after every few uses) helps maintain cutting efficiency and prevents rust.

### 5.3 Storage

Store the trimmer in a cool, dry place, away from direct sunlight and moisture. Ensure it is fully charged before storing for extended periods.

## 6. TROUBLESHOOTING

---

If you encounter any issues with your trimmer, refer to the following common problems and solutions:

- **Trimmer does not turn on:**  
Ensure the trimmer is fully charged. Check if the charging cable is properly connected and the power outlet is functional.
- **Poor trimming performance / pulling hair:**  
The blades may be dull or clogged with hair. Clean and oil the blades as described in the Maintenance section. Ensure the trimmer is adequately charged.
- **Battery not holding charge:**  
Ensure the trimmer is charged for the recommended duration. If the issue persists, the battery may need replacement. Contact customer support.
- **Excessive noise or vibration:**  
The blades might be misaligned or require oiling. Clean and oil the blades. If the problem continues, discontinue use and contact customer support.

7. SPECIFICATIONS


Feature	Specification
Model Number	AT-206A (SA-144)
Power Source	Rechargeable Battery
Blade Material	Stainless Steel (Metal)
Cutting Length Range	0.5mm - 13mm (with comb attachment)
Dimensions (L x W x H)	18.7 x 4.9 x 11.2 cm
Recommended Uses	Dry Shaving, Edging, Light Shaping, Outlining (Neck, Ears, Sideburns, Face)
Color	Black
Manufacturer	CHINA

8. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. Please refer to the product packaging or contact your retailer for specific warranty terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact the retailer or manufacturer directly. Keep your proof of purchase for any warranty-related inquiries.

Related Documents - AT-206A

<div><p>Hydration Reminder Talking Coaster with Voice Clock</p><p>Model: HTC</p><p>A smart, stylish coaster designed to support your daily hydration and wellness with precision and style. 100% waterproof and easy to use.</p><p>Key Features:</p><ul style="list-style-type: none"><li>• 100% waterproof, perfect for bathroom use</li><li>• Features a large, easy-to-read digital display</li><li>• Includes a built-in voice clock and hydration reminders</li><li>• Compact and stylish design, fits perfectly on your coaster</li></ul><p>How to Use:</p><ul style="list-style-type: none"><li>• Simply place your glass on the coaster and the hydration reminder will start counting down</li><li>• Press the power button to turn the device on or off</li><li>• Press the volume buttons to adjust the volume</li><li>• Press the timer button to set the timer</li><li>• Press the voice button to activate the voice clock</li></ul><p>Notes:</p><ul style="list-style-type: none"><li>• Please do not use the device in the shower or bathtub</li><li>• Please do not use the device in the pool or hot tub</li><li>• Please do not use the device in the car</li><li>• Please do not use the device in the rain</li></ul></div>	<p><a href="#">Hydration Reminder Talking Coaster with Voice Clock User Manual</a></p> <p>Comprehensive user guide for the HTC Hydration Reminder Talking Coaster with Voice Clock, covering setup, button functions, hydration tracking, customization, alarms, timers, and troubleshooting.</p>
<div><p>HTC True Wireless Earbuds 1</p><p>Quick Start Guide</p><p>Model: HTC TWS2</p></div>	<p><a href="#">HTC True Wireless Earbuds 1 (Model HTC TWS2) - Quick Start Guide</a></p> <p>Quick start guide for HTC True Wireless Earbuds 1 (Model HTC TWS2), covering setup, pairing, troubleshooting, controls, specifications, and authenticity verification.</p>

