

[Manuals.plus](#) /

› [BAOK](#) /

› BAOK Steam Cleaner Machine BAOKm1h3reyo0w-11 User Manual

BAOK BAOKm1h3reyo0w-11

BAOK Steam Cleaner Machine BAOKm1h3reyo0w-11 User Manual

Model: BAOKm1h3reyo0w-11

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before operating your BAOK Steam Cleaner Machine. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is equipped with multiple safety protection devices, including temperature limit power outage, leakage, and overbreak protection, to ensure safe operation and prevent boiler explosion.
- Always ensure the steam cleaner is unplugged and cool before filling the water tank or attaching/detaching accessories.
- Keep the appliance out of reach of children and pets.
- Do not direct steam at people, animals, or electrical appliances. Steam is extremely hot and can cause severe burns.
- Use only clean tap water in the tank. Distilled water is recommended to minimize mineral buildup.
- Never immerse the steam cleaner unit in water or other liquids.
- Do not operate the appliance if the power cord or plug is damaged. Contact customer support for repairs.
- Unplug the appliance when not in use and before performing any maintenance or cleaning.
- Use only BAOK approved accessories and attachments.

2. PRODUCT OVERVIEW

The BAOK Steam Cleaner Machine is a high-efficiency cleaning device designed for various household and automotive applications. It utilizes high-temperature steam to effectively clean oil, stains, and dust without the need for harsh chemicals.



Image Description: A white BAKO handheld steam cleaner machine with a pointed nozzle attached, shown from a slight angle. The power cord is visible at the bottom right.

2.1 Key Features

- **High Efficiency:** 1000W power, maximum steam pressure of 3 bar, and steam temperature of 100°C (212°F) for effective cleaning.
- **Safe to Use:** Multiple safety protection devices including temperature limit power outage, leakage, and overbreak protection.
- **Easy to Clean:** Built-in premium inner liner allows for adding cleaning solutions (must be cleaned promptly after each use).
- **Multiple Nozzles:** Versatile attachments for various cleaning tasks.
- **Wide Application:** Suitable for kitchens, corners, cars, bathrooms, floors, sofas, and windows.

2.2 Included Components

The following components are included with your BAKO Steam Cleaner Machine:



Image Description: A flat lay image showing all included accessories for the BAKO steam cleaner. These include a funnel, measuring cup,

scrubbing brush, flexible telescopic pipe nozzle, round cleaning brush, cloth, two rubber sealing parts, a user manual, the steam cleaner unit, a bent nozzle, a pointed nozzle, and a glass scraper.

- 1 x Steam Cleaner Unit
- 1 x Funnel
- 1 x Measuring Cup
- 1 x Scrubbing Brush
- 1 x Flexible Telescopic Pipe Nozzle
- 1 x Round Cleaning Brush
- 1 x Cloth
- 2 x Rubber Sealing Parts
- 1 x User Manual (this document)
- 1 x Bent Nozzle
- 1 x Pointed Nozzle
- 1 x Glass Scraper

3. SETUP INSTRUCTIONS

Follow these steps to set up your BAOK Steam Cleaner for first use or after storage.

1. **Unpack:** Carefully remove all components from the packaging. Verify that all items listed in Section 2.2 are present and undamaged.
2. **Fill Water Tank:**
 - Ensure the steam cleaner is unplugged and completely cool.
 - Unscrew the safety cap counter-clockwise until it can be removed.
 - Using the provided measuring cup and funnel, carefully fill the water tank with up to 0.35L of clean tap water. Do not overfill past the maximum fill line.
 - If desired, a small amount of cleaning solution or detergent can be added to the water. Refer to Section 5 for important cleaning instructions after using solutions.
 - Securely screw the safety cap back on clockwise until it is tight. This is a safety feature to prevent accidental opening during operation.
3. **Attach Nozzle:** Select the appropriate nozzle for your cleaning task and firmly attach it to the steam outlet at the front of the unit. Ensure it clicks into place or is securely fastened.



Image Description: A close-up view of the BAOK steam cleaner with a nozzle being attached to the front steam outlet. The nozzle is grey and ribbed, designed for focused steam delivery.

4. **Power Connection:** Plug the power cord into a standard 110V US electrical outlet. Ensure the outlet is properly grounded.

4. OPERATING INSTRUCTIONS

Once the steam cleaner is set up, follow these steps for effective cleaning.

1. **Preheating:** After plugging in, the power indicator light will illuminate, signaling that the unit is preheating. Preheating typically takes approximately 3 minutes. The light will turn off or change color when the unit is ready to produce steam (refer to specific model indicator if available).
2. **Steam Generation:** Once the unit is preheated, press and hold the steam trigger button located on the handle to release steam. Initial steam may be accompanied by a few drops of water; this is normal.



Image Description: A close-up of the handle of the BAOK steam cleaner, showing the steam trigger button (red) and the safety lock switch (grey) labeled 'OFF' and 'LOCK'.

3. **Safety Lock:** For continuous steam operation, engage the safety lock switch (slide it to the 'LOCK' position). To stop steam, disengage the safety lock (slide to 'OFF') and release the trigger.
4. **Cleaning:** Direct the steam nozzle towards the surface to be cleaned. Move the nozzle slowly over the area to allow the high-temperature steam to penetrate and loosen dirt, grease, and grime. For stubborn stains, use the appropriate brush attachment and apply gentle scrubbing action.



Image Description: The BAKO steam cleaner being used to clean a grey fabric car seat. Steam is visibly emanating from the nozzle, indicating active cleaning.



Image Description: A collage demonstrating various applications of the BAKO steam cleaner, including cleaning kitchen surfaces, car wheels, sofas, and windows using different nozzles like the extension tube, bent spray nozzle, round brush nozzle, general spray nozzle, long spray nozzle, and spray nozzle for window/door.

5. **Refilling:** If the steam output decreases significantly or stops, the water tank may be empty. Unplug the unit, allow it to cool for at least 5-10 minutes, and then carefully refill the tank as described in Section 3.2. Never attempt to refill a hot or pressurized unit.
6. **Finishing:** After cleaning, release the steam trigger, unplug the unit from the electrical outlet, and allow it to cool completely before storing.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your BAOK Steam Cleaner. Always ensure the unit is unplugged and cool before performing any maintenance.

- **Empty and Clean Tank:** After each use, especially if cleaning solutions were added, empty any remaining water and thoroughly clean the inner liner of the tank. This prevents residue buildup and ensures efficient operation. Rinse the tank with clean water.
- **Clean Nozzles and Attachments:** Remove and clean all nozzles and attachments after use. Rinse them with water to remove any dirt or debris. Ensure they are dry before storing. Use a small brush if necessary to clear any blockages.
- **Descaling (Periodically):** Depending on water hardness, mineral deposits may build up inside the tank and heating element. Periodically descale the unit using a descaling solution suitable for steam cleaners, following the product's instructions. Alternatively, a mixture of white vinegar and water can be used (consult manufacturer guidelines), followed by thorough rinsing with clean water.
- **Exterior Cleaning:** Wipe the exterior of the steam cleaner with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the unit is completely dry before storage.

6. TROUBLESHOOTING

If you encounter issues with your BAOK Steam Cleaner, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; Unit not fully preheated; Nozzle blocked; Mineral buildup.	Refill water tank; Wait for preheating indicator to signal readiness; Clean nozzle thoroughly; Descale the unit as per Section 5.
Water leaking from nozzle	Nozzle not securely attached; Overfilled water tank; Unit not fully preheated (initial water drops are normal).	Ensure nozzle is firmly attached; Do not overfill the water tank; Allow unit to fully preheat before use.
Power indicator not lighting up	Unit not plugged in; Power outlet malfunction; Internal fault.	Check power connection and ensure plug is fully inserted; Test outlet with another appliance; If problem persists, contact customer support.
Steam is not hot enough	Unit not fully preheated; Mineral buildup affecting heating element.	Allow sufficient time for preheating; Descale the unit.

If the problem persists after attempting these solutions, please contact customer support.

7. PRODUCT SPECIFICATIONS

Detailed technical specifications for the BAOK Steam Cleaner Machine.

- **Model:** BAOKm1h3reyo0w-11

- **Brand:** BAOK
- **Maximum Efficiency:** 1000W
- **Frequency:** 50-60Hz
- **Maximum Steam Pressure:** 3 bar
- **Steam Volume:** 25-30g per minute
- **Steam Temperature:** 100°C (212°F)
- **Preheating Time:** Approximately 3 minutes
- **Full Tank Cleaning Area:** Approximately 20-30m²
- **Full Tank Duration:** Approximately 10 minutes
- **Tank Capacity:** 0.35L
- **Protection Rating:** IPX4
- **Safety Features:** Equipped with Safety Valve, Safety Button, Overheat Protection
- **Power Plug:** US Plug 110V
- **Package Dimensions:** 9.84 x 8.66 x 8.27 inches
- **Date First Available:** July 14, 2023

8. WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support inquiries regarding your BAOK Steam Cleaner Machine, please refer to the purchase documentation provided at the time of sale or contact the retailer where the product was purchased. Specific warranty terms and conditions may vary by region and retailer.

Please have your model number (BAOKm1h3reyo0w-11) and date of purchase available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CBVGJWD7>

More documents and user manuals: <https://manuals.plus/>