

Manuals.plus /
› GENGQIANSI /
› GENGQIANSI Replacement Remote Control for Danby Air Conditioner UYKQ-100B DPA100E5WDB-6 DPA100HE5BDB-6 Instruction Manual

GENGQIANSI A520230716C03

GENGQIANSI Replacement Remote Control Instruction
Manual

Model: A520230716C03

1. INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your GENGQIANSI Replacement Remote Control. This remote is designed to be compatible with various Danby Air Conditioner models, including UYKQ-100B, DPA100E5WDB-6, and DPA100HE5BDB-6. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The GENGQIANSI Replacement Remote Control offers an ergonomic design for comfortable handling and intuitive button layout for easy control of your air conditioner. It features a clear display for temperature and mode settings.



Figure 2.1: Front view of the GENGQIANSI Replacement Remote Control. This image displays the remote's ergonomic shape, the digital screen showing '84 °F' and a snowflake icon, and all primary control buttons including Power, Mode, Temperature Adjustment, Fan Speed, Timer, and Temperature Unit selection.

3. SETUP

3.1 Battery Installation

The remote control requires two AAA 1.5V batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA 1.5V batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.







Figure 3.1: Back view of the remote control. This image shows the rear of the remote, highlighting the battery compartment cover and a label with important usage notes.

3.2 Initial Use

No programming is needed for this replacement remote control. Once batteries are installed, it is ready for use with compatible Danby Air Conditioner models.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions:

- **Power Button** (⏻): Press to turn the air conditioner ON or OFF.
- **Mode Button** (🌀): Cycles through available operating modes such as Cool, Fan, Dry, and potentially Heat (depending on your AC unit's capabilities).
- **Temperature Adjustment Buttons** (⬆️ / ⬆️): Use the up arrow to increase the temperature and the down arrow to decrease it.
- **Fan Speed Button** (🌀): Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Timer Button** (🕒): Sets the timer for automatic ON/OFF operations. Refer to your air conditioner's manual for specific timer settings.
- **Swing/Direction Button** (Central two squares icon): Controls the air swing function or adjusts the louver direction.
- **Temperature Unit Button** (°F/°C): Toggles the temperature display between Fahrenheit (°F) and Celsius (°C).
- **Child Lock**: To activate the child lock, press the Temperature Up (⬆️) and Temperature Down (⬆️) buttons simultaneously.

5. MAINTENANCE

5.1 Battery Replacement

Replace batteries when the remote control's display becomes dim or its range decreases. Always replace both batteries at the same time with new AAA 1.5V batteries. Do not mix old and new batteries or different types of batteries.

5.2 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these may damage the remote's surface or internal components.

5.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

6. TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are correctly installed with the correct polarity.
- Replace old batteries with new AAA 1.5V batteries.
- Ensure there are no obstructions between the remote control and the air conditioner's receiver.
- Confirm the remote is pointed directly at the air conditioner.

- **Display is dim or blank:**

- This usually indicates low battery power. Replace the batteries.

- **Limited operating range:**

- Ensure batteries are fresh.
 - Verify no strong light sources (like direct sunlight) are interfering with the signal.

7. SPECIFICATIONS

Brand	GENGQIANSI
Model Number	A520230716C03
Compatible Devices	Danby Air Conditioner (UYKQ-100B, DPA100E5WDB-6, DPA100HE5BDB-6)
Controller Type	Button Control
Number of Buttons	7
Battery Type	AAA 1.5V (2 required)
Maximum Range	10 meters
Special Feature	Ergonomic Design

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This GENGQIANSI Replacement Remote Control comes with a **1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

8.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact your retailer or the manufacturer directly. Please have your purchase receipt and product model number (A520230716C03) available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CBVMGNWM>

More documents and user manuals: <https://manuals.plus/>