

[manuals.plus](#) /› [TCL](#) /› [TCL S332W 2.1 Channel Soundbar with Wired Subwoofer User Manual](#)

TCL S332W

TCL S332W 2.1 Channel Soundbar with Wired Subwoofer User Manual

INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your TCL S332W 2.1 Channel Soundbar with Wired Subwoofer. Please read this guide thoroughly before using the product to ensure proper functionality and to maximize your audio experience. Keep this manual for future reference.

WHAT'S IN THE BOX

Carefully unpack all components and ensure you have received the following items:

- 1 x Soundbar
- 1 x Wired Subwoofer
- 1 x AC Power Cable
- 1 x HDMI Cable
- 1 x Remote Control (with 2 AAA batteries included)
- 1 x Quick Start Guide
- 1 x User Manual (this document)
- 1 x Warranty Card

PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your TCL S332W Soundbar system.



An image showing the TCL S332W soundbar and its wired subwoofer, accompanied by icons highlighting key features such as 200W Max Audio Output, Wired Subwoofer, Bluetooth connectivity, Remote Control, HDMI with ARC, and Specialized Sound Modes.

Soundbar Controls and Indicators

The soundbar features integrated controls for power, volume, and input selection, typically located on the side or top panel. LED indicators provide feedback on the current input source and status.

Rear Panel Connections

The rear panel of the soundbar provides various input ports for connecting to your television and other audio sources.



The TCL S332W soundbar and its subwoofer positioned below a television, with a cable illustrating the HDMI ARC connection from the soundbar to the TV. This setup simplifies audio connection.

Available ports include HDMI (ARC), Coaxial, AUX, and USB.

SETUP

Placement

- Place the soundbar on a stable, flat surface directly in front of your television. Ensure it does not block the TV's remote sensor.
- Position the wired subwoofer on the floor near the soundbar. The wired connection ensures stable bass performance.

Connecting to Your TV

Choose one of the following connection methods:

1. HDMI (ARC) - Recommended:

Connect one end of the provided HDMI cable to the HDMI (ARC) port on your soundbar and the other

end to the HDMI (ARC) port on your TV. This allows audio to be sent from the TV to the soundbar and enables control of the soundbar with your TV remote (if supported by your TV).

2. **Coaxial Input:**

Connect a coaxial audio cable (not included) from the Coaxial Out port on your TV to the Coaxial In port on the soundbar.

3. **AUX Input:**

Connect a 3.5mm audio cable (not included) from the Headphone Out or Audio Out port on your TV to the AUX In port on the soundbar.

Connecting Other Devices

- **USB Input:**

Insert a USB drive containing audio files into the USB port on the soundbar to play music directly.

Power Connection

Connect the AC power cable to the soundbar's power input and then to a wall outlet. Connect the subwoofer's power cable to a wall outlet. The soundbar will enter standby mode.

OPERATING INSTRUCTIONS

Power On/Off

- Press the **Power** button on the remote control or on the soundbar to turn the unit on or off.

Input Source Selection

- Press the **Input** button on the remote control or on the soundbar repeatedly to cycle through available input sources: HDMI (ARC), Bluetooth, Coaxial, AUX, and USB. The LED indicator on the soundbar will change to reflect the selected input.

Bluetooth Pairing

To stream audio wirelessly from a Bluetooth device:

1. Turn on the soundbar and select the Bluetooth input source. The Bluetooth indicator will flash, indicating it is in pairing mode.
2. On your mobile device, enable Bluetooth and search for available devices. Select "TCL S332W" from the list.
3. Once paired, the Bluetooth indicator on the soundbar will stop flashing and remain solid. You can now play audio from your device through the soundbar.



A smartphone displaying a music player interface, wirelessly connected via Bluetooth to the TCL S332W soundbar, which is placed below a TV. This demonstrates wireless music streaming capability.

Sound Modes

The TCL S332W offers specialized sound modes to optimize your listening experience for different content types.



The TCL S332W soundbar and subwoofer are shown with three distinct icons representing available sound modes: Music Mode, Movie Mode, and TV Mode, indicating optimized audio experiences for different content types.

- Use the dedicated buttons on the remote control to switch between **Music Mode**, **Movie Mode**, and **TV Mode**.
- Each mode adjusts audio settings to enhance dialogue, bass, or overall clarity depending on the content.

MAINTENANCE

To ensure the longevity and optimal performance of your soundbar system, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surfaces of the soundbar and subwoofer. Do not use liquid cleaners, abrasive materials, or solvents, as these can damage the finish.
- **Ventilation:** Ensure that the ventilation openings on the soundbar and subwoofer are not blocked. Proper airflow prevents overheating.
- **Environment:** Avoid placing the unit in direct sunlight, near heat sources, or in areas with high humidity or excessive dust.
- **Power:** Disconnect the power cable from the wall outlet if the unit will not be used for an extended period.

TROUBLESHOOTING

If you encounter issues with your TCL S332W Soundbar, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected; Wall outlet not active	Ensure power cables are securely connected to the soundbar, subwoofer, and a working wall outlet.
No sound	Incorrect input source; Volume too low; Mute activated; Incorrect TV audio settings	Select the correct input source. Increase volume. Deactivate mute. Check TV audio output settings (e.g., set to PCM or External Speaker).
Bluetooth pairing fails	Soundbar not in pairing mode; Device too far; Interference	Ensure soundbar is in Bluetooth pairing mode (flashing LED). Move device closer. Avoid other wireless devices. Try unpairing and re-pairing.
Remote control not working	Batteries depleted; Obstruction; Incorrect aiming	Replace batteries (2 AAA). Remove any obstructions between remote and soundbar. Aim remote directly at the soundbar's sensor.

SPECIFICATIONS

Detailed technical specifications for the TCL S332W Soundbar system:

Feature	Description
Model Name	S332W
Speaker Type	Soundbar with Wired Subwoofer
Channels	2.1 Channel

Feature	Description
Maximum Audio Output	200 Watts
Connectivity Technology	Bluetooth, HDMI (ARC), Coaxial, AUX, USB
Control Method	Remote Control
Sound Modes	Music, Movie, TV
Soundbar Dimensions (W x D x H)	71 cm x 8.8 cm x 7 cm
Subwoofer Dimensions (W x D x H)	22 cm x 12 cm x 39.7 cm
Item Weight	9.5 Kilograms
Power Source	AC
Included Batteries	2 AAA (for remote control)



A diagram illustrating the physical dimensions of the TCL S332W soundbar and its wired subwoofer. The soundbar measures

71 cm in width, 8.8 cm in depth, and 7 cm in height. The subwoofer measures 22 cm in width, 12 cm in depth, and 39.7 cm in height.

WARRANTY AND SUPPORT

Warranty Information

The TCL S332W Soundbar comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your purchase receipt as proof of purchase for any warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact TCL customer support. Refer to the warranty card or the official TCL website for the most current contact information and support resources in your region.

Manufacturer: TCL Overseas Marketing Ltd.

Importer: TTE Technology India Private Limited.