

Hisense MC60331IE

Hisense MC60331IE Combined Refrigerator User Manual

Model: MC60331IE

Overview	Setup	Operation	Safety Information	Product Maintenance	Product Troubleshooting	Specifications	Warranty & Support
----------	-------	-----------	--------------------	---------------------	-------------------------	----------------	--------------------

1. SAFETY INFORMATION

Please read this manual carefully before using your new Hisense refrigerator. Keep it for future reference.

- Electrical Safety:** Ensure the appliance is properly grounded. Do not use extension cords or adapters. Disconnect from power before cleaning or maintenance.
- Installation:** Install the appliance on a stable, level surface. Ensure adequate ventilation around the unit. Do not block ventilation openings.
- Flammable Materials:** Do not store explosive substances or flammable materials inside the appliance.
- Children Safety:** Keep children away from packaging materials. Supervise children to ensure they do not play with the appliance.
- Disposal:** Dispose of the appliance according to local regulations for refrigerants and flammable blowing gas.

2. PRODUCT OVERVIEW

The Hisense MC60331IE is a combined freestanding refrigerator designed for optimal food preservation and convenience. It features a sleek Inox finish and a total net capacity of 336 liters.

Hisense

FRIGORIFERO COMBINATO
MC60331IE



Dimensioni con supporto (L x P x A)

645×628×2079 mm

Dimensioni senza supporto (L x P x A)

595×590×2004 mm

Consumo energetico annuo stimato

247 kWh

Peso

64 kg

Front view of the Hisense MC60331IE Combined Refrigerator.

Key Features:

- Total No Frost:** Prevents ice build-up in both the refrigerator and freezer compartments, eliminating the need for manual defrosting.
- Multi Air Flow:** Ensures even distribution of cold air throughout the refrigerator, maintaining optimal temperature and humidity levels.
- Reversible Door:** Allows you to adjust the door opening direction to suit your kitchen layout.
- Moisture Fresh Crisper:** A dedicated drawer for fruits and vegetables with humidity control to keep produce fresh longer.
- Electronic Touch Control:** Easy-to-use interface for precise temperature management and function selection.
- Safety Glass Shelves:** Durable and easy-to-clean shelves for organized storage.
- Low Noise Operation:** Designed for quiet performance.



Porta Reversibile

E' possibile decidere da che parte far aprire la porta del frigo a seconda del layout della vostra cucina e della vostra preferenza.

Visual representation of the refrigerator's main features.

Components:

The refrigerator includes various compartments and accessories for efficient storage:

- Refrigerator compartment with adjustable shelves and door bins.
- Moisture Fresh Crisper drawer.
- Freezer compartment with Big Box drawer.
- LED lighting.
- Bottle rack (where applicable).



200.4cm

59cm

59.5cm

Interior layout showing shelves, drawers, and door storage.

3. SETUP AND INSTALLATION

Unpacking:

1. Remove all packaging materials, including protective films and tapes.
2. Check the appliance for any transport damage. Report any damage immediately to your retailer.
3. Keep packaging materials out of reach of children.

Placement:

- Place the refrigerator on a firm, level floor. Use the adjustable feet to stabilize the appliance.
- Ensure sufficient space around the refrigerator for proper ventilation (at least 10 cm at the back and sides).
- Avoid direct sunlight, heat sources, and damp environments.
- The reduced depth of less than 60 cm allows for perfect integration with your kitchen cabinetry.

Door Reversal:

The doors of the Hisense MC60331IE are reversible, allowing you to change the opening direction from right to left or vice-versa. This process requires specific tools and careful handling. Refer to the detailed diagrams in the full manual for step-by-step instructions. It is recommended to have this procedure performed by a qualified technician if you are unsure.



Moisture Fresh Crisper

Il cassetto crisper frutta e verdura è dotato del sistema di controllo dell'umidità che puoi regolare manualmente per creare l'ambiente ideale per il tuo cibo e preservarne la freschezza più a lungo.

Illustration of the reversible door feature, demonstrating how the door can open from either side.

First Use:

1. After placement, wait at least 4 hours before plugging in the appliance to allow the refrigerant to settle.
2. Clean the interior of the refrigerator with a damp cloth and mild detergent.
3. Plug the appliance into a dedicated power outlet.
4. Set the desired temperature using the electronic touch control. Allow the refrigerator to cool for several hours before loading food.

4. OPERATING INSTRUCTIONS

Electronic Touch Control:

The refrigerator features an intuitive electronic touch control panel for easy temperature adjustment and function activation. The interface is designed for clear visibility and simple operation.



The electronic touch control panel allows for precise temperature settings and function selection.

Temperature Settings:

- Press the temperature button on the control panel to cycle through available temperature settings for the refrigerator and freezer.
- Recommended refrigerator temperature: 4°C (39°F).
- Recommended freezer temperature: -18°C (0°F).

Special Functions:

- **Fast Freeze Function:** Activates rapid freezing to quickly preserve fresh food. Ideal for use after grocery shopping. Deactivates automatically after a set period or can be manually turned off.
- **Holiday Mode:** Sets the refrigerator to a higher temperature (e.g., 15°C) while the freezer maintains its set temperature. This saves energy when you are away for an extended period and the refrigerator compartment is empty.
- **Moisture Fresh Crisper:** This drawer features a manual humidity control slider. Adjust the slider to optimize humidity levels for fruits or vegetables, extending their freshness.



Rispetto per l'ambiente



The Moisture Fresh Crisper drawer helps maintain optimal humidity for fresh produce.

Multi Air Flow System:

The Multi Air Flow system ensures consistent cooling throughout the refrigerator compartment. Cold air is circulated evenly, preventing temperature fluctuations and keeping food fresh regardless of its placement.



Arrows indicate the Multi Air Flow system distributing cold air throughout the refrigerator.

5. MAINTENANCE AND CLEANING

Cleaning the Interior:

1. Unplug the refrigerator before cleaning.
2. Remove all food items and removable parts (shelves, drawers).
3. Wash interior surfaces with a solution of warm water and mild detergent. Rinse and dry thoroughly.
4. Clean removable parts in warm soapy water, rinse, and dry.
5. Do not use abrasive cleaners, harsh chemicals, or sharp objects.

Cleaning the Exterior:

- Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, use a mild detergent.
- Clean the door seals regularly to ensure a tight seal.
- Dust the condenser coils at the back of the appliance periodically (at least twice a year) to maintain energy efficiency. Unplug the appliance before cleaning the coils.

Total No Frost System:

This appliance features a Total No Frost system, which means manual defrosting of the freezer compartment is not required. The system automatically prevents ice build-up, ensuring consistent performance and reducing maintenance.



The Total No Frost feature eliminates ice accumulation, ensuring hassle-free maintenance.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power, power cord unplugged, circuit breaker tripped.	Check power supply, plug in securely, reset breaker.
Temperature is not cold enough.	Door not closed properly, excessive door opening, warm food placed inside, temperature setting too high.	Ensure door is sealed, reduce door openings, allow hot food to cool before storing, adjust temperature setting lower.
Unusual noises.	Appliance not level, objects vibrating against the unit, normal operating sounds (compressor, refrigerant flow).	Adjust leveling feet, move objects away, note that some sounds are normal.
Water on the floor.	Drain hole blocked, excessive humidity.	Clear the drain hole, ensure proper ventilation.

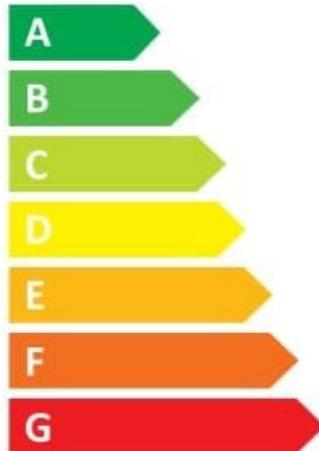
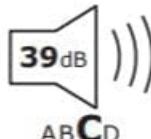
Problem	Possible Cause	Solution
Door open indicator.	Door left ajar.	Close the door completely.

7. SPECIFICATIONS

Feature	Detail
Model Number	MC60331IE
Brand	Hisense
Type	Combined Refrigerator, Freestanding
Color	Inox
Total Net Capacity	336 Liters
Refrigerator Capacity	238 Liters
Freezer Capacity	98 Liters
Dimensions (W x D x H)	59.5 x 59 x 200.4 cm
Weight	69 kg
Energy Efficiency Class	E
Annual Energy Consumption	247 kWh/annum
Noise Level	39 dB(A)
Defrost System	No Frost
Voltage	240 Volt

**ENERG⁺****HISENSE**

MC60331IE

**247 kWh/annum****98 L****238 L****ABC**

2019/2020

The energy label provides details on efficiency and consumption.

Scheda informativa del prodotto

REGOLAMENTO DELEGATO (UE) 2019/2016 DELLA COMMISSIONE

Nome o marchio del fornitore: HISENSE

Indirizzo del fornitore: Gorenje gospodinjski aparati, d.o.o., Partizanska cesta 12, 3320 Velenje, SI

Identificativo del modello: MC60331IE

Tipo di apparecchio di refrigerazione:

Apparecchio a bassa rumorosità:	No	Tipo di apparecchio:	a libera installazione
Frigorifero cantina:	No	Altro apparecchio di refrigerazione:	Si

Parametri generali del prodotto:

Parametro	Valore	Parametro	Valore	
Dimensioni complessive (millimetri)	Altezza	2 004	Volume totale (dm ³ o l)	336
	Larghezza	595		
	Profondità	590		
EEI	100	Classe di efficienza energetica	E	
Emissioni di rumore aereo (dB(A) re 1 pW)	39	Classe di emissione di rumore aereo	C	
Consumo annuo di energia (kWh/a)	247,47	Classe climatica	temperata estesa, temperata, subtropicale	
Temperatura ambiente minima (°C)	10	Temperatura ambiente massima (°C)	35	

per la quale l'apparecchio di refrigerazione è adatto	10	per la quale l'apparecchio di refrigerazione è adatto	38
Configurazione invernale	No		
Parametri degli scomparti:			
		Parametri e valori degli scomparti	
Tipo di scomparto	Volume dello scomparto (dm ³ o l)	Impostazioni di temperatura raccomandate per una conservazione ottimale degli alimenti (°C) Queste impostazioni non sono in contrasto con le condizioni di conservazione di cui all'allegato IV, tabella 3	Capacità di congelamento (kg/24 h)
Dispensa	No	-	-
Cantina	No	-	-

Pagina 1 / 2

Temperatura moderata	No	-	-	-	-				
Alimenti freschi	Si	238,0	4	-	A				
Raffreddamento	No	-	-	-	-				
0 stelle o produzione di ghiaccio	No	-	-	-	-				
1 stella	No	-	-	-	-				
2 stelle	No	-	-	-	-				
3 stelle	No	-	-	-	-				
4 stelle	Si	98,0	-18	6,0	A				
Sezione a 2 stelle	No	-	-	-	-				
Scomparto a temperatura variabile	-	-	-	-	-				
Per gli scomparti a 4 stelle									
Congelamento rapido		Si							
Parametri della sorgente luminosa:									
Tipo di sorgente luminosa		Tecnologia d'illuminazione: LED; Non direzionale o direzionale: -; A tensione di rete o non a tensione di rete: -; Sorgente luminosa connessa (CLS): No; Sorgente luminosa a colori variabili: No; Involucro: -; Sorgente luminosa ad alta luminanza: No; Schermo antiriflesso: No; Regolabile: -							
Classe di efficienza energetica		F							
Durata minima della garanzia offerta dal fabbricante: 24 mesi									
Informazioni supplementari:									
Link al sito web del fabbricante, che riporta le informazioni di cui all'allegato, punto 4, lettera a), del regolamento (UE) 2019/2019 della Commissione: http://global.hisense.com/									

Detailed product information and technical specifications.

8. WARRANTY AND SUPPORT

Warranty Information:

This Hisense refrigerator comes with a standard manufacturer's warranty. Please refer to the warranty card included in the product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support:

For technical assistance, spare parts, or service requests, please contact Hisense customer support. You can find contact details on the official Hisense website or in the warranty documentation provided with your appliance.

- **Online Support:** Visit the official Hisense website for FAQs, troubleshooting guides, and service request forms.
- **Telephone Support:** Contact the customer service hotline for direct assistance.