

Beko WTX 91232 XMCI2

Beko WTX 91232 XMCI2 9 Kg Washing Machine User Manual

Model: WTX 91232 XMCI2 | Brand: Beko

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Beko WTX 91232 XMCI2 9 Kg Washing Machine. Please read these instructions thoroughly before installation and use, and keep them for future reference. This appliance is designed for domestic use only.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the washing machine if the power cord or plug is damaged.
- Keep children and pets away from the appliance during operation.
- Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances.
- Never force the door open during a cycle.
- Unplug the appliance before cleaning or performing any maintenance.
- The appliance is equipped with a Child Lock feature for added safety. Refer to the operating section for activation.

3. SETUP AND INSTALLATION

3.1 Unpacking

Remove all packaging materials, including the polystyrene base and any protective films. Ensure all transit bolts at the rear of the machine are removed before use. Failure to remove transit bolts will cause severe vibration and damage.

3.2 Location and Leveling

Place the washing machine on a firm, level floor. Adjust the leveling feet until the machine is stable and does not wobble. Proper leveling reduces noise and vibration during operation.



Figure 1: Dimensions of the Beko WTX 91232 XMCI2 washing machine. The appliance measures approximately 84 cm in height, 60 cm in width, and 64 cm in depth.

3.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure all connections are tight to prevent leaks. Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

3.4 Electrical Connection

Plug the washing machine into a grounded electrical outlet. The appliance operates on 230 Volts. Do not use extension cords or adapters. Ensure the power cord is not trapped or crushed.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine features a digital screen and push-button controls for easy program selection and setting adjustments.



Figure 2: Front view of the Beko WTX 91232 XMCI2 washing machine, highlighting the control panel with its digital display and program selector dial.

4.2 Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; the maximum capacity is 9 Kg. Ensure items are evenly distributed. Close the door firmly.

4.3 Detergent and Additives

Pull out the detergent drawer. Add appropriate amounts of detergent and fabric softener to their respective compartments. Refer to detergent packaging for dosage recommendations.

4.4 Program Selection

Turn the program selection dial to choose one of the 15 available programs. The digital screen will display the selected program and estimated cycle time. Programs include options like Cotton, Synthetics, Delicates, and a Steam function for enhanced cleaning and wrinkle reduction.

4.5 Starting a Cycle

Press the Start/Pause button to begin the selected wash cycle. The machine will automatically adjust water levels based on the load (Automatic water adjustment feature). The maximum spin speed is 1200 RPM.

4.6 Child Lock

To activate the Child Lock, press and hold the designated button (refer to control panel diagram in Figure 2 for exact button) for a few seconds until the indicator light illuminates. This prevents accidental changes to settings during operation.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

- Cleaning the Detergent Drawer:** Periodically remove and clean the detergent drawer to prevent residue buildup.
- Cleaning the Drum:** The stainless steel drum is designed for durability. Run a maintenance wash cycle (e.g., a hot wash without laundry) monthly to keep the drum clean.
- Cleaning the Filter:** Locate and clean the pump filter regularly (usually at the bottom front of the machine) to remove lint and small objects.
- Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.

6. TROUBLESHOOTING

Before contacting service, check the following common issues:

Problem	Possible Cause	Solution
Machine does not start	Power supply issue, door not closed, Start/Pause not pressed.	Check power plug, ensure door is latched, press Start/Pause.
Water not filling	Water tap closed, inlet hose kinked, water pressure low.	Open water tap, straighten hose, check household water supply.
Water not draining	Drain hose kinked, pump filter clogged.	Straighten drain hose, clean pump filter.
Excessive vibration/noise	Transit bolts not removed, machine not level, uneven load.	Ensure transit bolts are removed, adjust leveling feet, redistribute laundry.

If the problem persists after checking these points, please contact Beko customer service.

7. SPECIFICATIONS

Feature	Detail
Brand	Beko
Model	WTX 91232 XMCI2
Capacity	9 Kilograms
Max Spin Speed	1200 RPM
Programs	15 Standard Cycles (e.g., Cotton, Synthetics, Steam)
Motor Type	ProSmart Inverter Motor
Control Console	Push Button with Digital Screen
Access Location	Front Load
Cavity Material	Stainless Steel
Special Features	Child Lock, Inverter, Steam, Automatic Water Adjustment
Product Dimensions (D x W x H)	64 x 60 x 84 cm
Item Weight	71 Kilograms
Voltage	230 Volts
Noise Level	56 Decibels
Part Number	7149042600

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Beko washing machine comes with a **5 Years Manufacturer Warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal domestic use.

8.2 Customer Support

For technical assistance, spare parts, or warranty service, please contact Beko customer support. Contact details can typically be found on the Beko official website or your product registration documents.

When contacting support, please have your model number (WTX 91232 XMCI2) and serial number ready.