



WDH01

Generic WDH01 Adjustable Wooden Mannequin Display Hand Instruction Manual

Model: WDH01

INTRODUCTION

Thank you for choosing the Generic WDH01 Adjustable Wooden Mannequin Display Hand. This manual provides essential information for the proper assembly, operation, and maintenance of your display hand. Please read these instructions carefully before use to ensure optimal performance and longevity of the product.

SETUP AND ASSEMBLY

The WDH01 display hand comes in a few simple components for easy assembly. Follow these steps to set up your mannequin hand:

1. Carefully unpack all components: the wooden hand, the adjustable metal rod, and the base (square or round, depending on your model).
2. Insert the bottom end of the adjustable metal rod into the designated hole in the center of the base. Ensure it is seated firmly.
3. Place the wooden hand onto the top end of the adjustable metal rod. The hand should slide securely onto the rod.
4. Tighten any securing screws or knobs on the adjustable rod to fix the height as desired.
5. Adjust the fingers of the wooden hand to your preferred pose. The joints are designed for flexible movement.



Figure 1: Fully assembled Generic WDH01 wooden mannequin display hand with a golden square base, posed in an 'OK' gesture.

OPERATING INSTRUCTIONS

The WDH01 display hand is designed for versatile visual merchandising. Here are guidelines for its operation:

- **Adjusting Height:** Loosen the knob on the adjustable metal rod to slide the hand up or down. Once the desired height (between 17cm and 30cm) is reached, tighten the knob to secure it.
- **Posing the Hand:** The fingers are articulated and can be gently bent and positioned to hold various items or create specific gestures. Avoid excessive force to prevent damage to the joints.

- **Displaying Items:** The hand is suitable for displaying jewelry, watches, gloves, rings, and other small accessories. Ensure items are placed securely to prevent them from falling.





Figure 2: The mannequin hand demonstrating its ability to hold sunglasses.

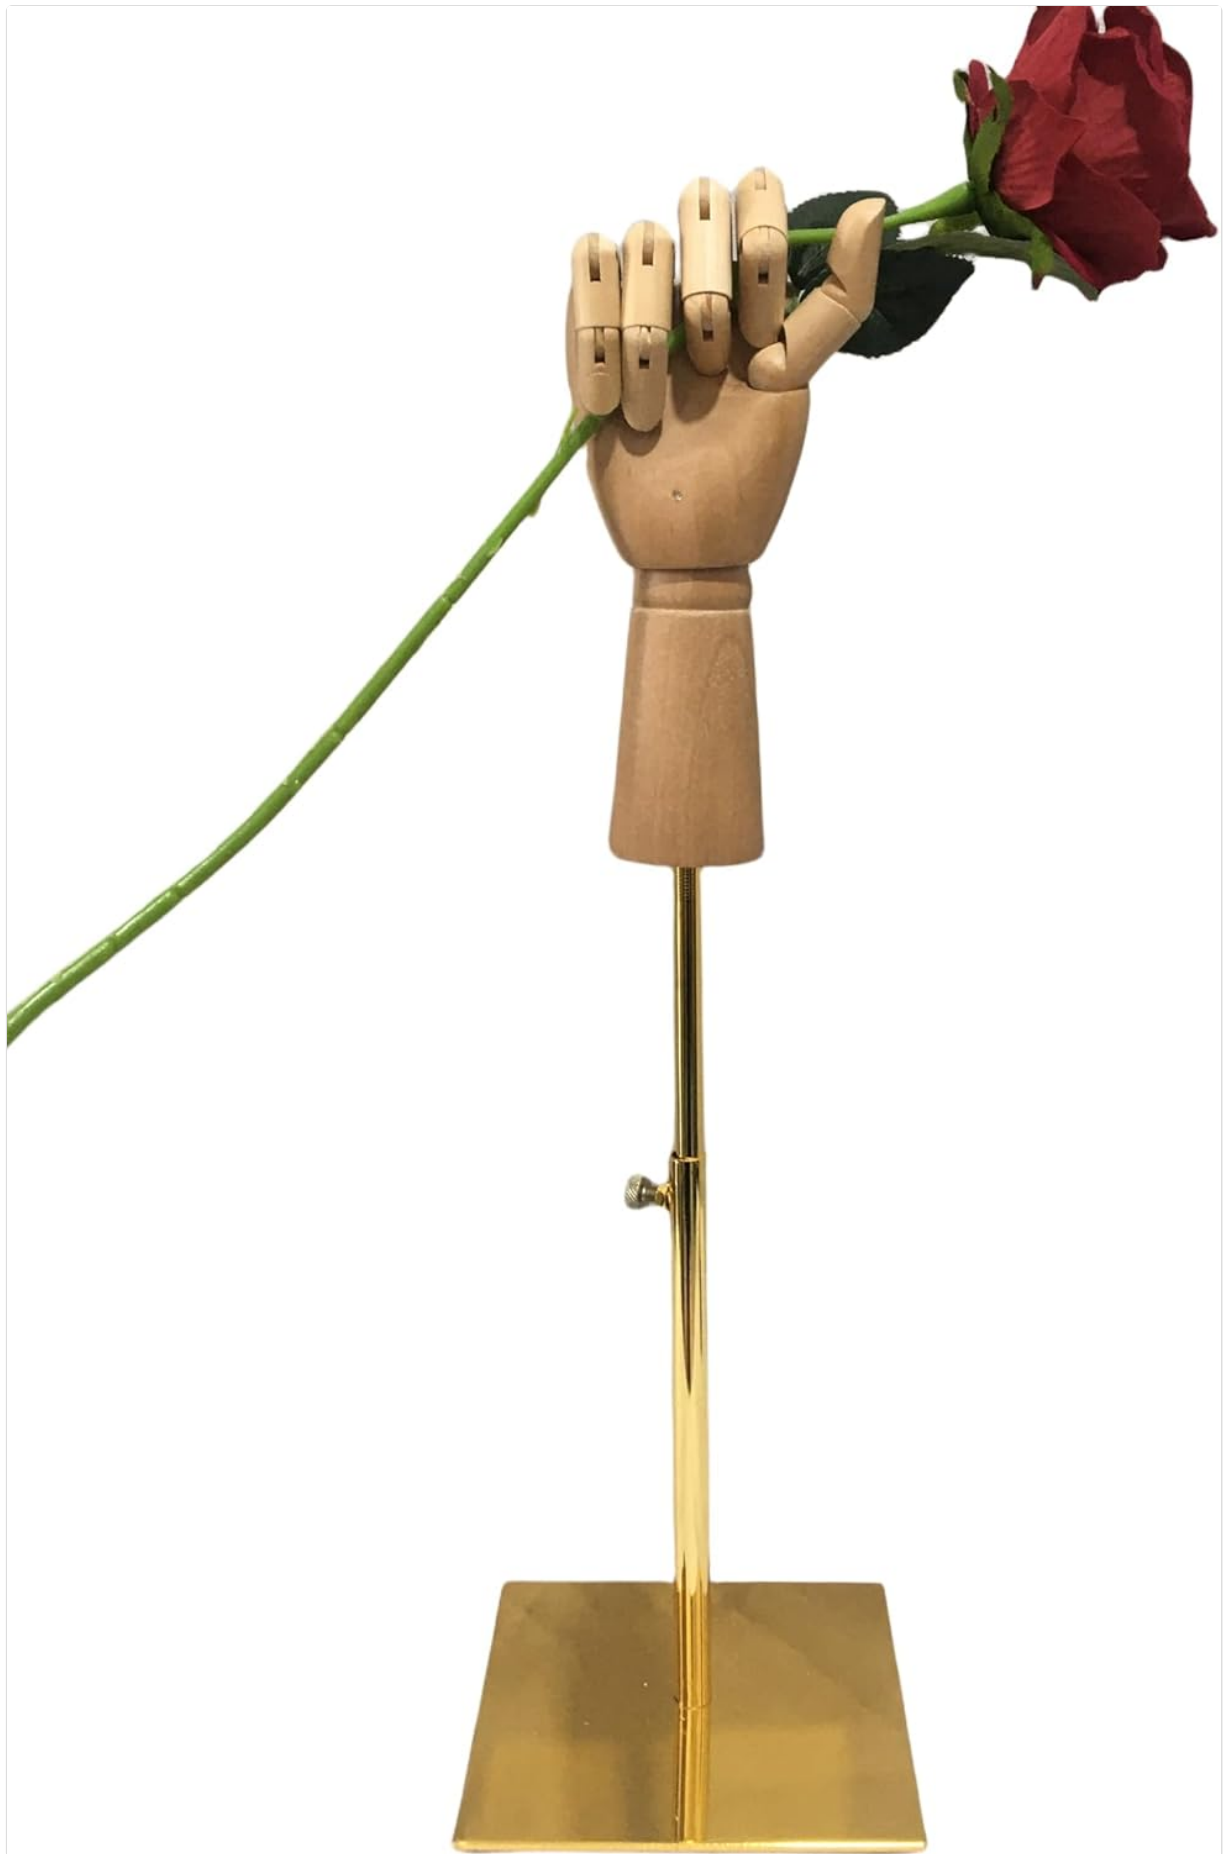


Figure 3: The mannequin hand holding a rose, illustrating its versatility for various display items.

Proper care will extend the life and appearance of your WDH01 display hand:

- **Cleaning:** Wipe the wooden hand and metal stand with a soft, dry cloth. For stubborn marks on the wood, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the display hand in a dry environment away from direct sunlight or extreme temperature changes to prevent warping or fading of the wood.
- **Joint Care:** The finger joints are designed to be flexible. If they become stiff, gently manipulate them. Do not apply oil or lubricants unless specifically recommended by the manufacturer.

TROUBLESHOOTING

If you encounter any issues with your WDH01 display hand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Hand feels loose on the rod.	Rod not fully inserted or securing knob is loose.	Ensure the rod is fully inserted into the hand and the base. Tighten the securing knob on the adjustable rod.
Difficulty adjusting height.	Securing knob is too tight or rod is stuck.	Loosen the securing knob completely. Gently twist and pull/push the rod. Do not force it.
Fingers are stiff or difficult to pose.	New product stiffness or dust accumulation.	Gently manipulate each joint to loosen it. Clean any visible dust from the joints.

SPECIFICATIONS

- **Model:** WDH01
- **Material:** Wood (hand), Metal (rod and base)
- **Hand Color:** Natural Wooden Color
- **Base Type:** Square (Golden Square Base variant)
- **Hand Size:** Approximately 11 inches (28 cm)
- **Adjustable Height Range:** 17 cm - 30 cm
- **Brand:** Generic

WARRANTY AND SUPPORT

Specific warranty information for the Generic WDH01 display hand is not provided in this manual. For any product support, inquiries, or to report defects, please contact the retailer or seller from whom you purchased the product. Please retain your proof of purchase for any warranty claims or support requests.