

VEEMI S760

VEEMI S760 Space Heater User Manual

Model: S760

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this heater and retain for future reference. Failure to follow these instructions may result in fire, electric shock, injury, or property damage.

- **Placement:** Always place the heater on a firm, level surface. Do not place on soft surfaces like beds or rugs where openings may be blocked.
- **Clearance:** Maintain a minimum distance of 3 feet (0.9 meters) from walls, furniture, curtains, and other combustible materials.
- **Power Source:** Connect the heater directly into a 120V AC, 60Hz wall outlet. Do not use with extension cords, power strips, or surge protectors.
- **Moisture:** Do not use the heater in wet or damp locations such as bathrooms, laundry areas, or near sinks. Never immerse the heater in water.
- **Supervision:** Close supervision is necessary when the heater is used by or near children or individuals with reduced physical, sensory, or mental capabilities.
- **Obstruction:** Do not insert any objects into the heater's ventilation or exhaust openings as this may cause electric shock, fire, or damage the heater.
- **Overheating:** This heater is equipped with overheat protection. If it overheats, it will automatically shut off. Unplug the heater, wait 30 minutes for it to cool, then plug it back in.
- **Tip-Over Protection:** The heater includes a safety switch that automatically turns off the unit if it is tipped over. Place the heater upright on a stable surface to resume operation.
- **Unplug When Not In Use:** Always unplug the heater when not in use or before cleaning.
- **Maintenance:** Refer to the maintenance section for cleaning instructions. Do not attempt to repair or disassemble the heater yourself.

PRODUCT OVERVIEW

The VEEMI S760 Space Heater is a compact and efficient ceramic heater designed for indoor use. It features a digital display, touch controls, and a remote for convenient operation.

Components

- **Control Panel:** Located on the top of the unit, with touch buttons and a digital display.
- **Air Outlet:** Front grille where warm air is expelled.
- **Air Inlet:** Rear grille for air intake.
- **Base:** Provides stability and allows for oscillation.
- **Power Cord:** For connecting to an electrical outlet.
- **Remote Control:** For convenient operation from a distance.



Image: The VEEMI S760 Space Heater, showing its sleek silver-black design and digital display.

SETUP

1. **Unpack:** Carefully remove the heater from its packaging. Retain packaging for storage if needed.
2. **Placement:** Place the heater on a stable, level, and heat-resistant surface. Ensure there are no obstructions within 3 feet (0.9 meters) of the front, back, and sides of the heater.
3. **Power Connection:** Plug the power cord directly into a grounded 120V AC, 60Hz electrical outlet. Ensure the outlet is in good condition and not overloaded.

OPERATING INSTRUCTIONS

The VEEMI S760 heater can be operated using the touch controls on the unit or the included remote control.

Control Panel Buttons:

- **Power Button ():** Turns the heater ON or OFF.
- **Mode Button (M):** Cycles through heating modes (High, Low, ECO).
- **Oscillation Button ():** Activates or deactivates the 70-degree oscillation function.
- **Timer Button ():** Sets the auto-off timer.
- **Temperature Up/Down Buttons (+/-):** Adjusts the target temperature.

Basic Operation:

1. **Power On/Off:** Press the Power button () once to turn the heater on. Press it again to turn it off.
2. **Selecting Heating Mode:** After turning on, press the Mode button (M) to cycle through High Heat (1500W), Low Heat, and ECO Mode. The selected mode will be displayed.
3. **Adjusting Temperature:** In High or Low heat mode, use the Temperature Up (+) or Down (-) buttons to set your desired temperature between 59°F and 95°F (15°C and 35°C). The heater will cycle on and off to maintain this temperature.
4. **ECO Mode:** In ECO mode, the heater automatically adjusts its power output (High or Low) to maintain the set temperature, aiming for energy efficiency. This mode can save up to 40% energy.

ECO Mode Maintain Constant Heat Level



Up to 40%*
energy savings



Image: The VEEMI S760 Space Heater demonstrating its ECO mode, which helps maintain a constant heat level and save energy.

5. **Oscillation Function:** Press the Oscillation button (🌀) to activate the 70-degree oscillation. The heater will rotate from side to side to distribute heat evenly. Press the button again to stop oscillation.



Image: The VEEMI S760 Space Heater oscillating 70 degrees to evenly distribute warm air throughout a room.

6. **Setting the Timer:** Press the Timer button () repeatedly to set the auto-off timer from 1 to 12 hours. The display will show the selected duration. The heater will automatically turn off after the set time expires.
7. **Temperature Unit Switching:** To switch between Celsius (°C) and Fahrenheit (°F), press and hold both the Temperature Up (+) and Down (-) buttons simultaneously for a few seconds.

Adjustable Thermostat

Set your favorite temperature from 59 to 95°F in 1-degree increments and change it as you like.



°C/°F Switching



*This feature is available only in ECO mode.

Image: The VEEMI S760 Space Heater illustrating its adjustable thermostat, allowing temperature settings from 59°F to 95°F and switching between °C/°F.

Fast Heating Feature:

The VEEMI S760 heater is designed for rapid heating, delivering warmth quickly to your space.

2S Fast Heating

Heats up in 2 seconds, Deliver speedy warmth at winter



Image: The VEEMI S760 Space Heater illustrating its 2-second fast heating capability, quickly warming a room.

Quiet Operation:

The heater operates at a low noise level, making it suitable for use in quiet environments like bedrooms or offices.



Image: The VEEMI S760 Space Heater shown in a bedroom setting, highlighting its quiet operation at 33dB for undisturbed sleep.

MAINTENANCE

Regular cleaning and proper maintenance will ensure the longevity and efficient operation of your heater.

1. **Before Cleaning:** Always turn off the heater and unplug it from the electrical outlet. Allow the heater to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces of the heater with a soft, damp cloth. Do not use abrasive cleaners, waxes, or polishes.
3. **Air Inlets/Outlets:** Use a vacuum cleaner with a brush attachment to remove dust and lint from the air inlet and outlet grilles. Do not allow water to enter the heater.
4. **Storage:** If storing the heater for an extended period, clean it thoroughly and place it back in its original packaging or

a protective cover. Store in a cool, dry place.

Warning: Never immerse the heater in water or allow water to drip into the interior of the heater.

TROUBLESHOOTING

If your heater is not operating correctly, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power to the unit. Tip-over switch activated. Overheat protection activated.	Ensure the power cord is securely plugged into a working outlet. Ensure the heater is on a flat, stable surface. Unplug, wait 30 minutes for cooling, then plug back in.
No heat output.	Temperature setting is too low. Air inlets/outlets are blocked.	Increase the target temperature setting. Check for and remove any obstructions. Clean grilles if dusty.
Oscillation not working.	Oscillation function not activated.	Press the Oscillation button (🌀) to activate.
Heater shuts off unexpectedly.	Overheat protection activated. Tip-over switch activated. Timer has expired.	Unplug, wait 30 minutes for cooling, then plug back in. Ensure the heater is on a flat, stable surface. Check the timer setting and reset if necessary.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	S760
Power Output	1500W (High Heat)
Voltage	120V AC, 60Hz
Heating Element	Ceramic
Oscillation Angle	70 Degrees
Timer Range	1-12 Hours
Temperature Range	59°F - 95°F (15°C - 35°C)
Noise Level	Approximately 33dB

Feature	Detail
Dimensions (L x W x H)	18.8 x 18.3 x 43 cm (approx. 7.4 x 7.2 x 16.9 inches)
Weight	2.07 kg (approx. 4.56 lbs)
Safety Features	Overheat Protection (122°F), Tip-Over Protection (45°), V-0 Flame Retardant Material, ETL Listed

Unbreakable Safety



V-0 Flame Retardant Material



122°F Overheat Protection



Tip-over Protection



ETL Listed



*Passed 5000h Durability Test.

Image: The VEEMI S760 Space Heater showcasing its comprehensive safety features, including V-0 flame retardant material, 122°F overheat protection, 45° tip-over protection, and ETL certification.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official VEEMI website. Please have your model number (S760) and purchase information ready when contacting support.

© 2023 VEEMI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question