

cotsoco M49OR

cotsoco M49OR Record Player User Manual

Model: M49OR

[Introduction](#) [Safety](#) [Contents](#) [Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your cotsoco M49OR Record Player. Please read it thoroughly before using the device and retain it for future reference.

The cotsoco M49OR is a versatile belt-driven record player featuring built-in stereo speakers, Bluetooth connectivity for wireless audio streaming, AUX-in for external audio sources, RCA line output for connecting to external amplifiers, and a headphone jack for private listening. It supports three playback speeds (33, 45, and 78 RPM) and three record sizes (7", 10", and 12").



Image: The cotsoco M49OR Record Player in its operational state.

2. IMPORTANT SAFETY INFORMATION

- **Power Source:** Use only the provided power adapter. Ensure the voltage matches your local power supply.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or liquids. Do not place objects filled with liquids, such as vases, on the apparatus.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings.
- **Heat:** Do not place near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Children:** Keep out of reach of children. Small parts may pose a choking hazard.

3. PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- cotsoco M49OR Record Player Turntable
- Power cable
- RCA cable
- Auxiliary cable

4. PRODUCT OVERVIEW

4.1 Front and Top Panel Components

VINTAGE LOOKING WITH MODERN TECHNOLOGY

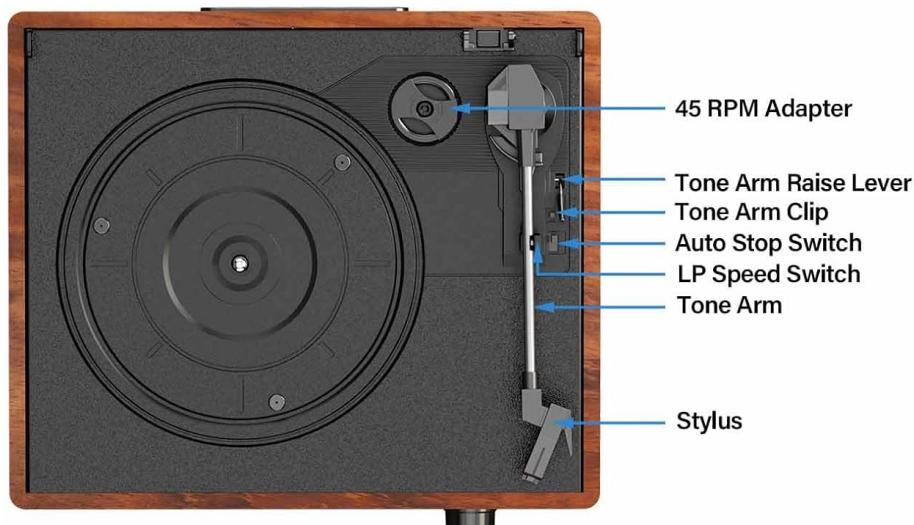


Image: Top view diagram of the record player with labeled components.

1. **45 RPM Adapter:** Used for playing 7-inch records with a large center hole.
2. **Tone Arm Raise Lever:** Lifts and lowers the tone arm.
3. **Tone Arm Clip:** Secures the tone arm when not in use.
4. **Auto Stop Switch:** Toggles the auto-stop function. When ON, the platter stops spinning automatically at the end of a record.
5. **LP Speed Switch:** Selects playback speed (33, 45, or 78 RPM).
6. **Tone Arm:** Holds the stylus and tracks the record grooves.
7. **Stylus:** The needle that reads the record grooves.
8. **Power/Volume Knob:** Turns the unit on/off and adjusts the volume.
9. **Headphone Jack:** Connects headphones for private listening.
10. **LED Light:** Indicates power status and Bluetooth pairing status.

4.2 Rear Panel Connections

Wireless Bluetooth Pairing

Turn on the AUTO STOP switch, the turntable stop spinning automatically, then turn on the power button to see the blue LED flashing, finally find the device :Turntable from your mobile to connect your phone to play your favorite music via Bluetooth.



Image: Rear view diagram of the record player with labeled connection ports.

11. **AUX In Jack:** Connects external audio devices (e.g., smartphones, MP3 players) via a 3.5mm auxiliary cable.
12. **RCA Output Jack:** Connects to external speakers or an amplifier using RCA cables.
13. **Power Adapter Port:** Connects the power cable to the unit.

5. SETUP

5.1 Placement

- Place the record player on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or vibrations.
- Ensure there is enough space around the unit for proper ventilation.

5.2 Power Connection

1. Connect the power adapter to the Power Adapter Port on the rear of the record player.
2. Plug the other end of the power adapter into a suitable wall outlet.

5.3 Dust Cover

The clear dust cover protects your vinyl records and the turntable components from dust. It can be easily opened and closed during operation.

6. OPERATING INSTRUCTIONS

6.1 Playing Vinyl Records



33/ 45/ 78 Speed

**ENJOY RETRO STYLE
MUSIC BY VINYL RECORDS**

Three speed Three size record player



7" 10" 12"

Image: The record player supports 7", 10", and 12" vinyl records.

- 1. Power On:** Turn the Power/Volume knob clockwise to power on the unit. The LED light will illuminate.
- 2. Select Speed:** Set the LP Speed Switch to the correct speed (33, 45, or 78 RPM) for your record. Use the 45 RPM adapter for 7-inch singles if needed.
- 3. Place Record:** Carefully place a vinyl record on the turntable platter.
- 4. Auto Stop:** Set the Auto Stop Switch to ON if you want the platter to stop spinning automatically at the end of the record. Set to OFF for continuous play or for some records that may trigger auto-stop prematurely.
- 5. Position Tone Arm:** Gently move the Tone Arm Raise Lever to lift the tone arm. Position the tone arm over the desired starting groove of the record.
- 6. Lower Tone Arm:** Slowly move the Tone Arm Raise Lever back to lower the tone arm onto the record. The music will begin to play.
- 7. Adjust Volume:** Rotate the Power/Volume knob to adjust the sound level.
- 8. Stop Playback:** At the end of the record (if auto-stop is ON) or when you wish to stop, gently lift the tone arm using the Tone Arm Raise Lever and return it to its rest. Secure it with the Tone Arm Clip.

6.2 Bluetooth Playback



Image: Bluetooth pairing with a mobile device.

1. **Power On:** Turn the Power/Volume knob clockwise to power on the unit. The LED light will flash blue, indicating it is in Bluetooth pairing mode.
2. **Enable Bluetooth:** On your smartphone, tablet, or other Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. **Pair:** Select "Turntable" from the list of devices. Once connected, the LED light on the record player will stop flashing and remain solid blue.
4. **Play Music:** You can now play music from your device through the record player's built-in speakers.
5. **Note:** The record player acts as a Bluetooth receiver. It cannot connect to external Bluetooth speakers or headphones.

6.3 AUX-in Connection

Connect external audio devices to the record player using the provided 3.5mm auxiliary cable.

1. **Connect Cable:** Plug one end of the auxiliary cable into the AUX In Jack on the rear of the record player and the other end into the headphone jack or audio output of your external device.
2. **Power On:** Turn on the record player and your external device.
3. **Play Audio:** Play audio from your external device. The sound will be routed through the record player's speakers.
4. **Adjust Volume:** Adjust the volume using the Power/Volume knob on the record player and/or the volume controls on your external device.

6.4 RCA Line Output

Connect the record player to external powered speakers or an amplifier for enhanced sound quality.

1. **Connect Cables:** Use the provided RCA cable to connect the RCA Output Jacks (Red for Right, White for Left) on the rear of the record player to the corresponding audio input jacks on your external amplifier or powered speakers.

2. **Power On:** Turn on the record player and your external audio system.
3. **Play Audio:** Play a record on the turntable. The audio will be output through your connected external system.
4. **Adjust Volume:** Adjust the volume using the controls on your external amplifier or powered speakers.

6.5 Headphone Listening

For private listening, connect standard headphones with a 3.5mm jack to the Headphone Jack on the front of the unit.

- When headphones are connected, audio will be muted from the built-in speakers.
- Adjust the volume using the Power/Volume knob.

7. MAINTENANCE

7.1 Cleaning the Unit

- Always unplug the record player from the power outlet before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

7.2 Cleaning the Stylus

- The stylus (needle) can accumulate dust and debris, affecting sound quality.
- Use a soft brush, specifically designed for stylus cleaning, and gently brush from back to front (in the direction of the stylus movement across the record).
- Avoid touching the stylus with your fingers.

7.3 Dust Cover Care

- Wipe the dust cover with a soft, damp cloth. Do not use harsh chemicals.
- Avoid scratching the dust cover, as this can impair visibility and appearance.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|--|--|
| No power | Power adapter not connected; Power outlet not active; Power/Volume knob is off. | Ensure power adapter is securely connected to the unit and a working outlet. Turn the Power/Volume knob clockwise to power on. |
| No sound from speakers | Volume too low; Headphones connected; RCA output connected to unpowered speakers. | Increase volume. Disconnect headphones. If using RCA out, ensure external speakers are powered and volume is up. |
| Record skipping | Dirty or scratched record; Stylus dirty or worn; Unit not on a stable surface. | Clean the record. Clean or replace the stylus. Place the unit on a stable, level surface. |
| Bluetooth not pairing | Bluetooth not enabled on device; Device too far; Already paired to another device. | Ensure Bluetooth is enabled on your device and within range. Forget previous pairings on your device and try again. |
| Poor sound quality from built-in speakers | Built-in speakers have limited output. | For enhanced audio, connect external powered speakers or an amplifier via the RCA output. |

9. SPECIFICATIONS

| Feature | Detail |
|---------|--------|
| | |

| Feature | Detail |
|--------------------------|--|
| Product Dimensions | 12.8 x 10.83 x 11.81 inches |
| Item Weight | 5.14 pounds |
| Model Number | M49OR |
| Brand | cotsoco |
| Maximum Rotational Speed | 78 RPM (Supports 33, 45, 78 RPM) |
| Included Components | Vinyl Record Player Turntable, Power cable, RCA cable, Auxiliary cable. |
| Special Features | Adjustable Speed, Built-in Speaker, Portable, Bluetooth Playback, AUX-in, RCA Out, Headphone Jack, Auto Stop |
| Material | Wood |
| Color | Orange |

10. WARRANTY AND SUPPORT


For warranty information and customer support, please refer to the documentation included with your purchase or visit the official cotsoco website. Keep your purchase receipt as proof of purchase.

Manufacturer: cotsoco

© 2023 cotsoco. All rights reserved.

Related Documents - M49OR

| | |
|---|---|
|  | <p>Cotsoco Kneading Massage Shawl Operation Manual Detailed operation manual for the Cotsoco Kneading Massage Shawl, providing instructions on product features, usage, safety precautions, and warranty information for optimal use and care.</p> |
|---|---|

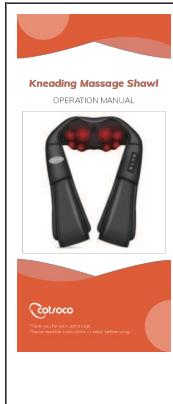

[Cotsoco Kneading Massage Shawl Operation Manual](#)

Detailed operation manual for the Cotsoco Kneading Massage Shawl, providing instructions on product features, usage, safety precautions, and warranty information for optimal use and care.