

AULCMEET 6711R1P104F

AULCMEET 6711R1P104F Replacement Remote Control for LG VCR/DVD Players Instruction Manual

Model: 6711R1P104F

1. INTRODUCTION

This document provides instructions for the AULCMEET 6711R1P104F Replacement Remote Control, designed for use with various LG VCR/DVD Player models. This remote control serves as a direct replacement for your original unit, offering full functionality without the need for complex programming.

1.1 Compatible Models

The 6711R1P104F remote control is compatible with the following LG VCR/DVD Player models:

- V271
- V280N-S
- V271-W1
- V280S-P1
- V280N-P2Z
- V180
- V160
- V280N-P1
- V280
- V281-W1
- V280N-P1Z
- V280N-P2
- V281-P3



Figure 1: Comparison between the replacement remote (left) and the original LG remote (right).

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside

the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.





Figure 2: Battery compartment open, illustrating correct battery placement.

3. OPERATION

3.1 Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Simply point the remote control towards your LG VCR/DVD Player and press the desired function button.

3.2 Key Functions Overview

The remote control features standard buttons for VCR and DVD player operation. Refer to the image below for a visual guide to the button layout.





Figure 3: Front view of the remote control with button layout.

- **POWER (VCR/DVD):** Turns the VCR/DVD player on or off.
- **TV POWER:** Turns the television on or off.
- **DVD / VCR:** Selects between DVD and VCR modes.
- **EJECT OPEN/CLOSE:** Opens or closes the disc tray.
- **Number Buttons (0-9):** For direct track selection or channel input.
- **VOL (+/-):** Adjusts volume.
- **CH / PR (+/-):** Changes channels or program numbers.
- **PLAY, PAUSE/STEP, STOP, BACKWARD, FORWARD, SKIP:** Standard media playback controls.
- **DISPLAY:** Shows on-screen information.
- **SETUP:** Accesses the system setup menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER/OK):** For menu navigation and selection.
- **DISC MENU:** Accesses the DVD disc menu.
- **RETURN:** Returns to the previous menu or screen.
- **AUDIO, SUBTITLE, ANGLE, ZOOM:** DVD playback options.
- **REC/ITR:** Initiates recording (VCR function).

- **PROGRAM:** Accesses programming functions.
- **CLEAR:** Clears input or selections.
- **REPEAT:** Repeats playback.
- **A-B:** Repeats a specific section.
- **RANDOM:** Plays tracks in random order.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface and buttons.

4.2 Battery Care

- Remove batteries if the remote control will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

If the remote control is not functioning as expected, consider the following:

- **No Response:**
 - Ensure the batteries are inserted correctly with the proper polarity (+/-).
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the VCR/DVD player's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the device.
- **Intermittent Operation:**
 - Weak batteries may cause intermittent functionality. Replace them.
 - Ensure the remote's infrared emitter is clean and unobstructed.
- **Specific Button Not Working:**
 - Verify that the button is relevant to the current mode (e.g., DVD functions will not work in VCR mode).
 - If the issue persists, the button may be physically damaged or stuck.

If troubleshooting steps do not resolve the issue, please contact customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	6711R1P104F
Brand	AULCMEET
Compatible Devices	LG VCR/DVD Players (specific models listed in Section 1.1)
Power Supply	2 x AAA Alkaline Batteries (not included)

Feature	Detail
Color	Black
Item Weight	2.39 ounces (approx. 67.7 grams)
Package Dimensions	7.48 x 1.97 x 0.98 inches (approx. 19 x 5 x 2.5 cm)

7. SUPPORT

For further assistance or if you have questions regarding your AULCMEET 6711R1P104F Replacement Remote Control, please contact the seller or manufacturer directly. Refer to your purchase documentation for specific contact details. Typically, support inquiries are addressed within 24 hours.



Documents - AULCMEET – 6711R1P104F

no relevant documents