

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [VIVOHOME](#) /

› [VIVOHOME 7.5 Quart 660W 6-Speed Tilt-Head Stand Mixer Instruction Manual](#)

VIVOHOME VH583

VIVOHOME 7.5 Quart 660W 6-Speed Tilt-Head Stand Mixer Instruction Manual

[Safety Instructions](#) [Product](#)

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the VIVOHOME Stand Mixer. Retain this manual for future reference.

- Always ensure the mixer is unplugged from the power outlet before assembling, disassembling, or cleaning.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving beaters during operation to prevent injury and/or damage to the mixer.
- Never operate the mixer with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors. This appliance is for household use only.
- Ensure the tilt-head is securely locked down before operation.
- Do not overload the mixer. Refer to the recipe and recommended capacities.

2. PRODUCT OVERVIEW

The VIVOHOME 7.5 Quart Stand Mixer is designed to simplify your baking and cooking tasks with its powerful motor and versatile attachments.

2.1 Components

- **Motor Unit:** The main body housing the 660W motor and speed controls.
- **7.5 Quart Stainless Steel Bowl:** Large capacity bowl for various mixing needs.

- **Dough Hook:** For kneading heavy mixtures like bread dough.
- **Mixing Beater:** For medium-heavy mixtures like cake batter, cookies, and mashed potatoes.
- **Wire Whip:** For light mixtures like egg whites, cream, and light batters.
- **Splash Guard:** Prevents ingredients from splashing out during mixing.
- **Tilt Lock Lever:** Secures the motor head in place during operation.
- **Speed Control Knob:** Adjusts mixing speed from 0 to 6, plus a pulse function.
- **Non-Slip Feet:** Suction cups on the base to ensure stability during operation.

2.2 Key Features

- **Powerful 660W Motor:** Ensures efficient mixing and kneading.
- **6-Speed Control with Pulse:** Offers precise control for various recipes.
- **Tilt-Head Design:** Allows for easy access to the bowl and attachments.
- **Planetary Mixing Action:** Ensures thorough and even mixing of ingredients.
- **Heat Dissipation System:** Improves cooling and extends motor life.

STAND MIXER FEATURES



Figure 1: Labeled components of the VIVOHOME Stand Mixer.

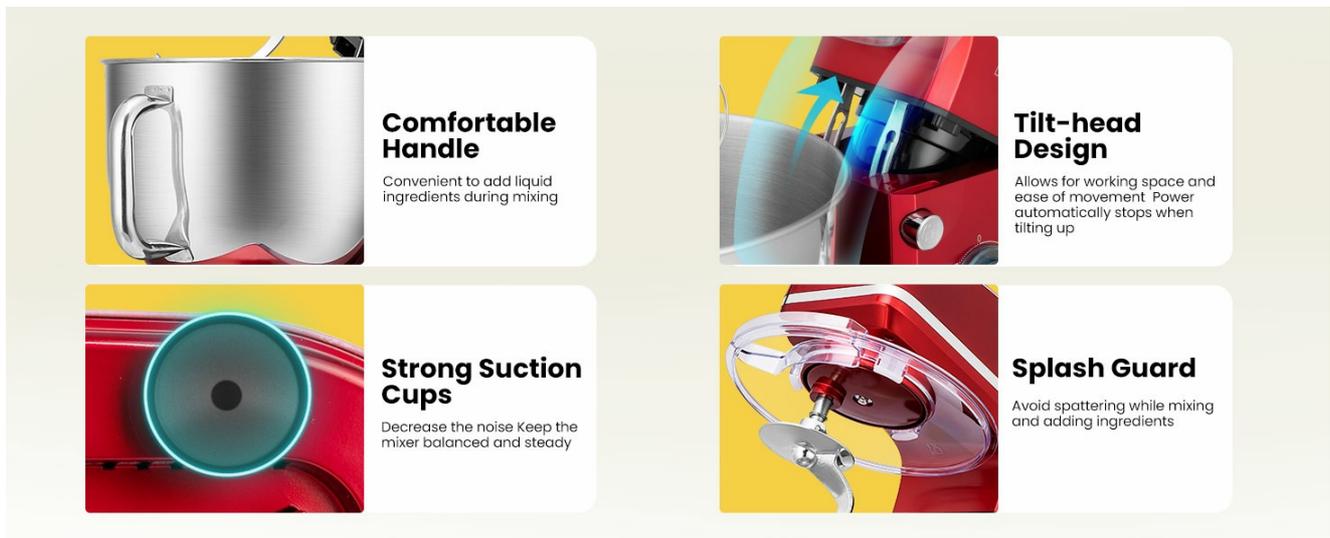


Figure 2: Illustration of the planetary mixing action for thorough ingredient incorporation.

3. SETUP

Follow these steps for initial setup and assembly of your VIVOHOME Stand Mixer.

1. **Unpack:** Carefully remove all components from the packaging. Remove any protective films or packaging materials.
2. **Clean:** Before first use, wash the mixing bowl, dough hook, mixing beater, wire whip, and splash guard in warm, soapy water. Rinse thoroughly and dry. The main motor unit should be wiped with a damp cloth.
3. **Position the Mixer:** Place the mixer on a clean, dry, and stable surface. Ensure the non-slip feet are securely attached to prevent movement during operation.
4. **Attach the Bowl:** Place the stainless steel mixing bowl onto the base of the mixer. Turn the bowl clockwise until it locks securely into position.
5. **Lift the Head:** Press the tilt lock lever (located on the side of the mixer) and lift the motor head until it clicks into the upright position.
6. **Install Attachment:** Select the desired attachment (dough hook, mixing beater, or wire whip). Insert the attachment into the shaft and turn it counter-clockwise until it locks into place.
7. **Lower the Head:** Press the tilt lock lever again and gently lower the motor head until it locks into the operating position.
8. **Attach Splash Guard:** If desired, attach the splash guard by aligning it with the mixer head and bowl, then securing it.



Figure 3: VIVOHOME Stand Mixer fully assembled on a kitchen counter.

Your browser does not support the video tag.

Video 1: This video demonstrates the assembly and basic operation of the VIVOHOME 7.5 Quart Stand Mixer, including attaching the bowl and accessories.

4. OPERATING INSTRUCTIONS

The VIVOHOME Stand Mixer offers various speeds and attachments for different mixing tasks.

4.1 Speed Control Guide

Use the speed control knob to select the desired speed. The 'P' setting is for pulse function, providing short bursts of power.

Speed Setting	Recommended Attachment	Application
1-2 (Low)	Dough Hook	Kneading heavy mixtures (e.g., bread dough, pizza dough).
3-4 (Medium)	Mixing Beater	Mixing medium-heavy mixtures (e.g., cake batter, cookie dough, mashed potatoes).
5-6 (High)	Wire Whip	Whipping light mixtures (e.g., egg whites, cream, light batters).
P (Pulse)	Any	Short bursts for quick mixing or combining ingredients.



7.5QT LARGE CAPACITY
For daily kitchen needs

6 Speed Control

6-speed mixer for all your food preparation needs

1-2 Speed
Kneading Dough

3-4 Speed
Mix Salad

5-6 Speed
Stir Eggs Or Cream

Figure 4: Speed control guide for various mixing tasks.



Strong Motor

660 W powerful motor finishes kneading and mixing quickly and thoroughly

Figure 5: Multipurpose mixing accessories and their uses.

4.2 Using the Tilt-Head Feature

The tilt-head design allows for easy attachment and removal of accessories and the mixing bowl. To lift the head, push the tilt lock lever towards the back of the mixer and gently lift the head until it locks into place. To lower, push the lever again and guide the head down until it clicks securely.



Figure 6: Tilt-head mechanism and other design features.

4.3 Smart Presets and Fermentation (if applicable to model)

Some VIVOHOME Stand Mixer models feature smart presets for specific tasks like kneading, whisking, stirring, and fermentation. Refer to your specific model's display for available presets and follow the on-screen instructions.

Your browser does not support the video tag.

Video 2: This video highlights the smart presets and built-in fermentation function of the VIVOHOME Stand Mixer, demonstrating its ease of use for various baking needs.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your mixer.

5.1 Cleaning the Mixer

- **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not use abrasive cleaners or immerse in water.
- **Mixing Bowl:** The stainless steel mixing bowl is dishwasher safe. For manual cleaning, wash with warm, soapy water and dry thoroughly.
- **Attachments (Dough Hook, Mixing Beater, Wire Whip):** These attachments are **NOT** dishwasher safe. Hand wash them immediately after use with warm, soapy water and dry completely to prevent corrosion.
- **Splash Guard:** Hand wash with warm, soapy water.

5.2 Storage

Store the mixer in a dry place, away from direct sunlight and heat. Ensure all attachments are clean and dry before storing. You can store the attachments inside the mixing bowl for convenience.

6. TROUBLESHOOTING

If you encounter any issues with your VIVOHOME Stand Mixer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not start.	Not plugged in; power outlet issue; tilt-head not locked.	Ensure the power cord is securely plugged in. Check the power outlet. Make sure the tilt-head is fully lowered and locked.
Attachments do not reach the bottom of the bowl.	Attachment not fully inserted or bowl not properly seated.	Ensure the attachment is correctly installed and turned to lock. Verify the mixing bowl is securely twisted into the base.
Mixer is unusually loud or vibrates excessively.	Overloaded; uneven surface; heavy mixture at high speed.	Reduce the amount of ingredients. Place the mixer on a flat, stable surface. For very heavy dough, use lower speeds.
Ingredients are not mixing evenly.	Incorrect attachment or speed for the mixture.	Refer to the 'Speed Control Guide' to ensure the correct attachment and speed are being used for your recipe.

7. SPECIFICATIONS

Feature	Detail
Brand	VIVOHOME
Model Name	Stand Mixer

Feature	Detail
Item Model Number	VH583-RE
Color	Red
Capacity	7.5 Quarts
Wattage	660 Watts
Voltage	120V
Controls Type	Knob
Special Feature	Manual
Product Dimensions	18"D x 8.8"W x 15.2"H
Item Weight	13.2 Pounds
Material	ABS, Steel, Aluminum
Dishwasher Safe	No (Attachments are hand wash only)

8. WARRANTY AND SUPPORT

VIVOHOME products are designed for durability and performance. For specific warranty information, please refer to the warranty card included with your product or visit the official VIVOHOME website.

8.1 Customer Support

If you have any questions, require technical assistance, or need to report a problem with your VIVOHOME Stand Mixer, please contact VIVOHOME customer support through their official channels. Contact information can typically be found on the product packaging or the VIVOHOME website.

Online Support: [Visit the VIVOHOME Store on Amazon](#)