


Wahl Motiva

Wahl Motiva Cordless Pet Trimmer

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Wahl Motiva Cordless Pet Trimmer. This device is designed for detailed grooming of small areas on pets, such as the head, paws, and face. Its quiet operation and cordless design ensure a comfortable experience for both you and your pet. Please read this manual carefully before use to ensure proper operation and maintenance.

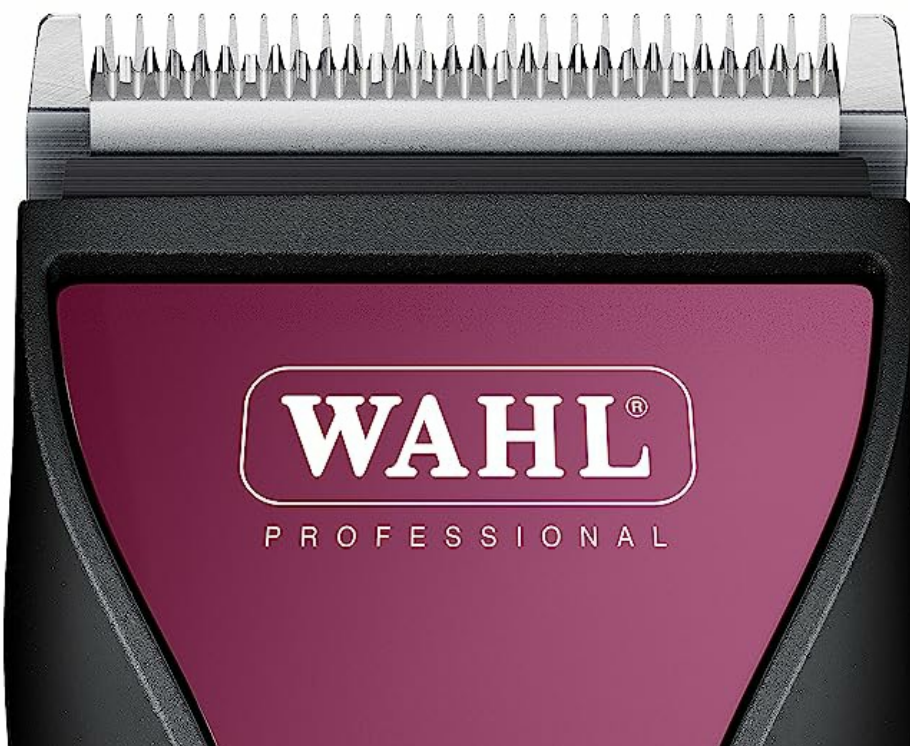

motiva

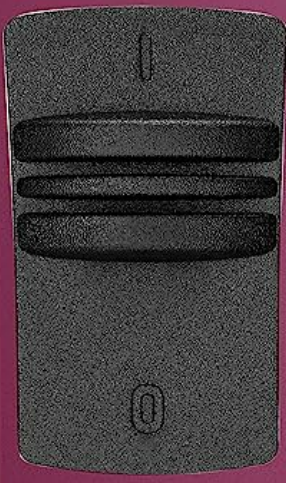




Image: The Wahl Motiva Cordless Pet Trimmer, showcasing its ergonomic design and golden finish. This trimmer is ideal for precise grooming tasks.

2. SAFETY INSTRUCTIONS

- Use the trimmer only for its intended purpose: detailed grooming of small areas on pets (head, paws, face).
- Do not immerse the trimmer in water or other liquids.
- Keep the device away from children and pets when not in use.
- Ensure the blades are sharp and clean before each use to prevent pulling or discomfort.
- Always unplug the trimmer before cleaning or performing maintenance.
- Do not operate the trimmer if it has a damaged cord or plug, or if it is not working properly.
- Only use accessories and replacement parts recommended by Wahl.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Wahl Motiva Cordless Pet Trimmer
- Charging cable/adaptor
- Blade set (chrome-plated diamond-ground stainless steel)
- 2 Metal attachment combs
- Cleaning brush
- Blade oil
- Instruction Manual

4. SETUP

1. **Unpacking:** Carefully remove the trimmer and all accessories from the packaging. Retain the packaging for future storage or transport.

2. **Initial Charge:** Before first use, fully charge the trimmer's battery. Connect the charging cable to the trimmer and plug the adapter into a suitable power outlet. The battery provides up to 120 minutes of cordless operation. The trimmer can also be used with the cord while charging.
3. **Blade Inspection:** Ensure the stainless steel blades are clean and properly aligned. The quick-change blade system allows for easy removal and attachment.
4. **Attaching Combs:** If desired, select one of the two metal attachment combs and slide it onto the blade set until it clicks securely into place.

5. OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button to turn the trimmer on. Press it again to turn it off.
2. **Grooming Technique:**
 - Hold the trimmer firmly and at a slight angle against the pet's fur.
 - Always trim in the direction of hair growth for a smoother finish and to prevent irritation.
 - For sensitive areas like the face and paws, use extra caution and gentle strokes.
 - The trimmer's quiet and low-vibration operation helps keep pets calm during grooming.
3. **Corded/Cordless Use:** The Motiva trimmer can be used wirelessly for maximum flexibility or plugged in for continuous operation if the battery is low.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your trimmer.

1. **Cleaning Blades:** After each use, turn off and unplug the trimmer. Use the provided cleaning brush to remove any loose hair from the blades. The quick-change system allows for easy blade removal for thorough cleaning.
2. **Lubrication:** Apply a few drops of Wahl blade oil to the blades after each cleaning. Turn the trimmer on for a few seconds to distribute the oil evenly. This reduces friction, keeps blades sharp, and prevents rust.
3. **Storage:** Store the trimmer in a clean, dry place, away from extreme temperatures and direct sunlight. Ensure the battery is charged before storing for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is discharged.	Charge the battery fully.
Blades pull hair or cut poorly.	Blades are dull, dirty, or not lubricated.	Clean and oil the blades. If dull, consider replacing the blade set.
Trimmer runs slowly.	Low battery or excessive hair buildup.	Charge the battery. Clean the blades thoroughly.
Excessive vibration or noise.	Blades are not properly aligned or secured.	Check blade alignment and ensure they are securely attached.

8. SPECIFICATIONS

- **Model Name:** Motiva
- **Product Dimensions:** 5.1 x 4.8 x 17.8 cm
- **Product Weight:** 275 Grams
- **Power Source:** Battery operated (cordless and corded use)
- **Battery Life:** Up to 120 minutes
- **Blade Material:** Chrome-plated diamond-ground stainless steel
- **Special Feature:** Rechargeable, Quick-change blade system, Low vibration, Quiet operation
- **Color:** Golden
- **ASIN:** B0CC1ZRQTM
- **Manufacturer Reference:** 1877-0471
- **GTIN:** 04015110035787

9. WARRANTY AND SUPPORT

Wahl products are manufactured to the highest quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Wahl website. For technical support or service, please contact Wahl customer service through their official channels.